

ROBO TEAM™



Back Draft™ B8168



Clamp Down™ B8169



Back Hoe™ B8167

Each sold separately and subject to availability.

Please keep this instruction sheet for future reference,
as it contains important information.

Each requires three (LR44) button cell batteries (included).


Adult assembly is required.

Tool needed for battery replacement:
Phillips screwdriver (not included).


Fisher-Price®

www.rescueheroes.com


CLAMP DOWN™

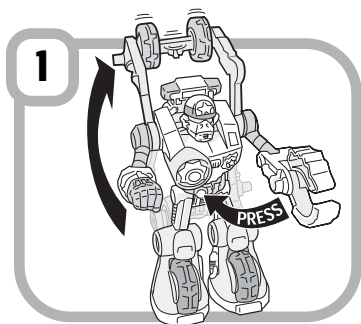

- Press the button for exciting lights and sounds
- Rotate the secondary wheels from the back of the robot to the front.

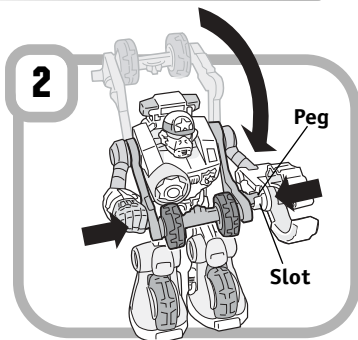

- Fit the pegs on the sides of each wheel into the matching slots in the cuffs and the robot's hand.

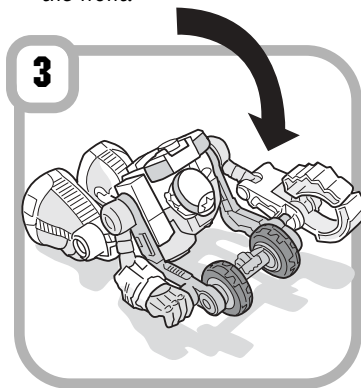

- Raise the secondary wheels over the robot's head, then place the robot face down on all four wheels. You're ready to roll!

⚠ CAUTION

- Do not aim at eyes or face.
- Only use projectile supplied with these toys.
- Do not launch at people or animals.


BACK DRAFT™

1



- Press the button on the front of the robot for sounds and lights
- Press the button on the robot's arm to launch the "water" bomb


2

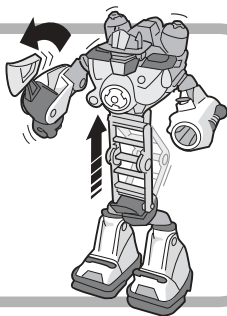

- Grasp the top of the robot and lift to extend his ladder and his reach
- The robot's hand pivots into an axe


BACK HOE™

1

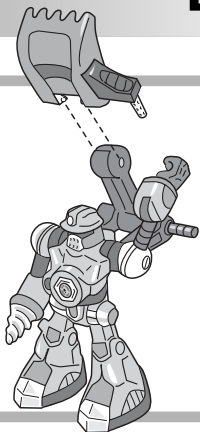

- Slide and "snap" the shovel onto the end of the tool arm as shown.

2

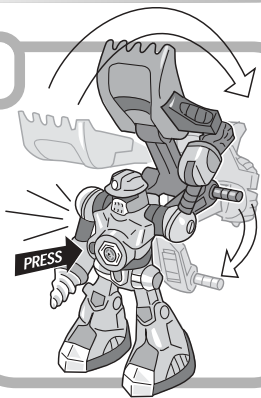

- Flip the shovel over the robot's shoulder to scoop away debris

CARE

- Wipe the toy with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the toy.

FCC NOTE (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:
Fisher-Price® Consumer Relations, 636 Girard Avenue,
East Aurora, New York 14052.

For countries outside the United States: **Canada: Questions? 1-800-567-7724.**

Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: Mattel UK Ltd. Vanwall Business Park, Maidenhead SL6 4UB, Helpline: 01628 500302.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.


New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.

©2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

BATTERY REPLACEMENT

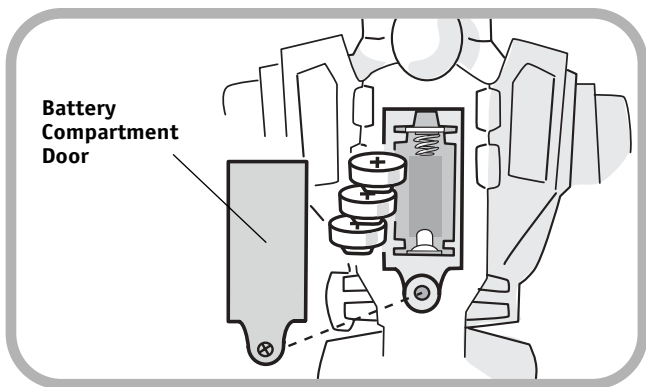

- Locate the battery compartment door on the back of each figure.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Remove and throw away the exhausted batteries.
- Insert three, new, button cell (LR44) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds or lights become faint or stop, it's time for an adult to change the batteries!

BATTERY SAFETY INFORMATION

**For best results, use only alkaline batteries,
for longer battery life.**



1.5V x 3 LR44 or Equivalent

SHOWN ACTUAL SIZE

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated on the battery compartment door.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.