## **Troubleshooting**

If no lights or music are heard, check the following:

 
- 1. The power is turned **ON.**
- 2. The hat is fitted **snugly** and tightly, facing forward with crown up on the doll's head.
- 3. The bib is lined up to the **front** of the doll, and is **flat** against the doll's body. The jeweled side is to the front.
- 4. Bottle must be **fully** inserted into doll's mouth for best lighting.



Press doll's left hand for a variety of doll's sounds and light features.



## Tiara for you to wear!



5



The glitter solution in the bottle is SAFETY TESTED.

ADULT NOTE: All sounds come from the doll. Clothes and accessories are for doll only. They are not intended for real infan or child use. Cut the plastic attachments with scissors and discard the pieces.

REG. NO. PA-9618(HK). ALL NEW MATERIALS. Consisting of Polyester Fibers. Surface Washable Only.


#### Battery Installation

Batteries included are for demonstration purposes only. For longer life use only alkaline batteries.

Toy requires 3 replaceable AAA (LR03) alkaline batteries. Replace batteries when sound becomes distorted and/or lights

To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Remove and set aside. Insert 3 AAA (LR03) alkaline batteries as shown. Use either AAA (LR03) alkaline batteries or equivalent. Replace battery cover and screw closed.

ATTENTION: Non-alkaline batteries may not power this toy. Replace with alkaline batteries for longest life and best performance.

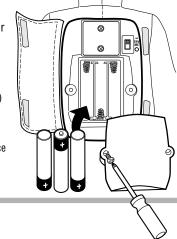

#### BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- · Non-rechargeable batteries are not to be recharged. · Rechargeable batteries are to be removed from the
- toy before being charged. Rechargeable batteries are only to be charged under
- adult supervision. • Do not mix alkaline, standard (carbon-zinc), or
- rechargeable (nickel-cadmium) batteries. Do not mix old and new batteries.
- . Only batteries of the same or equivalent type as recommended are to be used.
- · Batteries are to be inserted with the correct
- Exhausted batteries are to be removed from the
- toy.
  The supply terminals are not to be short-
- . Dispose of batteries safely.

Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline

Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, Menara

Service 1300 135 312 (valid only in Australia).


Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410

• Do not dispose of this toy in a fire. The batteries inside may explode or leak.





### **INSTRUCTIONS**

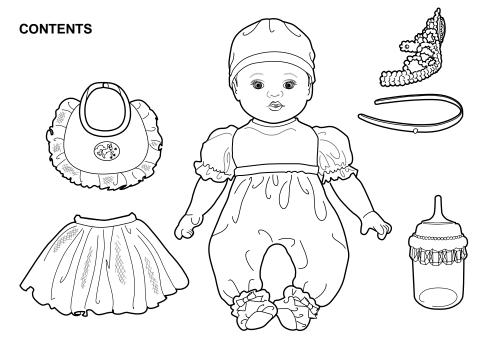

3 AAA batteries are included. Use alkaline batteries only.

This product contains magnets. Do not use around items that are sensitive to or affected by magnetic fields.

Cut the plastic attachments with scissors and discard the pieces. Wire cutters are needed to remove the cable ties.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.

Keep these instructions for future reference as they contain important information.

©2004 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved.

#### **CONSUMER INFORMATION**

YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing


Consumer Relations, Mattel, Inc. 333 Continental Blvd. El Segundo, CA 90245 USA


1(800) 524-TOYS


WE ARE DEDICATED TO QUALITY PRODUCTS.


6 BACK 1 COVER


# Princess Alexa<sup>™</sup> is an adorable baby who becomes a princess, too! Here's how to play with her.

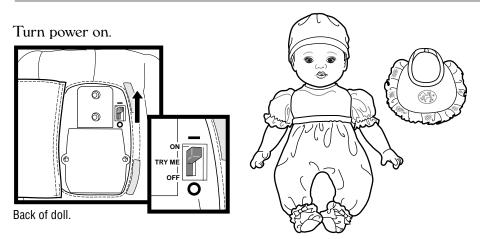


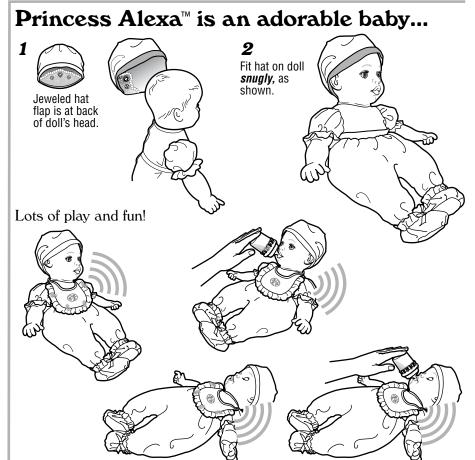

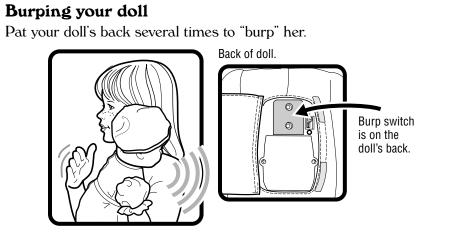

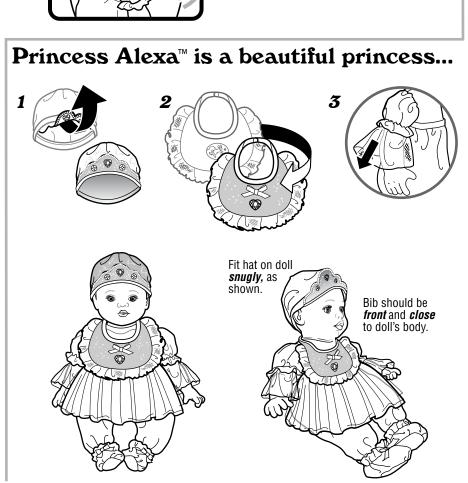

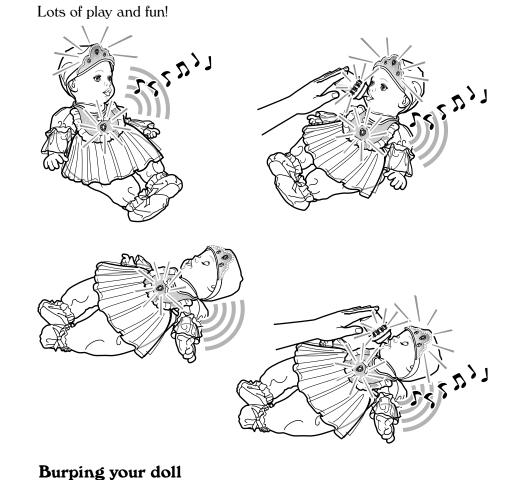

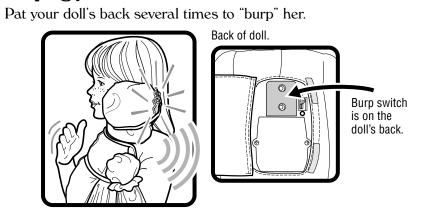

2

3

.