

Love to Walk™ Baby Pooh

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

LOVE TO WALK™ BABY POOH is walking, talking plush Baby Pooh who walks at 4 different speeds. Initially activated by squeezing his hand, he can then be controlled by additional hand squeezes or sound activation.

BEFORE YOU BEGIN

- Remove and discard the "Try Me" pull-tab from the bottom of Pooh's RIGHT foot. Once the TRY ME pull-tab is removed, the toy will perform its full play pattern as described below.
- Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is located on the bottom of Pooh's LEFT foot. At any time, you can use the ON/OFF switch to de-activate the toy.

HOW TO PLAY

- To begin, press Pooh's LEFT hand to activate the toy. Pooh will begin to walk and talk at the slowest speed.
- Once Pooh stops walking and talking, he will wait to be prompted again either by a sound or another squeeze of his hand.
- When Pooh is prompted by sound or hand squeeze, he will again begin to walk and talk, this time at a faster speed.
- Pooh will sometimes randomly change directions when he walks.
- Each time Pooh stops walking and talking, he will wait for the next hand squeeze or sound prompt.
- If Pooh falls down while walking, his legs will stop moving and he will ask you to pick him up.
- After you pick him up, Pooh will ask for a hug. Pooh will also ask for a hug periodically after walking several times.

NOTE TO PARENTS

SOUND ACTIVATION ONLY WORKS WHEN TOY HAS STOPPED WALKING. FOR BEST RESULTS OF THE SOUND ACTIVATION FEATURE, STAND 3 TO 5 FEET AWAY FROM POOH AND SPEAK CLEARLY IN A NORMAL VOICE OR MAKE A CLEAR SOUND, SUCH AS A HAND CLAP. IF POOH DOES NOT REACT AT FIRST TO YOUR VOICE OR SOUND, TRY AGAIN LOUDER, CLEARER, AND CLOSER TO THE TOY. SURROUNDING SOUNDS SUCH AS A TV, RADIO, ETC. MAY SOMETIMES ACTIVATE THE TOY.


FOR BEST PERFORMANCE, POOH SHOULD WALK ON A HARD, FLAT SURFACE.

TOY SLEEP MODE:

- If Pooh is not played with for more than 30 seconds, he will say "Bye Bye" and automatically shut-off to preserve battery life.
- Squeeze his hand again to resume play.

BATTERY REPLACEMENT

- Batteries included are for demonstration purposes only.
- Requires (4) "AA" (LR6) batteries.
- For longer life use only alkaline batteries.
- If sounds play slowly or distort, replace all 4 batteries.
- There are 2 battery compartments located under each of Pooh's feet. Each battery compartment holds (2) "AA" batteries.
- Replace the 4 "AA" batteries as shown.

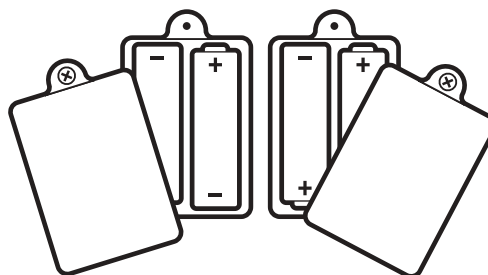

B9043-0920

PRINTED IN CHINA



© Disney
Based on the "Winnie the Pooh" works
by A.A. Milne and E.H. Shepard.
Visit the Disney website at www.Disney.com

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
New York, New York 10010 U.S.A.
Manufactured for Fisher-Price.
©2003 Mattel, Inc. All Rights Reserved.
Fisher-Price and the Fisher-Price logo are
U.S. trademarks of Mattel, Inc.

Packaging and address should be retained for future reference:
Mattel Canada Inc., Mississauga, Ontario L5R 3W2.
You may call us free at 1-800-665-6288.
Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Helpline 01628500303.
Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.
Diimport & Dieadarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5,
13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817,
Fax:03-78803867.
Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.
Consumer Affairs 1 (800) 524-Toys.