

Fisher-Price®

INTERACTV™

DVD BASED LEARNING SYSTEM

QUICK SET-UP INSTRUCTIONS

IMPORTANT: Keep these instructions, InteracTV disc, **PROGRAMMING CARD**, and **TEST CARD** for future reference as they contain important information.


STEP 1



PREPARING YOUR CONTROLLER

- Install 3 "AA" batteries into the InteracTV controller.
- Turn your TV and DVD player ON.
- Insert the InteracTV disc into your DVD player.
- You will watch a brief message and tutorial, which is then followed by a programming screen.


STEP 2

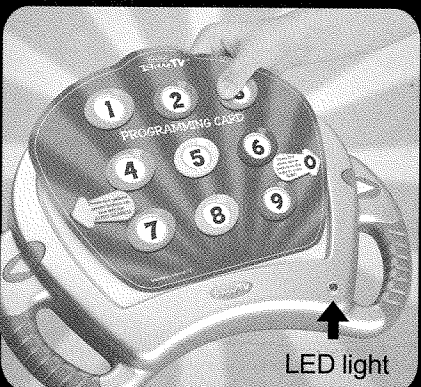

PROGRAMMING YOUR CONTROLLER

- Insert the blue **PROGRAMMING CARD** into the InteracTV controller. When the card is properly inserted, the green light on the bottom right of your controller will blink twice.
- Refer to the list of **MANUFACTURER'S CODES** listed in the enclosed **USER'S MANUAL** and find the correct code number(s) for your DVD player.
- Point the controller directly at your DVD player and enter the first code number using the number keys. Use the forward arrow button to enter zero.
- After entering a 4-digit code, the light on your controller will blink one long blink.

STEP 3

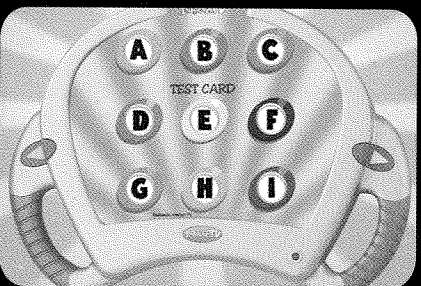

TESTING YOUR CONTROLLER

- Remove the **PROGRAMMING CARD** from the InteracTV controller and insert the yellow **TEST CARD** into the InteracTV controller.
- Test all 9 letter buttons and both arrow buttons to make sure they respond properly by lighting up on your TV screen when pressed.
- If your **TEST CARD** works successfully for all 9 letters and both arrow buttons, proceed to **STEP 4**.

IMPORTANT: If your **TEST CARD** does not work successfully for all the buttons, return to **STEP 2** by switching back to the **PROGRAMMING CARD** and trying the next code. If you have entered all the codes listed for your DVD player and your test card still does not work successfully, refer to **METHOD 2 - PROGRAMMING THE UNIT USING MANUAL SEARCH** in the **USER'S MANUAL**.

STEP 4



READY TO PLAY!

- Remove the **TEST CARD** from the InteracTV controller and insert an **ACTIVITY CARD**.
- Now you can begin play!

©2003 Sesame Workshop. "Sesame Street," "Sesame Workshop" and their logos are trademarks of Sesame Workshop. All rights reserved. Watch Sesame Street on PBS and 123 Sesame on Noggin.

©2003 Viacom International Inc. All Rights Reserved. Nickelodeon, Nick Jr., Dora the Explorer and all related titles, logos and characters are trademarks of Viacom International Inc.

©2003 Viacom International Inc. All Rights Reserved. Nickelodeon, Nick Jr., Blue's Clues and all related titles, logos and characters are trademarks of Viacom International Inc.

©2003 Viacom International Inc. All Rights Reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos, and characters are trademarks of Viacom International Inc. Created by Stephen Hillenbrand.

InteracTV is a mark of TeleMedia Interactive Services, L.L.C. Used under license.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10010 U.S.A. PRINTED IN CHINA.

Manufactured for Fisher-Price. ©2003 Mattel, Inc. All Rights Reserved. Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc. Packaging and address should be retained for future reference. Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-665-6288.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.

Consumer Advisory Service - 1300 135 312.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe.

Persiaran Tropicana Golf Country Resort, 47410 P.J. Tel:03-78803817, Fax:03-78803867. Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.



Questions or Comments?
1-888-892-6123

ITEM NO. B9376

B9376-0920-G1