


Remove your device. Turn the door around so that the peek-a-boo mirror faces baby and push to "snap" in place.

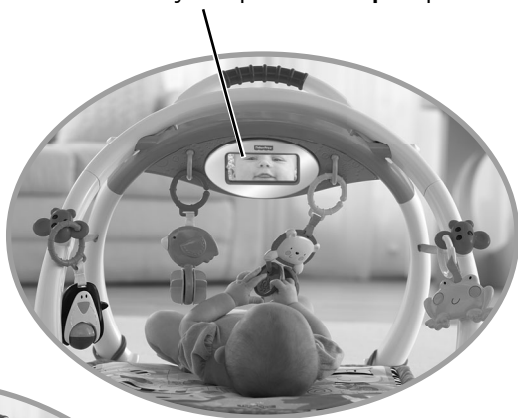

Bat at overhead toys to interact with the app.




Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required. No tools required.

This product is compatible with the iPhone®, iPhone 3G, 3GS, iPhone 4/4S mobile digital device, iPod touch® device 2nd, 3rd and 4th generation. Device not included.

Only use this product with your iPhone® or iPod® device properly inserted and locked in the case. Remove any other cases or bumpers from the device before inserting it in this case.

# Assembly

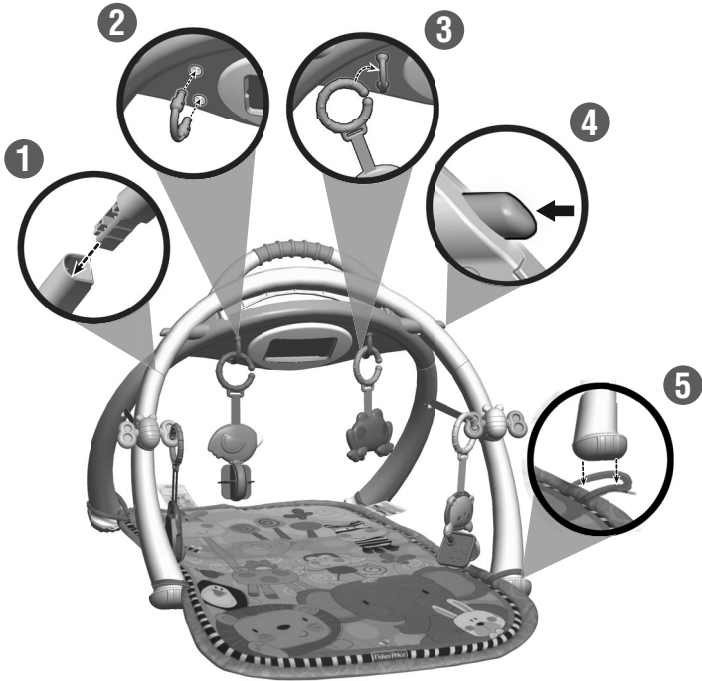

## WARNING


To prevent entanglement injury, never place gym in a crib or playpen. Never add strings, ties or other products to the gym.

- 1 Fit the ends of the legs into the sockets in the arch. Push to **"snap"** in place.  
*Hint: The legs are designed to fit into the arch one way. If they do not seem to fit, try the other side of the arch!*
- 2 **"Snap"** the "C" rings into the arch on the gym.
- 3 Hook the toys to any of the "C" rings or butterflies around the gym.
- 4 Press the button on each end of the arch to open and close the legs.
- 5 Place the decorated side up. Fit the legs on the gym to the loops on the mat.

# Insert Your Apple Device




- Scan the QR code above with your iPod or iPhone to download our free Fisher-Price® high contrast and peek-a-boo apps from the App Store<sup>SM</sup> (no purchase necessary) for interactive fun!
- When used with your iPod or iPhone device, make sure it is properly inserted and locked in the toy. Remove any other case from the device before inserting it in this toy.
- Turn your device power ON and open the Fisher-Price® app.

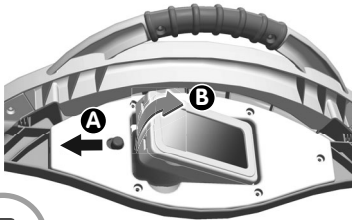

1


- Slide the switch on the gym **A**, and lift the door **B**.

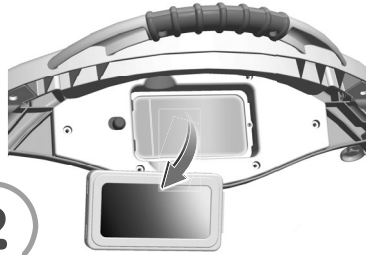

2

- Remove the door.

Clear Protective Strip

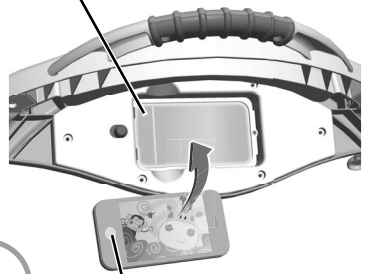


Home Button

3

- Hint:** If you'd like to **block** baby from pressing the home button, follow the instructions in this step.
- Insert the device with the home button on the **same** side as the clear protective strip.

## Insert Your Apple Device

Clear Protective Strip

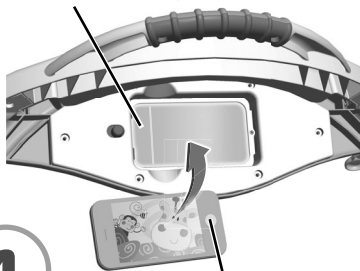


4

Home Button

**Hint:** If you'd like to **allow** baby to press the home button, follow the instructions in this step.

- Insert the device with the home button on the **opposite** side of the clear protective strip.

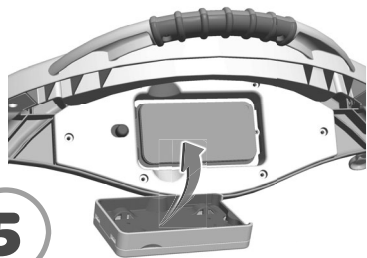

5

- Fit the door back onto the gym. Push to "**snap**" in place.

## Consumer Information



### CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

[service.fisher-price.com](http://service.fisher-price.com)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

#### Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## Care

- Periodically check this product and your device for damage or cracks. Do not use if either is damaged or broken. Follow your device's instructions for use and care.
- Wipe the arch and legs with a clean, damp cloth. Do not immerse.
- Machine wash the mat with cold water on the gentle cycle. Do not use bleach. Tumble dry low heat.

Apple, iPhone and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

©2012 Mattel. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, except as noted.