 
 


♪ You can play along with 5 instruments! ♪

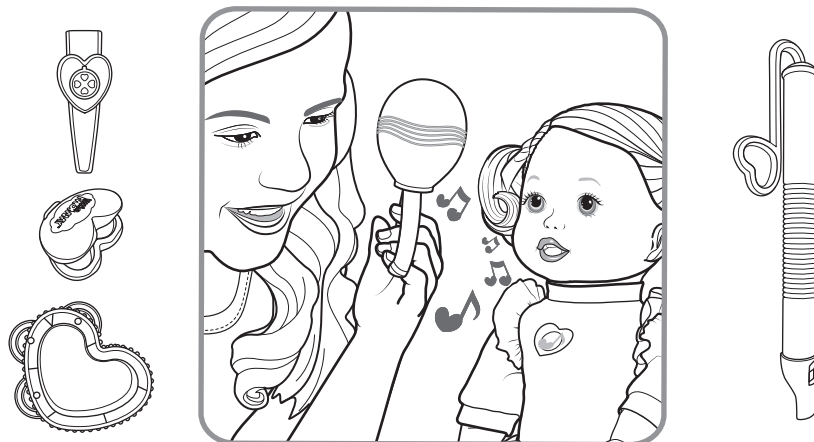

To keep the kazoo and slide whistle clean, wash regularly in soap (not included) and water.

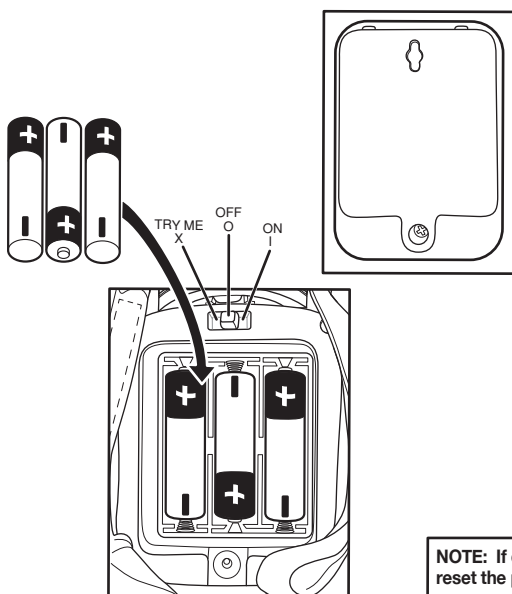

### Battery Replacement

Replace batteries when sound becomes distorted or lights dim.

For longer life use only alkaline batteries. To replace batteries, open fabric on back of toy. Use a Phillips head screwdriver (not included) to open battery cover. Insert 3 AA (R6) alkaline batteries as shown. Use either AA (R6) alkaline batteries or equivalent. Replace battery cover and tighten screw.

When exposed to an electrostatic source, the product may malfunction. If a problem occurs, reset the product by turning the switch off and on again.

**NOTE:** If doll experiences any interactive play malfunction, reset the product by turning the switch off and on again.

### CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only).

 
 
[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 P.J. Malaysia. Tel:03-78803817, Fax:03-78803867.




## INSTRUCTIONS

### CONTENTS

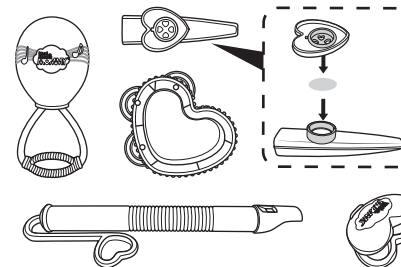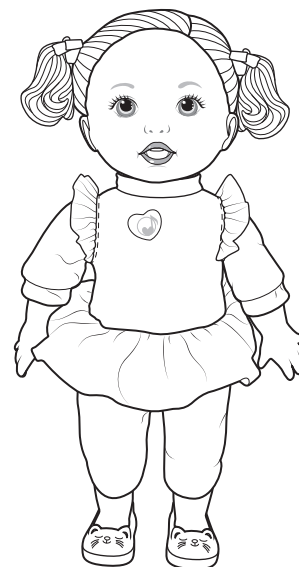

BCR53

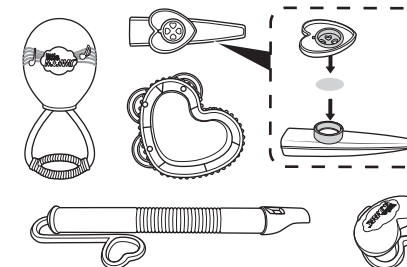 


BCR54

Each sold separately, subject to availability.

Includes 3 - AA (R6) batteries. Batteries included are for demonstration purposes only. Dispose of batteries safely.


Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

# Let's make some music!

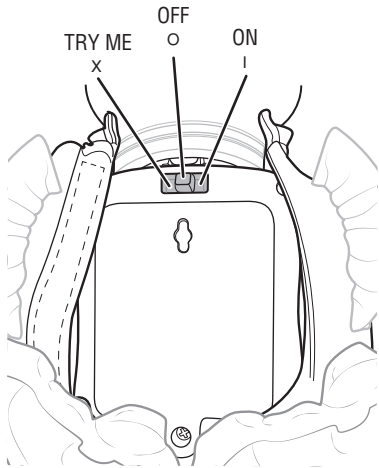 

The power switch has 3 settings, shown here. Before you play, turn the switch to ON.

 1

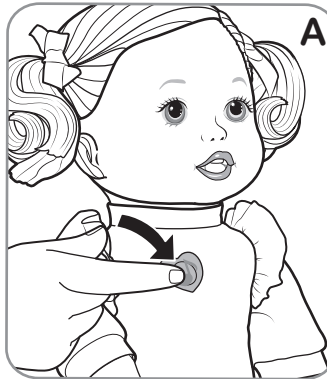

Press heart to begin recording.



Record your voice while light is on. For best performance, use short phrases when recording. To stop recording, press doll's left palm, or wait until the light turns off.

Note: a maximum of 7 seconds of audio can be recorded. For best results, speak closely into the microphone in a quiet environment.

2



When you are finished recording, the doll will sing your words back to you using one of her twelve tunes.

To stop her singing, press doll's left palm, and she will say a prerecorded phrase. Press again to hear her sing your words to another tune.

 
Tip: Doll's 12 tunes play in sequential order.

3



When left idle, doll will say a prerecorded phrase every 8-14 seconds for about 1 minute, and then will go into sleep mode. Your recording will be erased after doll goes into sleep mode.

4

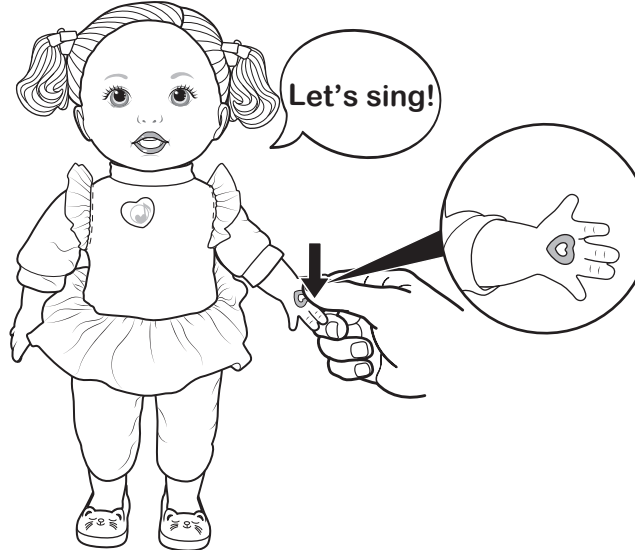

Wake up doll by pressing her left palm, and she will say a prerecorded phrase.

5



Press doll's left palm again to hear her sing a prerecorded song.