

Fisher-Price®

BDD52



Press and
hold the GO
button and
they're off!

CAUTION

To prevent entanglement,
keep hair away from wheels.

Please keep this instruction sheet for future reference,
as it contains important information.

Requires four AA (LR6) **alkaline** batteries (not included) for vehicle operation.

Adult assembly is required. Tool required for battery installation:
Phillips screwdriver (not included).

The vehicles are not recommended for use on loose dirt or wet surfaces.

Wipe this toy with a clean cloth dampened with
a mild soap and water solution. Do not immerse any part of this toy.
This toy has no consumer serviceable parts. Do not take the vehicles apart.

fisher-price.com

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maldenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121, Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

 
FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Installation



 For longer life, use **alkaline** batteries.

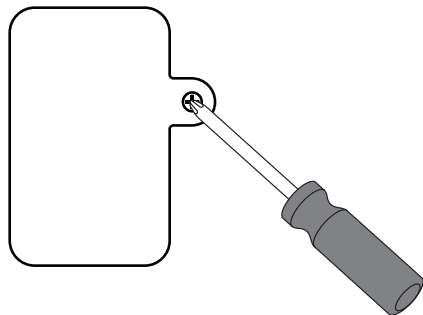

- Locate the battery compartment door on the bottom of each vehicle.
- Loosen the screw in each battery compartment door with a Phillips screwdriver and remove the door.
- Insert two AA (LR6) **alkaline** batteries into each vehicle.
- Replace the battery compartment door and tighten each screw. Do not over-tighten.
- If a vehicle begins to operate erratically (stops after bumping into an object or it does not turn off) you may need to reset electronics. Remove the batteries for about 3 minutes and then reinstall them.
- When sounds or motions from a vehicle become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 
Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Lower Track Assembled Parts


Each track piece has a number on the bottom. Simply match the numbers and fit the pieces together! For best performance, we suggest assembling on a hard, flat surface.

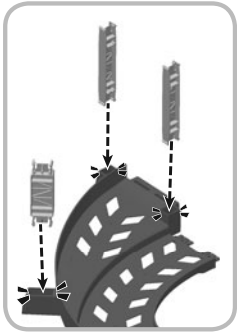

 
“Snap” both tall trestles, labeled 4, and a short trestle, labeled 8, to the track piece labeled 4 - 5 - 12.

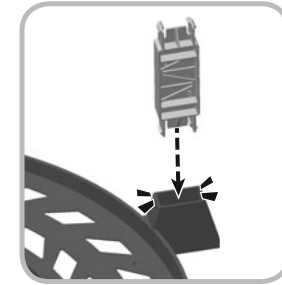

 “Snap” a short trestle, labeled 8, to the track piece labeled 2 - 3.


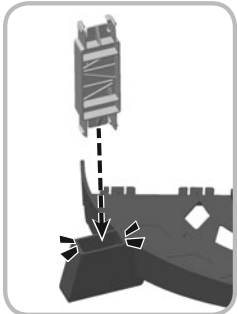


 “Snap” a short trestle, labeled 8, to the track piece labeled 5 - 6.

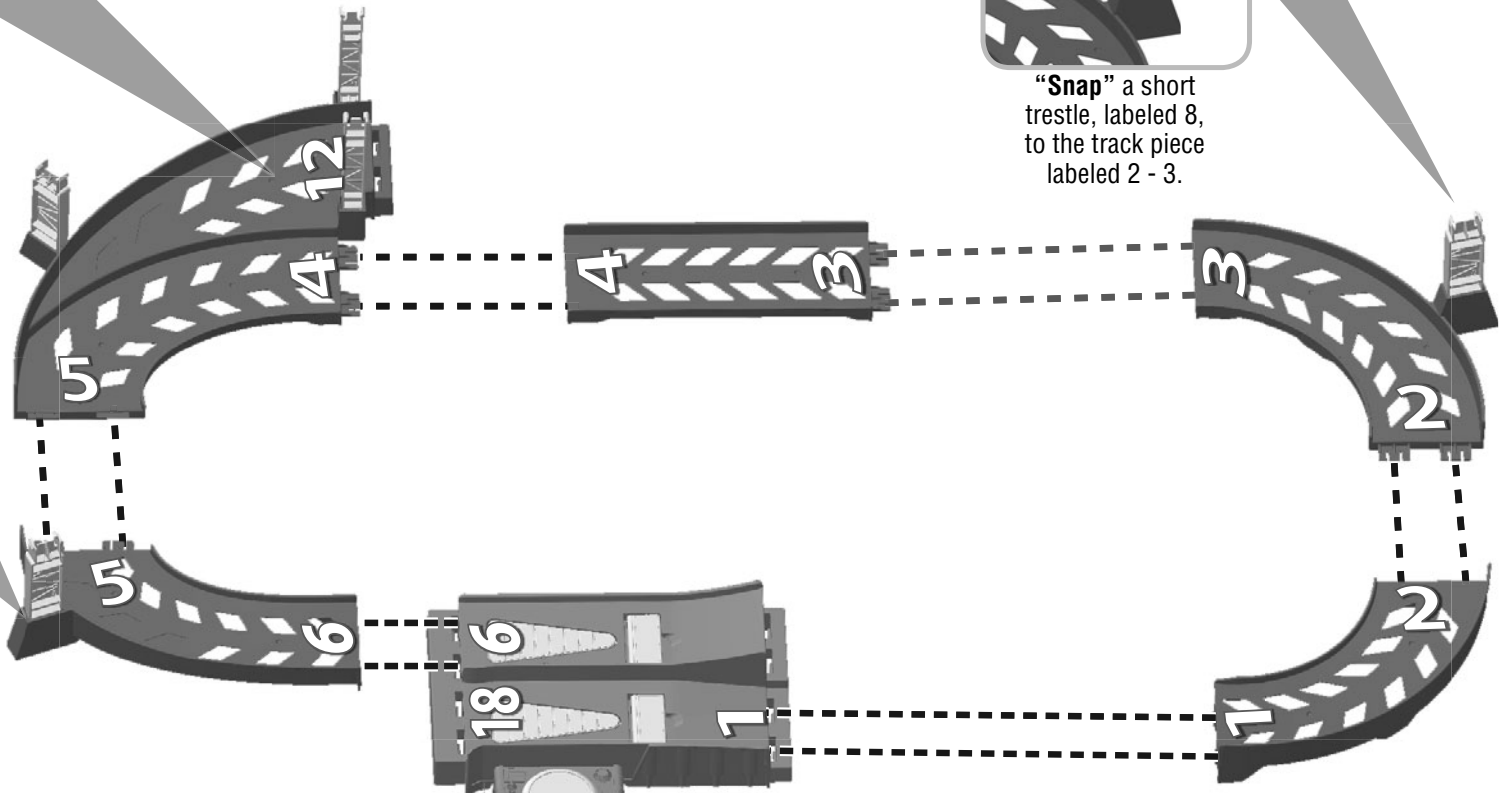

Upper Track Assembled Parts

  Each track piece has a number on the bottom.
Simply match the numbers and fit the pieces together!

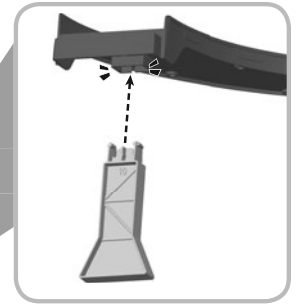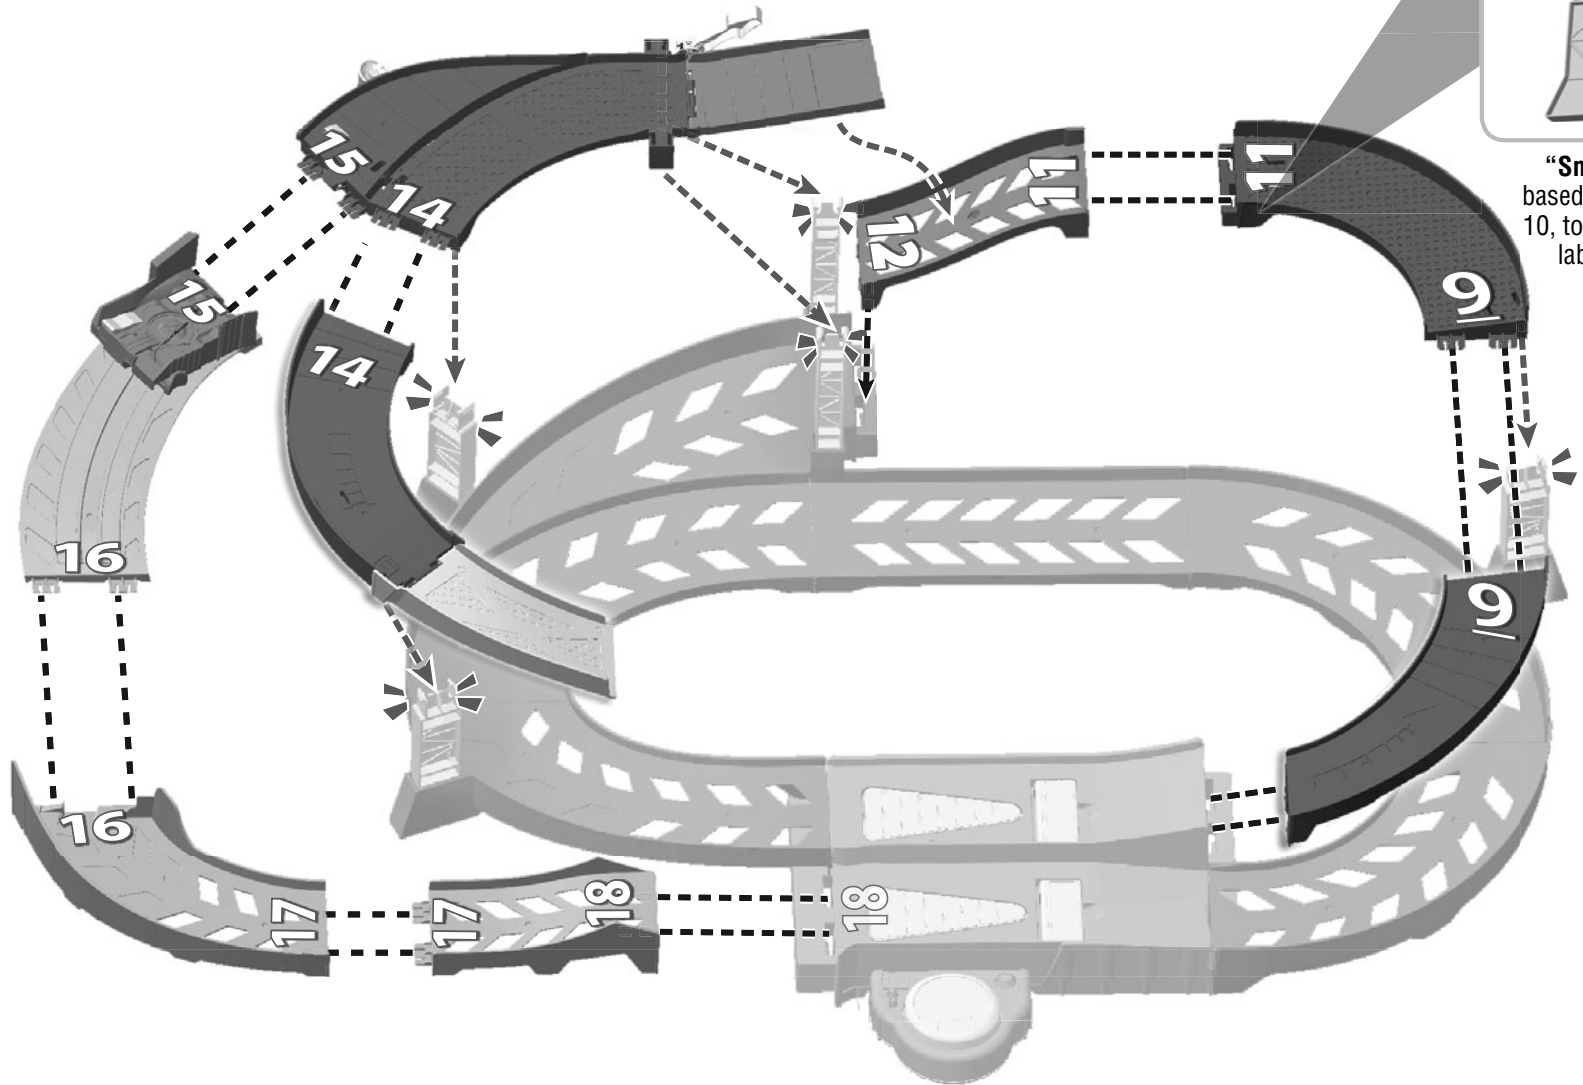


“Snap” the wide based trestle, labeled 10, to the track piece labeled 9 - 11.

Decoration

Before applying the labels, wipe the surface with a clean, dry cloth to remove any dust or oils.

Place the labels exactly as shown in the illustration and avoid repositioning the labels.

 After applying a label, rub it firmly with a clean dry cloth, starting at the center, to remove any air bubbles.

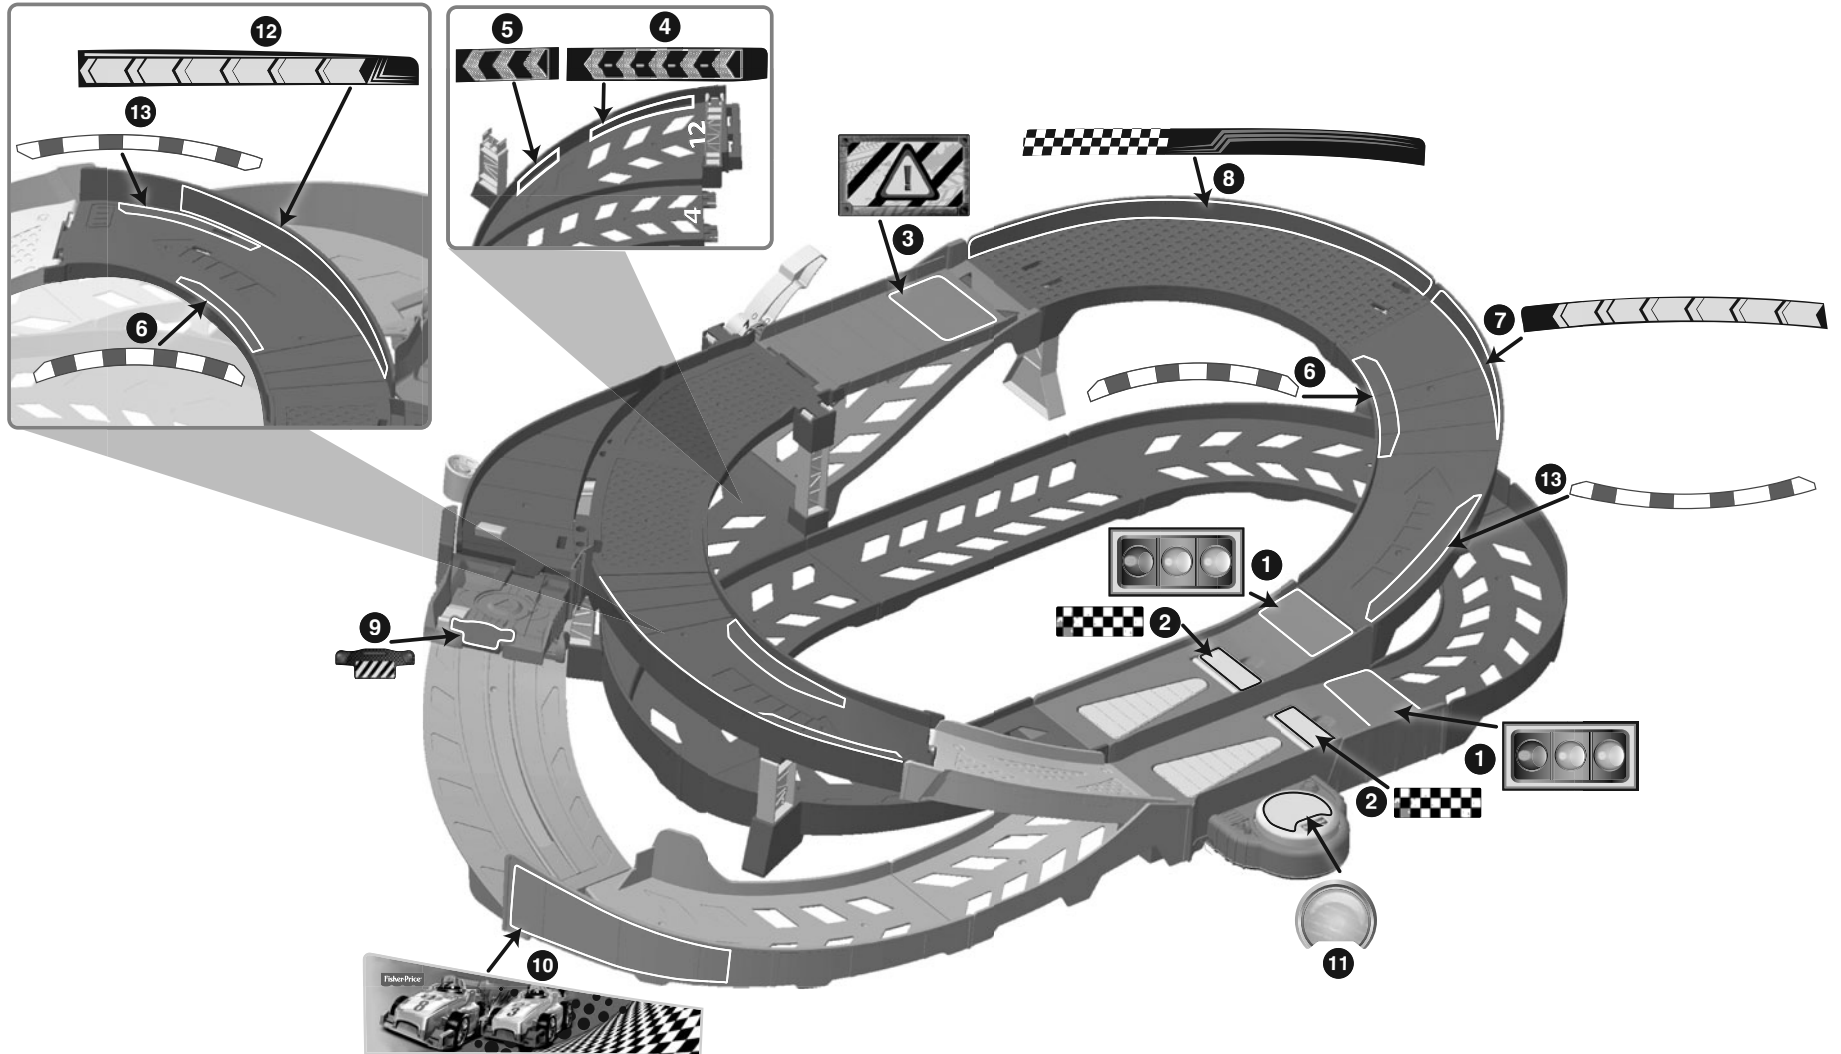

Race to Win!



 
- Lift the starting gates on the track.
- Set the vehicles on the arrows behind the starting line.
- Shake each vehicle to start the “engine” and the sound effects.

Hint: For maximum distance, shake the vehicle 7 or 8 times. Shaking more than this does not increase the distance each will travel.




- Press and **hold** the GO button and they're off!
- When a vehicle stops, pick it up, shake it and set it down again to rejoin the race.

Hint: Vehicles can also be used on any smooth, flat surface.

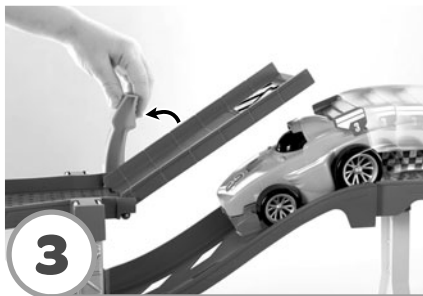

 - Lift the track lever to lift the upper track and send a vehicle to the lower track.

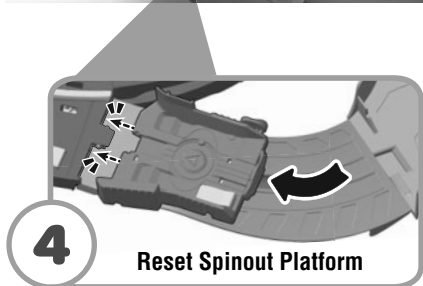

Reset Spinout Platform

- Slide the lever to send the opponent into Spinout Alley™!

Hint: To reset the the spinout platform, push it back up the track and “click” into place.