

 


INSTRUCTIONS



CONTENTS

SAFETY TESTED
GENTLE



Includes 3 AG13 (LR44) button-cell batteries.
Batteries included are for demonstration purposes only. Dispose of batteries safely.

Pen may stain fabrics and other surfaces.
Avoid contact with carpet, clothing, walls, and furniture.



Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

Let's Play!

1.

Write with pen in invisible ink.


For best results, use invisible ink pen only on white, uncoated paper.

2.

Press bow and aim lights at note to reveal your message!

Battery Replacement

To replace batteries, use a Phillips head screwdriver (not included) to open battery cover. Insert 3 new AG13 (LR44) button cell batteries as shown. Use either AG13 (LR44) button cell batteries or equivalent. Replace battery cover and tighten screw. Replace batteries when lights dim. When exposed to an electrostatic source, the product may malfunction. If this problem occurs, reset the product by removing and reinstalling the batteries.

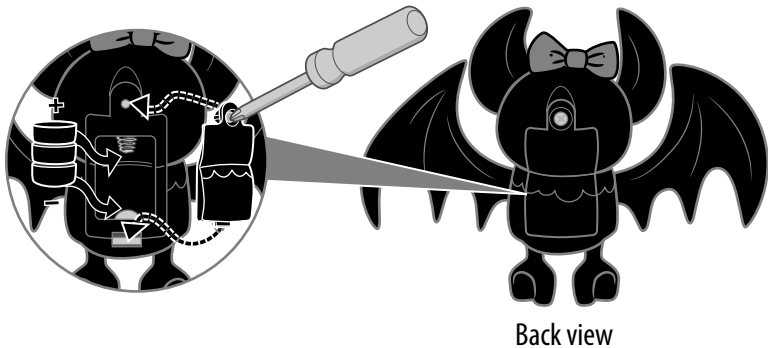

CONSUMER INFORMATION

Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).

SERVICE.MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel: 03-78803817, Fax: 03-78803867.