

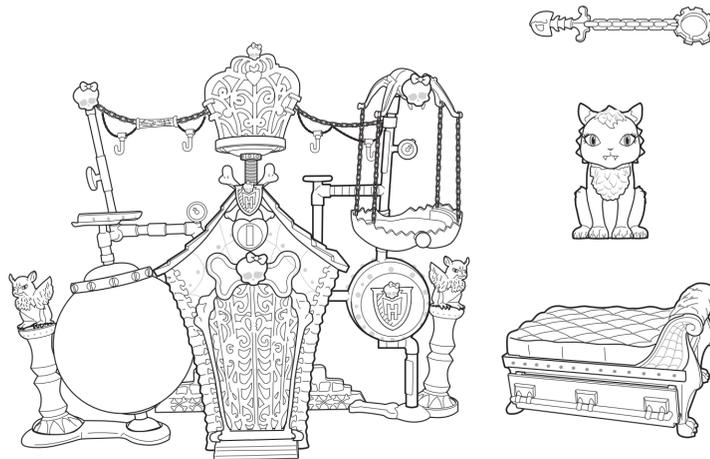


INSTRUCTIONS

CONTENTS

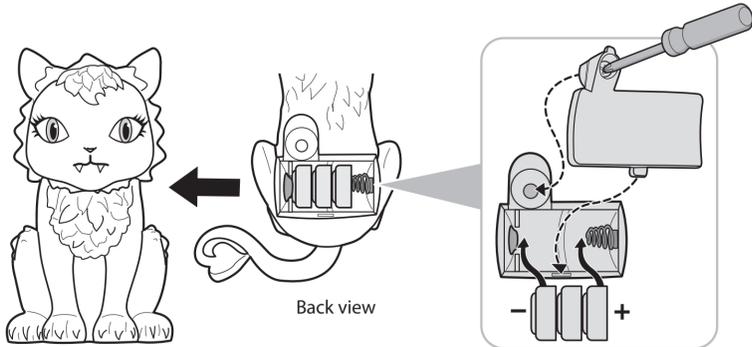

INSTRUCTION SHEET SPECIFICATIONS	
Toy:	MONSTER HIGH
Toy No.:	BDF06
Part No.:	0920G2
Lang. Code:	DOM
Trim Size:	17" W x 11.5" H
Folded Size:	8.5" W x 5.75" H
Type of Fold:	2 panel
# colors:	One
Colors:	Black
Paper Stock:	Recycle paper
Paper Weight:	70 lb.
EDM No.:	00

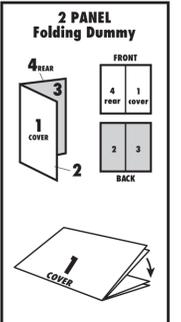

Battery Replacement

Replace batteries when sound becomes distorted. To replace batteries, use a Phillips head screwdriver (not included) to open battery cover. Insert 3 new AG13 (LR44) button cell batteries as shown. Use either AG13 (LR44) button cell batteries or equivalent. Replace battery cover and tighten screw. When exposed to an electrostatic source, the product may malfunction. If this problem occurs, reset the product by reinstalling the batteries.

Includes 3 AG13 (LR44) button cell batteries. Batteries included are for demonstration purposes only. Dispose of batteries safely.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

CONSUMER INFORMATION
Need Assistance? Visit service.mattel.com or call 1-800-524-9897 (US and Canada only).
SERVICE-MATTEL.COM

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty, Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.
Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel: 03-78803817, Fax: 03-78803867.



©2013 Mattel. All Rights Reserved.


此为电动产品。
要求將包含電池安全信息與
垃圾桶標示的附頁放入包裝。
This is a battery-operated product.
Battery Safety Information and
WEEE Logo with 2002/96/EC
Flyer is required to be placed
inside the packaging.
25L 00001-2908G8

The FCC Flyer is required to be
placed inside the packaging.
00007-1849G6







4 Rear

1 Cover

Let's Play!

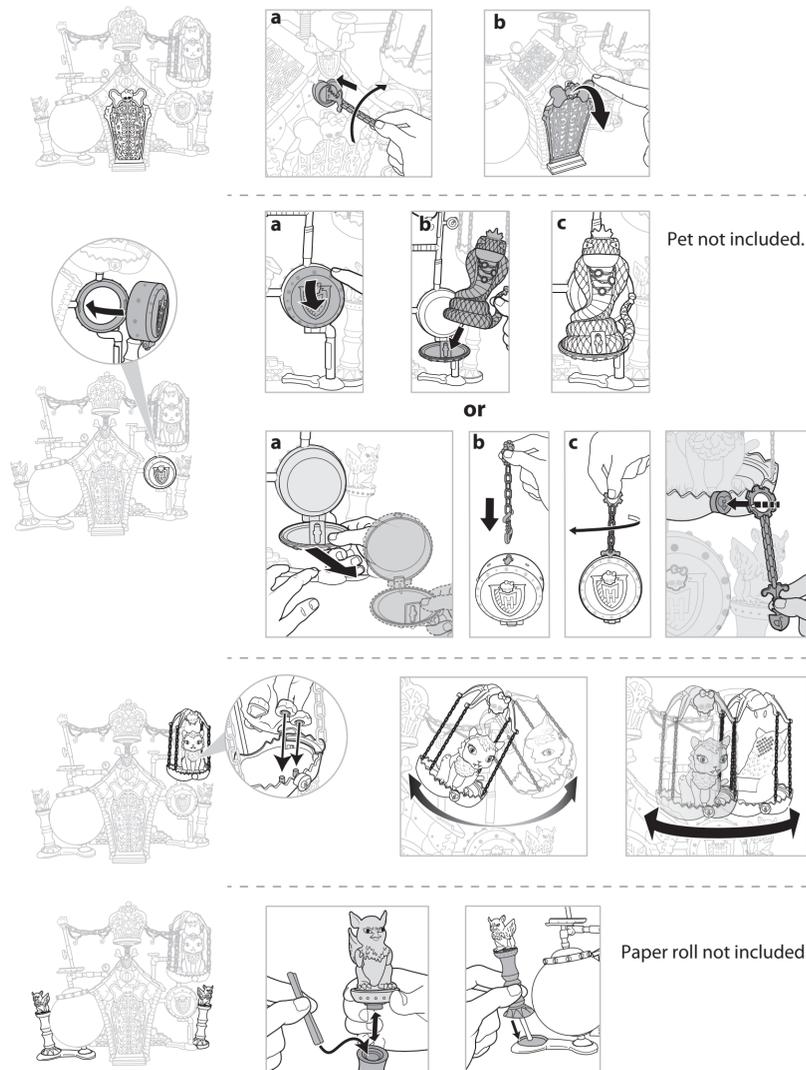


Magic drawer

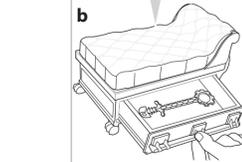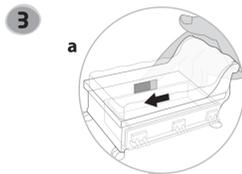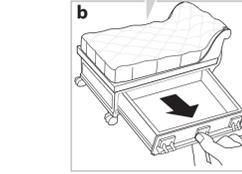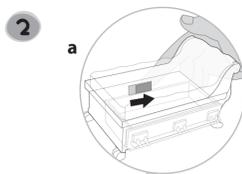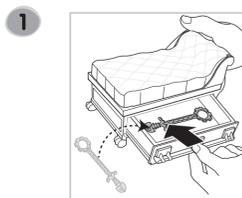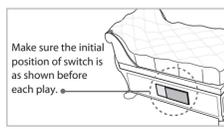

The figure has a sensor in her chest. This sensor detects motion best within 5 feet.

A Press button to activate sensor. Press again to turn off.

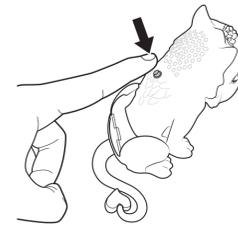

B Figure growls when movements are recognized.



Note: The product is equipped with an automatic shut-off feature that helps preserve battery life.

IMPORTANT: The sensor may not work in all lights, such as in direct sunlight, or in light that is either too bright or too dim. When exposed to an electrostatic source, this product may malfunction. Turn the switch off and then on again for normal function.