

1 Bounce



2 Walk



3 Ride



Please keep this instruction sheet for future reference,
as it contains important information.

Adult supervision is required.

Never use near steps.

Choose areas for riding that are free of obstacles.

Learn to stop safely.

Use with caution as this product requires skill to operate safely to avoid falls,
collisions, and injuries to yourself (the rider) and others.

Requires two AA **alkaline** batteries (included).

Batteries included are for demonstration purposes only.

Adult assembly is required.

Tool required for assembly: Phillips screwdriver (not included).

This toy has no consumer serviceable parts. Do not take apart.

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Care

- Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- Periodically inspect this product for wear or damage. Check all screws, and tighten as needed. Replace worn or broken parts immediately.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

 
- (1) il ne doit pas produire de brouillage et
- (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Assembled Parts




CAUTION

This package contains
small parts.
For adult assembly only.



2 Front Axles

 

2 Rear Axles
(Left and Right)




Body




Handle



Head

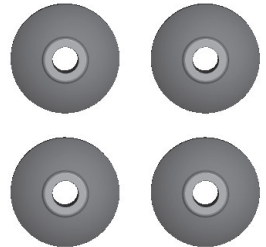


4 Wheels

 

#8 x $\frac{3}{4}$ (1,9 cm) Screw – 14

Note: Tighten or loosen all screws with
a Phillips screwdriver. Do not over-tighten.


Assembly

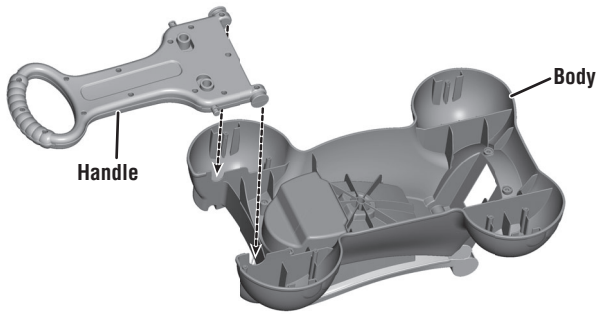

1

- Position the handle smooth side down. Fit the pegs on the handle to the grooves in the body.

Hint: The handle is designed to fit one way. If it does not seem to fit, turn it around and try again.

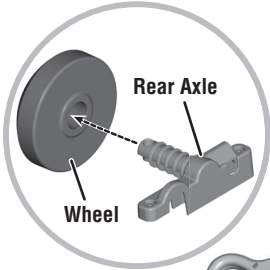


2

- Fit a rear axle into the flat side of a wheel.
- Place the wheel assembly into a rear wheel well.

Hint: If the wheel assembly does not seem to fit, try assembling on the opposite side.

- Insert three screws and tighten.


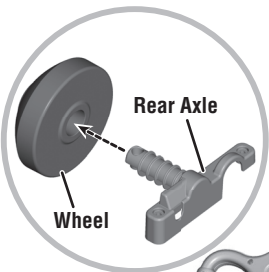


3

- Fit the remaining rear axle into the flat side of a wheel.


• Place the wheel assembly into a rear wheel well. Insert three screws and tighten.

Assembly

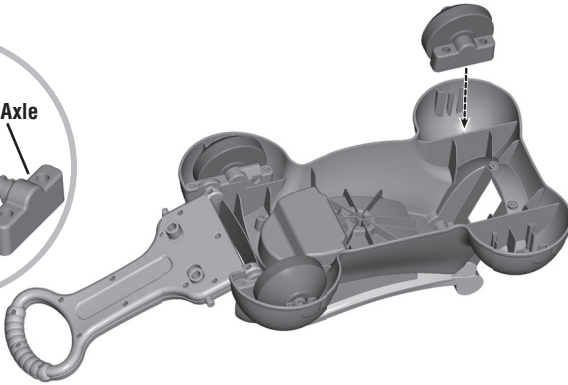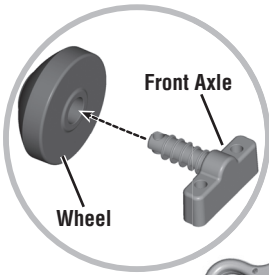


4

- Fit a front axle into the flat side of a wheel.
- Place the wheel assembly into a front wheel well. Insert three screws and tighten.
- Repeat this procedure to assembly the remaining front axle and wheel.

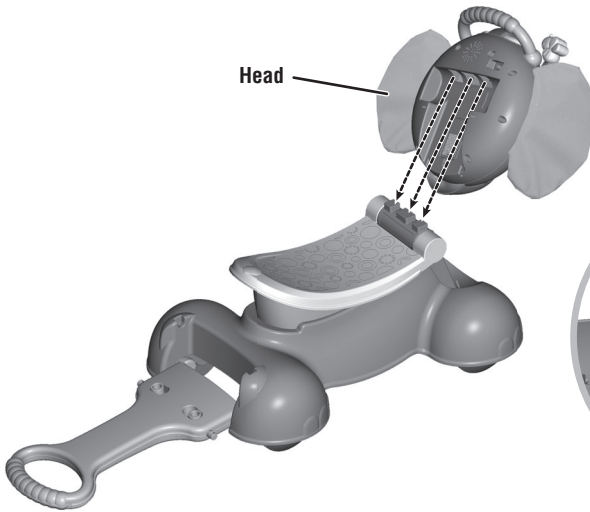


5

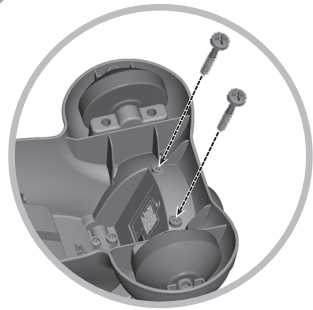


- Turn the assembly upright.
- Fit the sockets on the head to tabs on the front end of the body.
- While holding the head in place, turn the toy over.
- Insert two screws into the body and tighten.

Rider to Walker

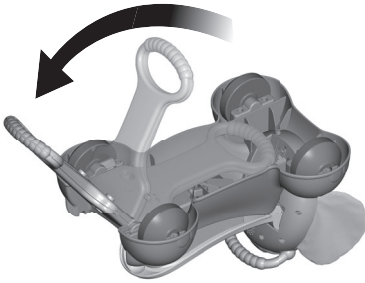


Turn
product
over

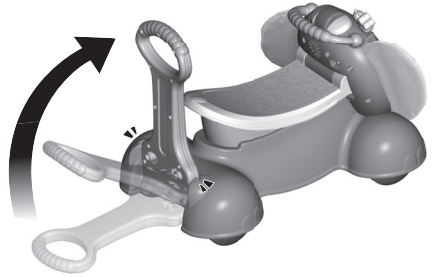


- Turn the product over.
- Squeeze both latches on the handle. Lift the handle and then rotate down.

- Turn product over and continue to lift and “snap” handle into place.

Walker to Rider

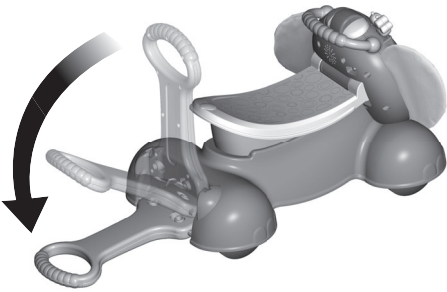


Turn
product
over

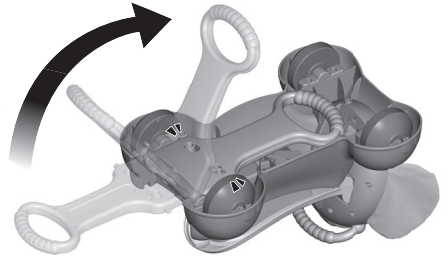

- Squeeze both latches on the handle and lower the handle.

- Turn product over and continue to lift the handle. Then rotate the handle down to “snap” it into place.

Battery Installation

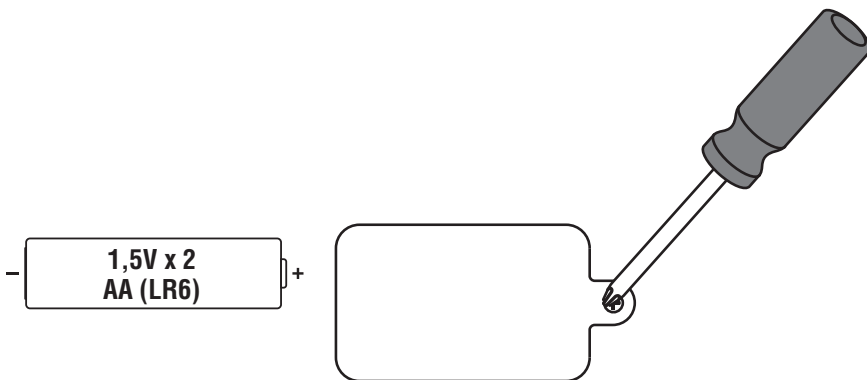

- For longer life, use **alkaline** batteries.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If toy begins to operate erratically you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds/lights from this toy become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Fun lights and lively music!

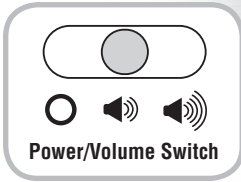

- Slide the power/volume switch to ON with low volume 🔊, ON with high volume 🔊 or OFF ○.
- Press the buttons on the elephant head to play lights, sounds and music.
- Push, scoot or bounce on the elephant for fun sounds, lights and music.