

IMPORTANT!

If you do not hear music or sounds when the blocks tumble to the base, you may not have assembled the play wall to the bases correctly. Please refer back to the assembly instructions, step 2.



Please keep this instruction sheet for future reference,
as it contains important information.

Requires two AA (LR6) **alkaline** batteries (not included).

Adult assembly required.

Required tool: Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.



CONSUMER ASSISTANCE
 1-800-432-5437 (US & Canada)
 1300 135 312 (Australia)


service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
 Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
 Mississauga, Ontario L5R 3W2; www.service.mattel.com.
 Great Britain: Mattel UK Ltd, Vanwall Business Park,
 Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
 Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
 Australia: Mattel Australia Pty. Ltd., 658 Church Street,
 Locked Bag #870, Richmond, Victoria 3121 Australia.
 New Zealand: 16-18 William Pickering Drive,
 Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.


L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) il ne doit pas produire de brouillage et
- (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Battery Installation



For longer life, use **alkaline** batteries.

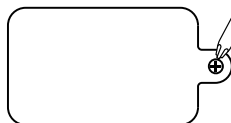

- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If toy begins to operate erratically you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.




- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Assembled Parts

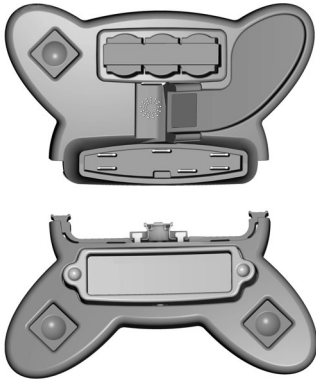

2 Bases



Play Wall




6 Pegs



2 Guides




Play Wall Top

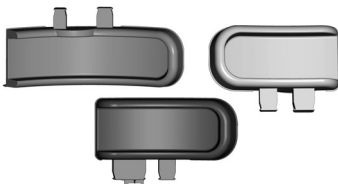


3 Ramps
(Small, Medium, Large)

Assembly

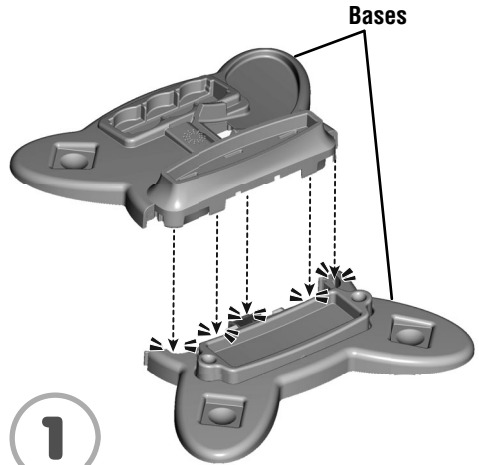


- Place the bases on a hard, flat surface.
- **“Snap”** the bases together.

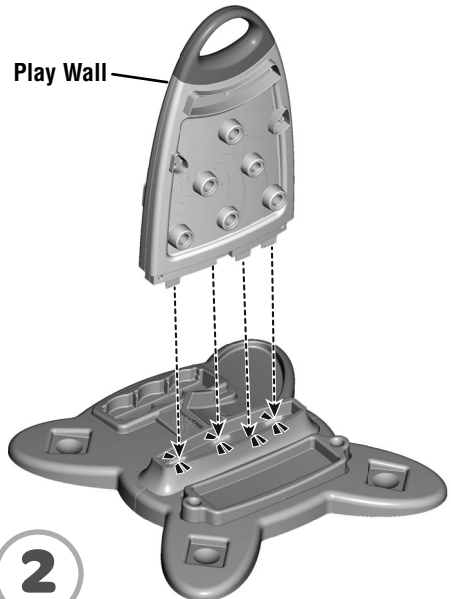


- **“Snap”** the play wall to the base assembly.
- Hint: The play wall is designed to fit one way. If it does not seem to fit, turn it around and try again!*


Assembly

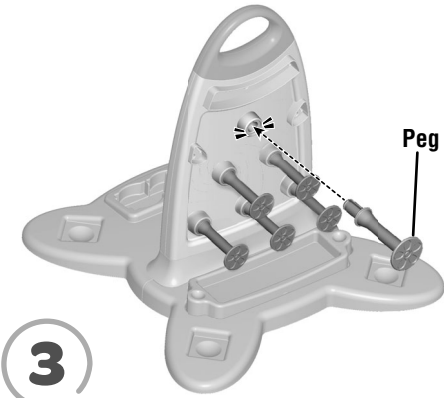

- “**Snap**” all six pegs into the socket on the play wall.

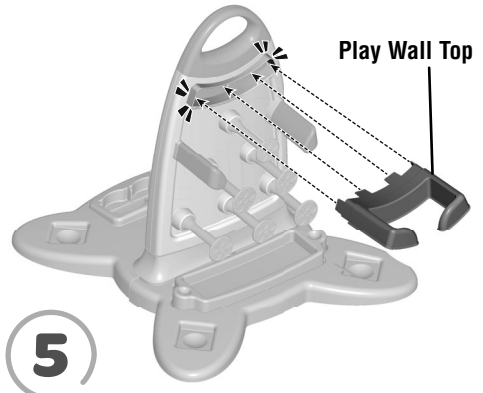


- “**Snap**” the play wall top into the slots in the play wall.

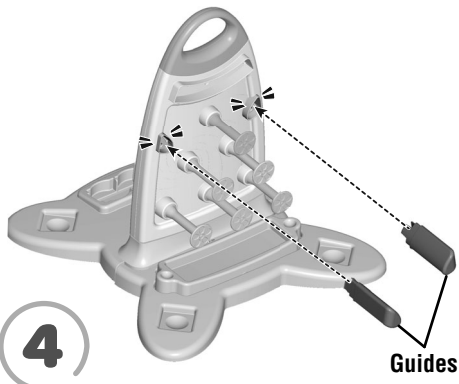


- “**Snap**” both guides into the slots in the play wall.

Hint: The guides are designed to fit one way. If either does not seem to fit, try assembling to the other set of slots in the play wall.

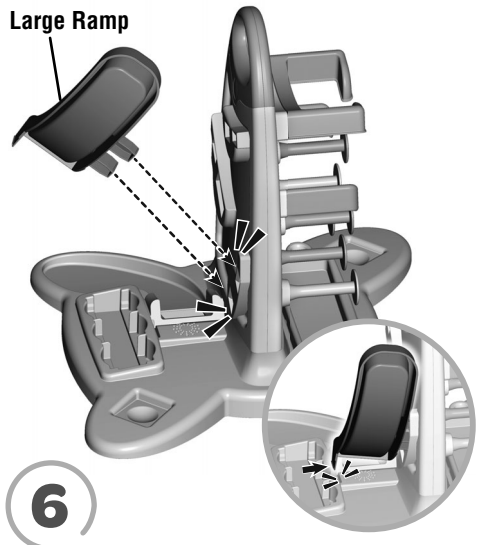


- At an angle, first insert and “**snap**” the side tabs on the large ramp into the play wall.
- Then, push to insert and “**snap**” the tab on the bottom of the large ramp into the slot in the base.

Assembly

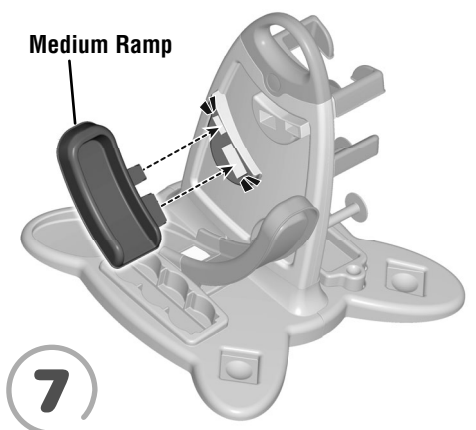


- **“Snap”** the medium ramp tabs into the play wall openings.

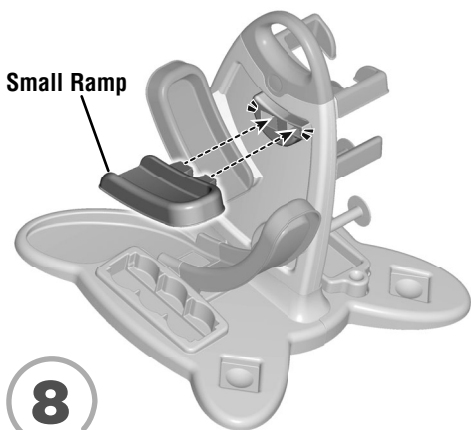

- **“Snap”** the small ramp tabs into the play wall openings.

 Two sides of play!



Power/Volume Switch

- Slide the power/volume switch to ON with low volume , ON with high volume  or OFF .
- Blocks tumble down either side of wall for music and fun sounds.