



3 TO PLAY

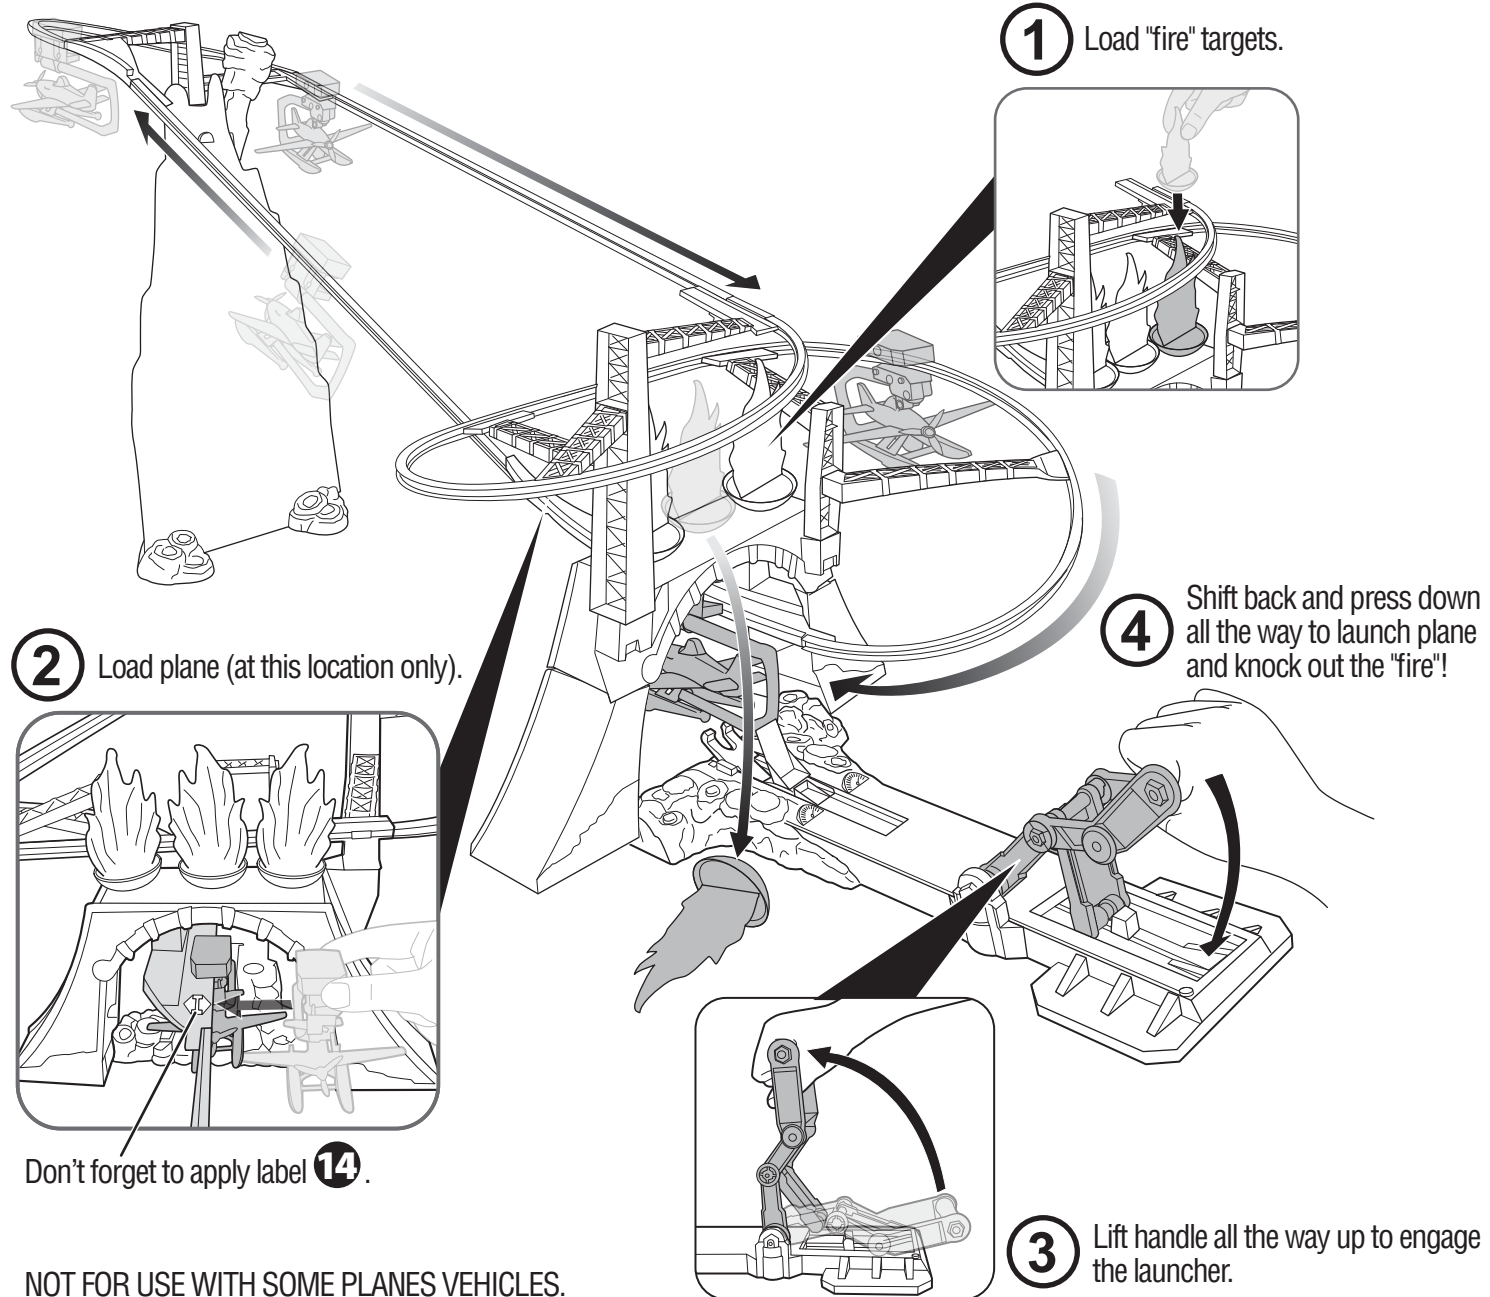


4 PERFORMANCE TIPS

For best launch performance:

A. After loading the plane, make sure it sits flush with the launch pad.

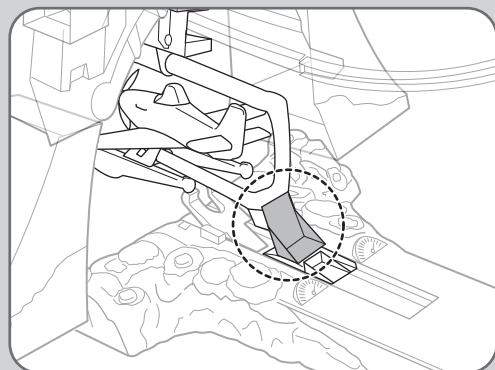

B. Before launching, make sure the handle is engaged with the launcher.

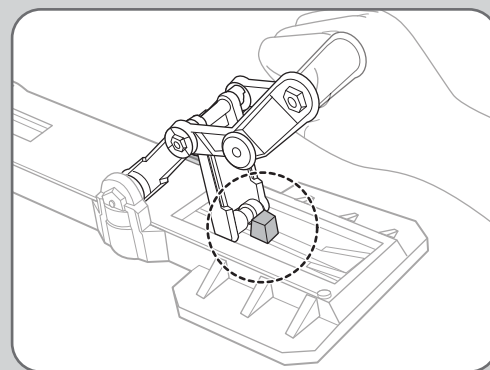


PISTON PEAK AIR ATTACK INSTRUCTIONS 4+

CONTENTS




REFER TO LETTERS MOLDED ON TOY PARTS AND THROUGHOUT THE INSTRUCTIONS TO HELP WITH ASSEMBLY.





Waterfall Section

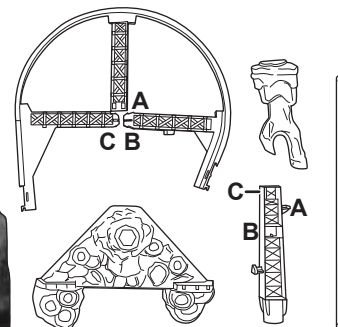

Accessories

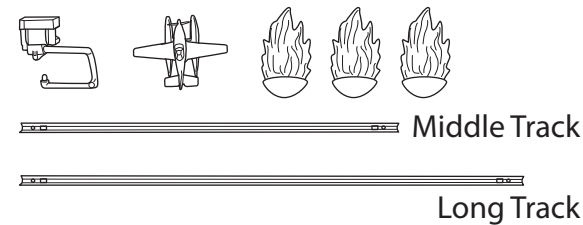



Bridge Section

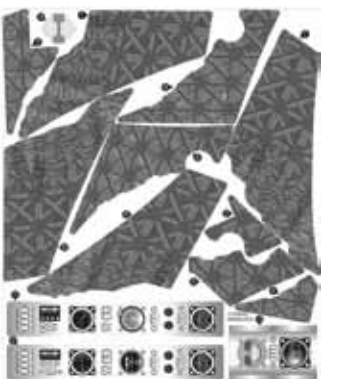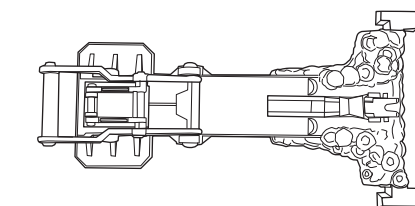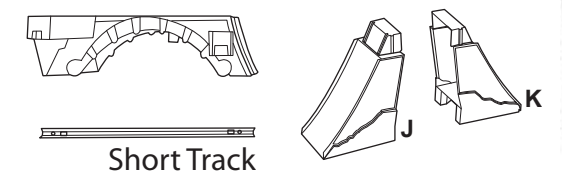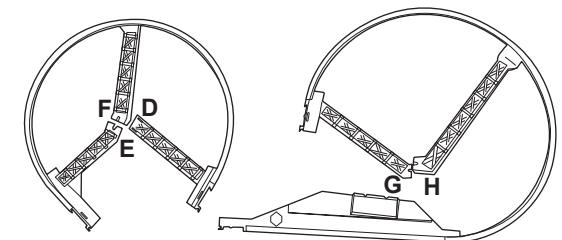

Label Sheet

1 APPLY LABELS

Helpful Hint: Apply labels before assembly by number as indicated.

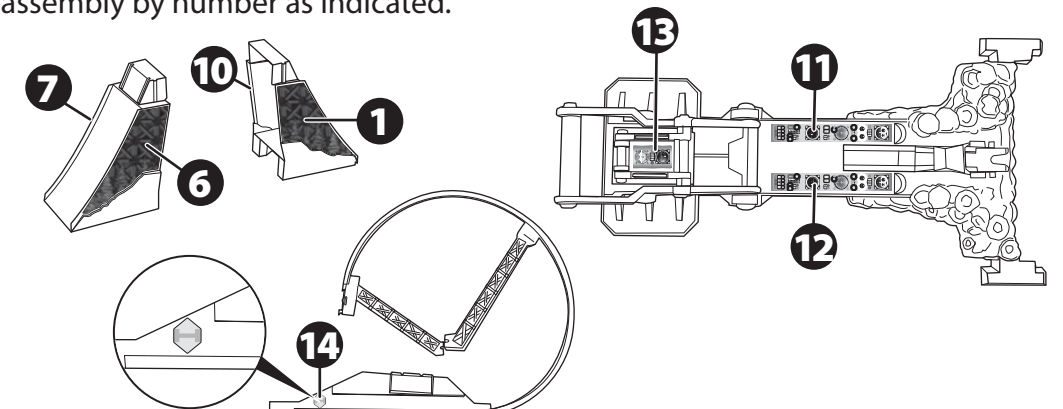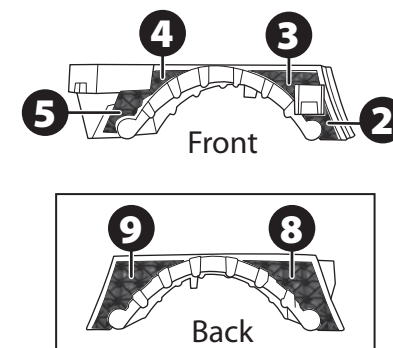

©2014 Mattel. All Rights Reserved.

Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel:03-78803817, Fax:03-78803867.







REFER TO LETTERS MOLDED ON TOY PARTS AND
THROUGHOUT THE INSTRUCTIONS TO HELP WITH ASSEMBLY.

Waterfall Section


①

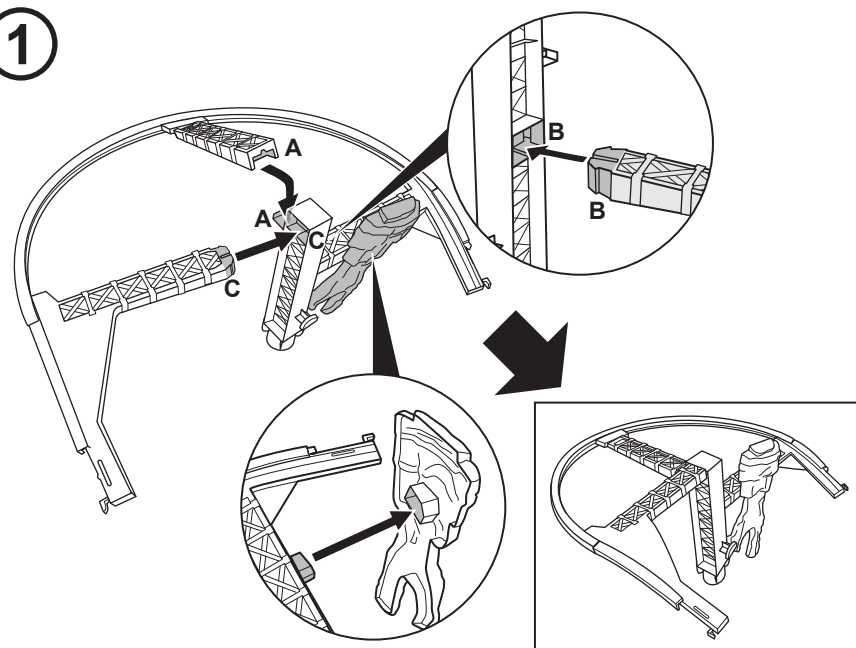

②

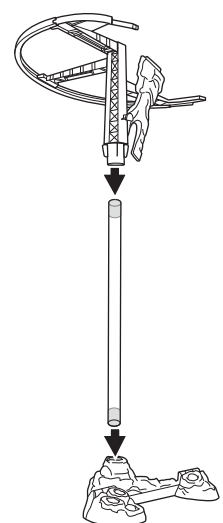


③

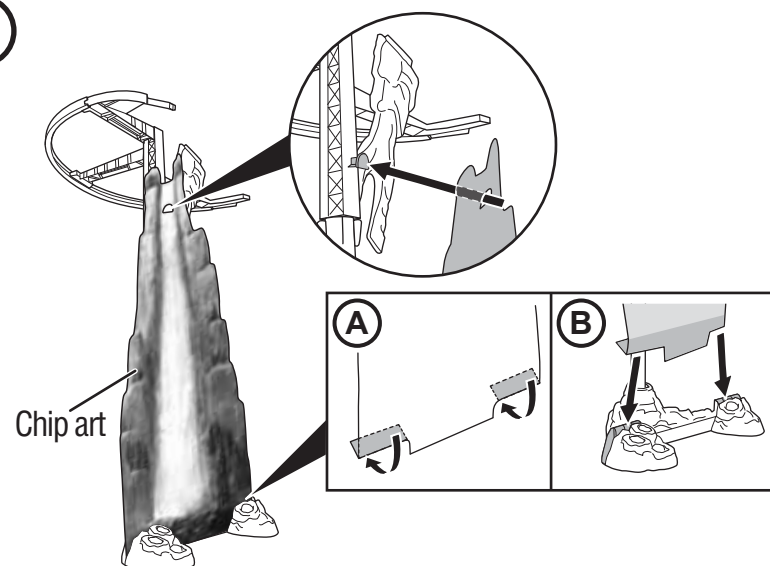


Bridge Section


①

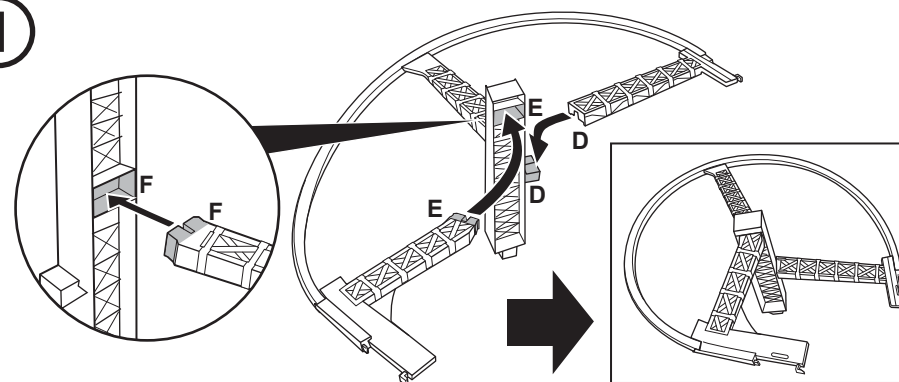


②

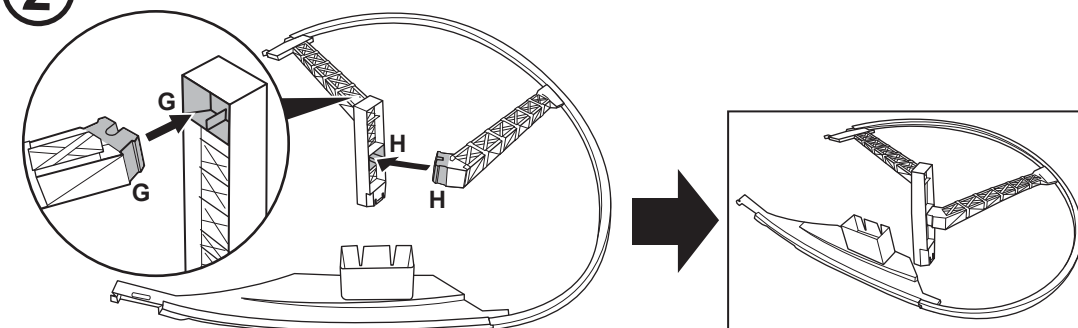



③

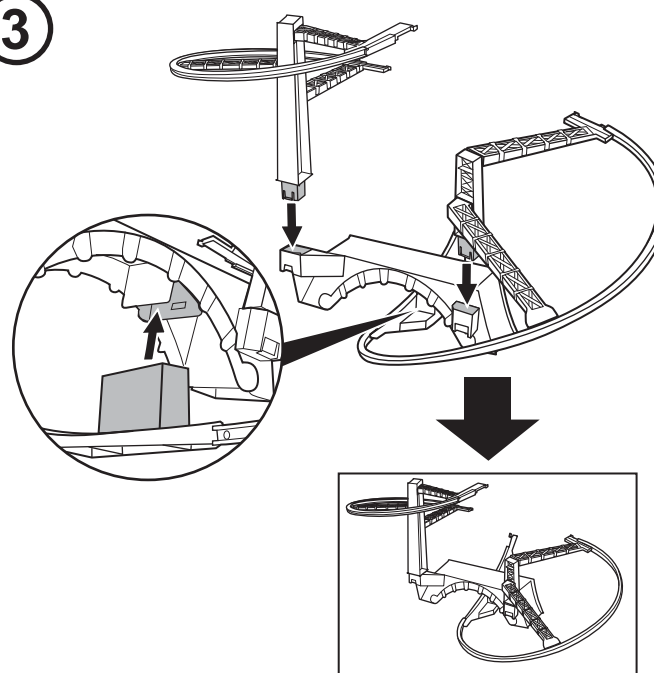

④

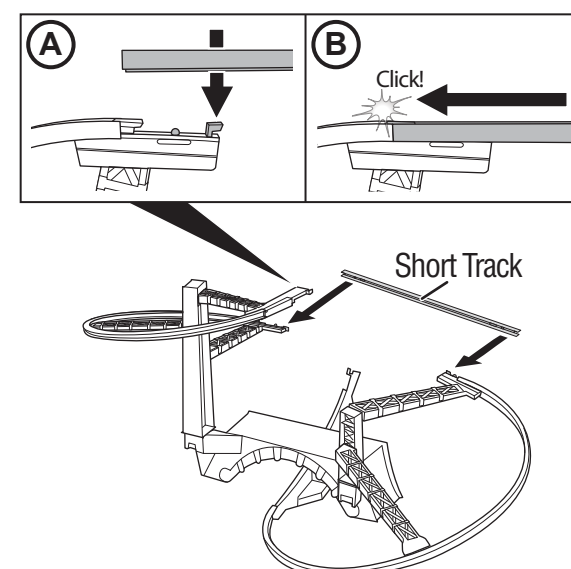

⑤

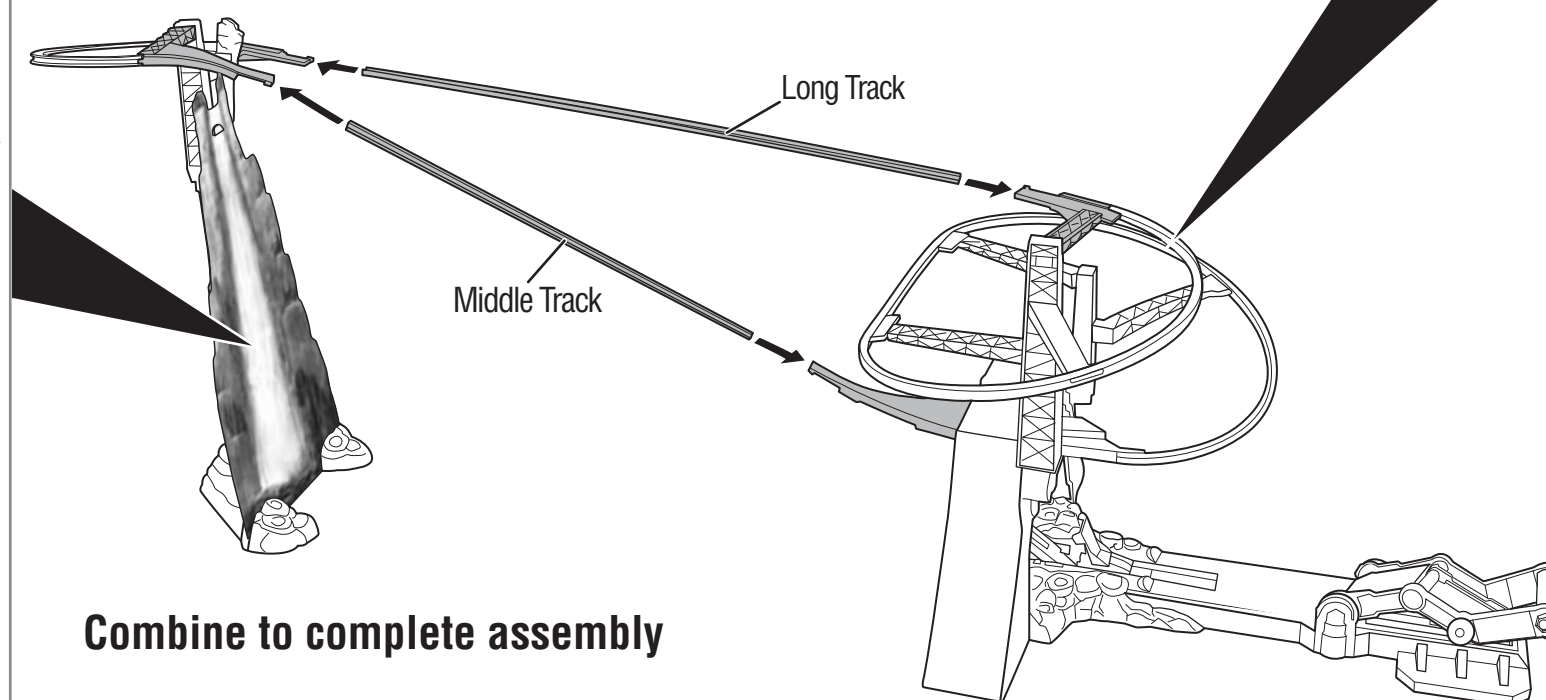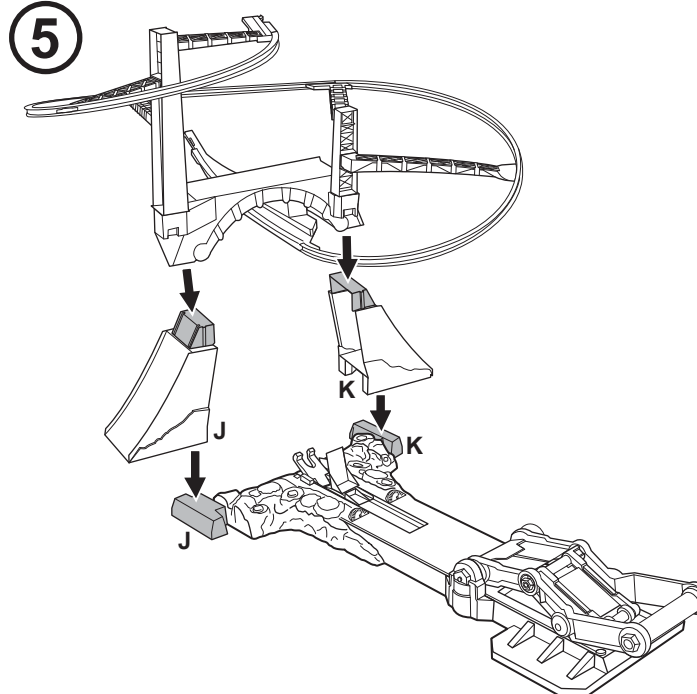

Combine to complete assembly

Accessories

Attach plane to rollers (Detach and switch plane if desired).

