



## 2 TO PLAY

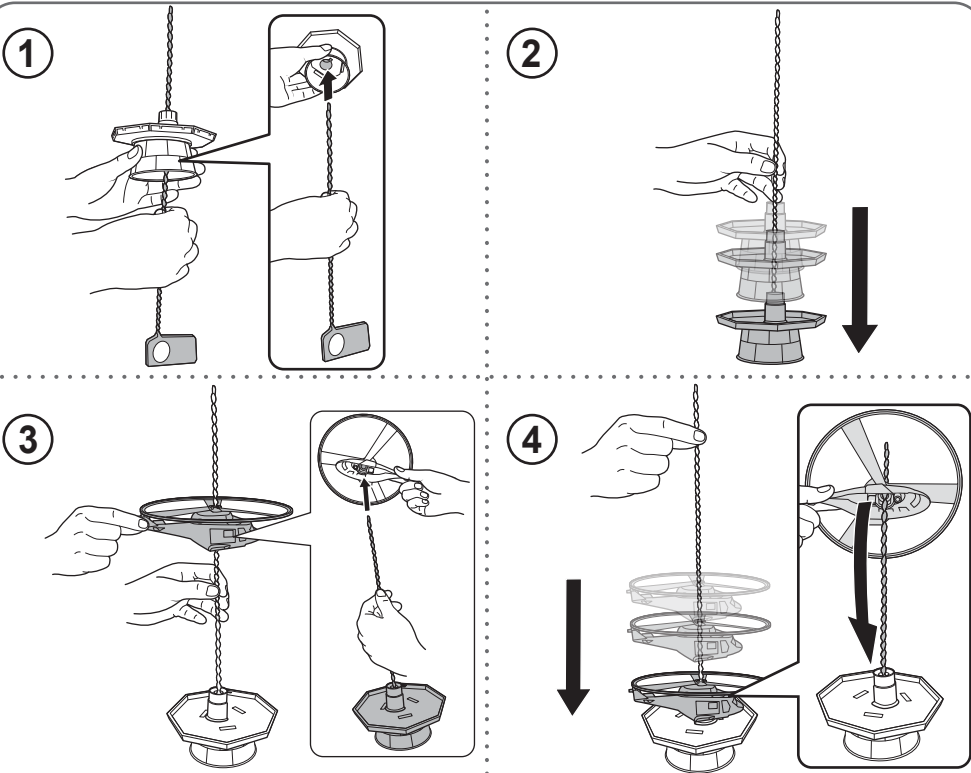

- 5 **Hold base of helipad and pull ripcord to launch. Pull harder to fly higher!**

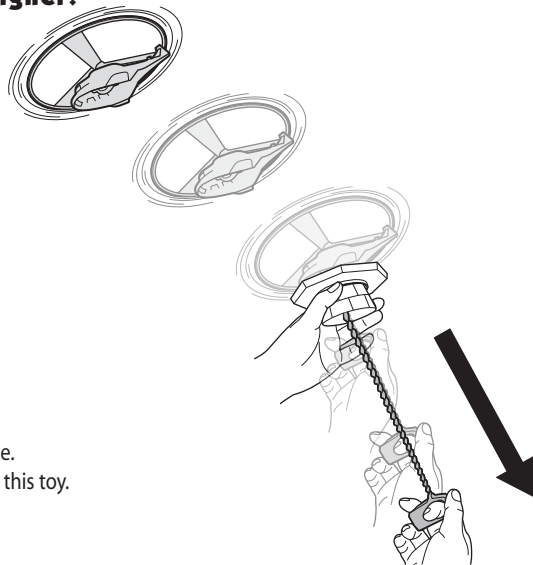


Warning: Do not aim at eyes or face.  
Only use projectiles supplied with this toy.  
Do not fire at point-blank range.

Disney  
PLANES  
FIRE & RESCUE


## RIPLASH FLYERS DELUXE BLADE RANGER INSTRUCTIONS

4+

### CONTENTS

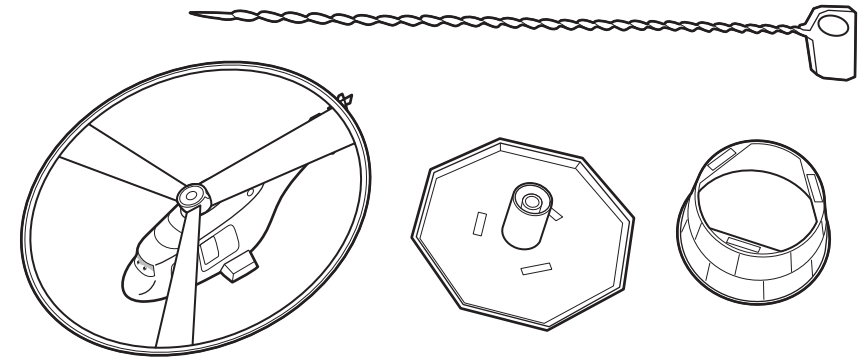

### 1 ASSEMBLY

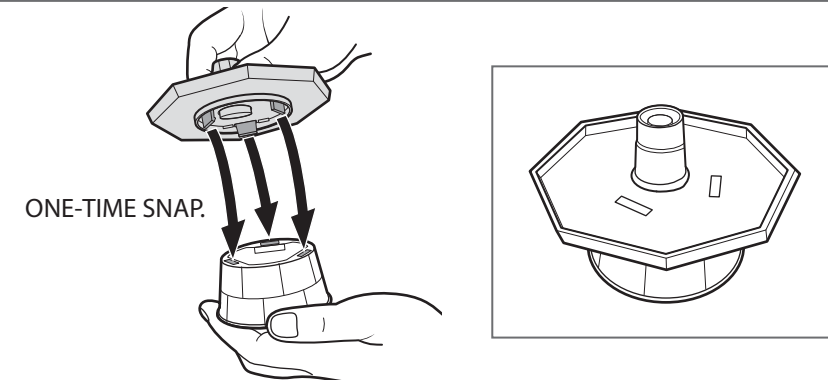

©2014 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted.  
Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.  
Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

© Disney Visit: [www.disney.com/planes](http://www.disney.com/planes)

[service.mattel.com](http://service.mattel.com)

Asst. BGP04  
BGP16-0921

