 




Lay & Play

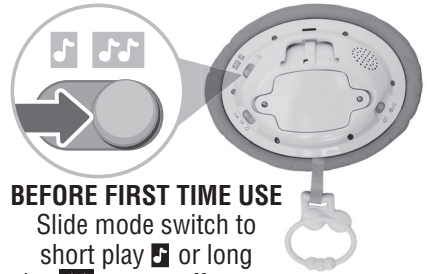

BEFORE FIRST TIME USE

Slide mode switch to short play or long play to turn off try-me demonstration mode.



Tummy time



On-the-go

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

Requires three AA batteries (included).

Batteries included are for demonstration purposes only.

Tool required for battery replacement:

Phillips screwdriver (not included).



CONSUMER ASSISTANCE
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)


service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-Impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :

- (1) il ne doit pas produire de brouillage et
- (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Battery Replacement

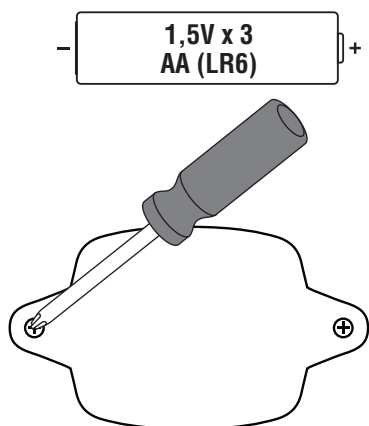

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
 - Insert batteries as indicated inside the battery compartment.
 - Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
 - Never short-circuit the battery terminals.
 - Use only batteries of the same or equivalent type, as recommended.
 - Do not charge non-rechargeable batteries.
 - Remove rechargeable batteries from the product before charging.
 - If removable, rechargeable batteries are used, they are only to be charged under adult supervision.
-
- For longer life, use **alkaline** batteries.
 - Locate the battery compartment door on the music and lights toy.
 - Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
 - Remove the exhausted batteries and dispose of them properly.
 - Insert three AA (LR6) **alkaline** batteries.
 - Replace the battery compartment door and tighten the screws. Do not over-tighten.
 - If the music and lights toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
 - When sounds or lights become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Assembled Parts



6 Hanging Toys

 


Music and
Lights Toy



Arch Assembly with Mat


Assembly

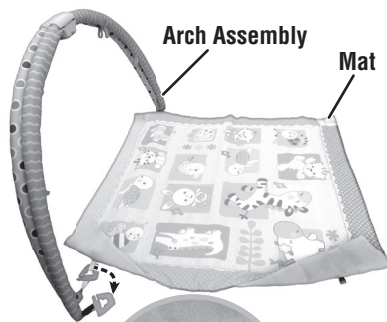

1

- Locate the hooks and loops underneath the mat. The hook straps and the loops are different colors. When properly assembled, the hook strap color will match the loop color.
- While holding the end of an arch, carefully unfasten the hook with the strap that does not match the loop.

 2

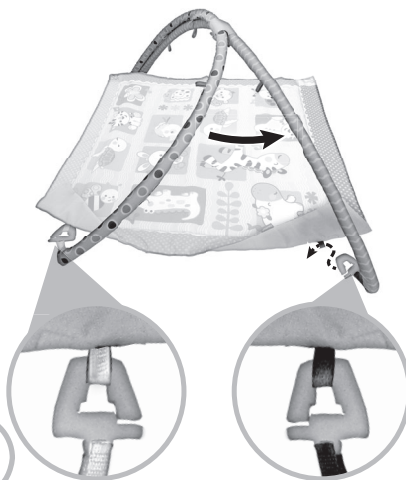

- Next, fasten the hook with strap that matches the color of the loop on the other end of the mat.
- Repeat this procedure to assemble the hooks to the loops on the other side of the mat.

Assembly

Arch
Assembly
Hub

Electronic
Toy

3

- Slide and **“snap”** the music and lights toy onto the arch assembly hub.

Music and
Lights Toy

4

- **To remove the music and lights toy and use on-the-go:** Slide the latch on the arch assembly connector and lift to remove the music and lights toy.

Storage and Care

1

- Unfasten the hooks of one of the arches and fold the arches together.

2

- Fasten the hooks to the loops on the other end of the mat (on both sides).

Care

- The mat, parrot, monkey and zebra toys are machine washable. Remove the arch assembly from the mat. Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, hard toys and music and lights toy are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

Grows with baby!

 


Hang the link on each toy to any of the loops around the gym.



WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

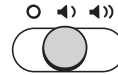

Power/Volume Switch



Music Select Switch



Mode Switch

- Slide the power/volume switch to ON with low volume , ON with high volume  or OFF .
- Slide the music select switch to:
 -  Instrumental Music
 -  Sung Songs

- Slide the mode switch to:

 **Short Play** - Tap or shake the music and lights toy for a short tune and dancing lights.

 **Long Play** - Pull the toy on the music and lights toy for up to 30 minutes of music and a light show (only if you select Instrumental Music .