

Fisher-Price®

BJT75



Keep instructions for future reference, as they
contain important information.

Requires three AA (LR6) **alkaline** batteries (not included).
Adult assembly is required. Tool required for battery installation:
Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.
This toy has no consumer serviceable parts. Do not take apart.



CAUTION

This package contains small parts.
For adult assembly only.

fisher-price.com

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

**service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.


Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

©Disney

©2013 Mattel. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, except as noted.

Assembled Parts

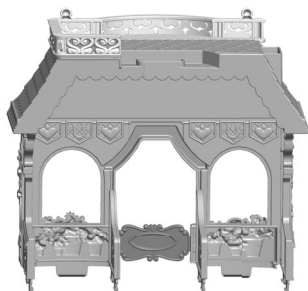


Stable



Balcony



 Flag

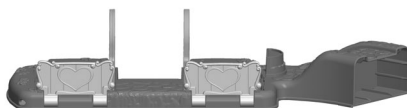


Stable Base



Front Ramp



 Back Ramp

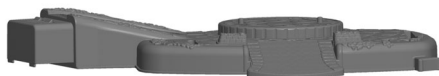


Tower Base




Lower Ramp

Part not shown: label sheet

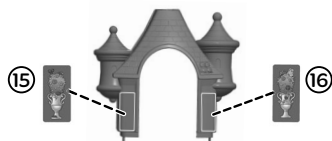


Tower Roof

IMPORTANT! Apply labels to the front of the tower roof **BEFORE** beginning assembly.

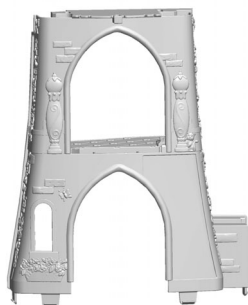


Tower

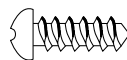 


M3,5 mm x 12 mm Screw - 3

Screw shown actual size. Tighten and loosen screws with a Phillips screwdriver. Do not over-tighten.


Assembly

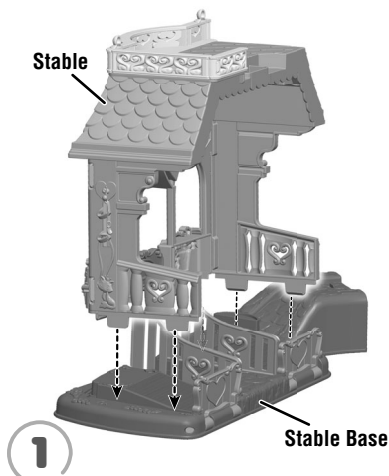


- Insert the tabs on the stable into the slots in the stable base. Push to **“snap”** in place.

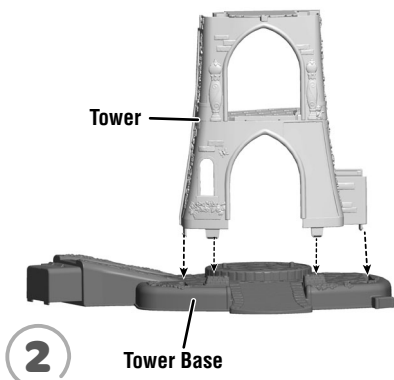

- Insert the tabs on the tower into the slots in the tower base. Push to **“snap”** in place.

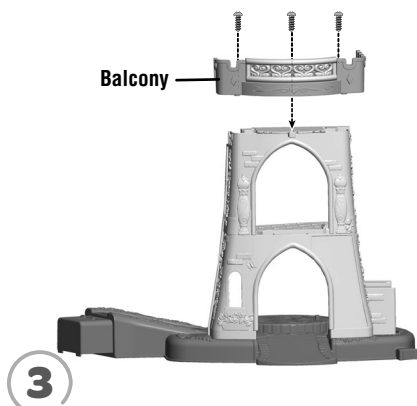


- Fit the balcony onto the tower. Insert three screws into the balcony and tighten.

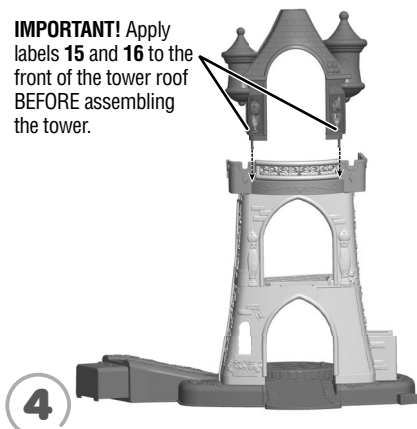


- Fit the tower roof onto the balcony. Push to **“snap”** in place.


Assembly

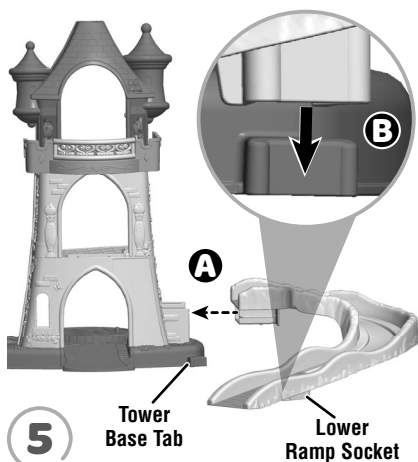


- First, slide and “snap” the upper end of the lower ramp into the side of the tower **A**. Then, push near the lower end of the ramp to fit the ramp socket to the tower base tab **B**.

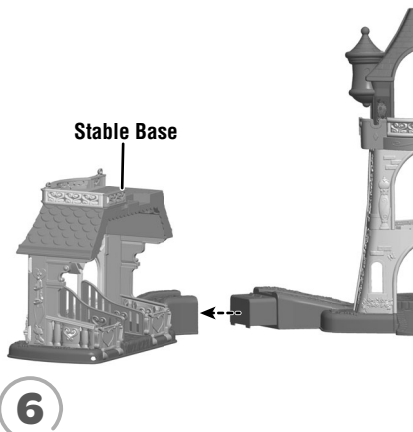

- Fit the end of the tower base into the opening in the end of the stable base. Push to “snap” each base together.

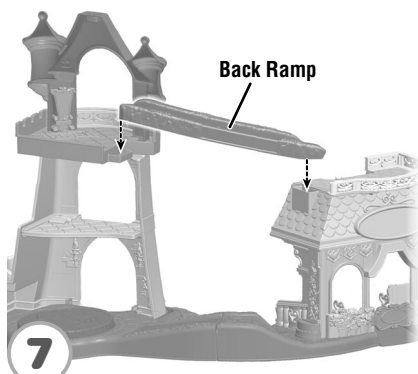


- Fit the tabs on the back ramp into the sockets in the tower and the stable. Push to “snap” each end of the ramp in place.

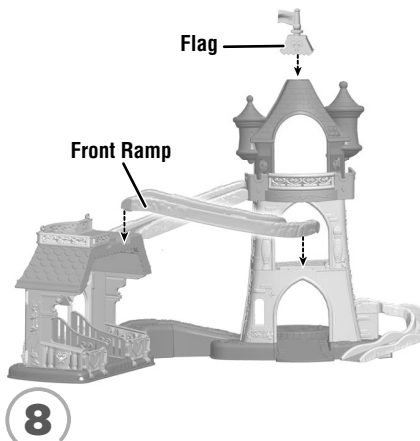


- Fit the tabs on the front ramp into the sockets on the stable and the tower. Push to “snap” each end of the ramp in place.
- Fit the flag onto the tower roof.

Decoration

Apply labels exactly as shown in illustrations. Avoid repositioning a label after it has been applied.

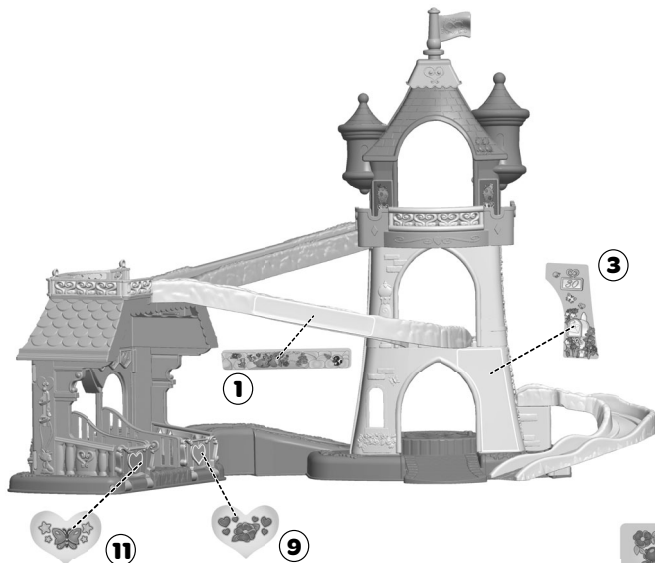


FRONT VIEW

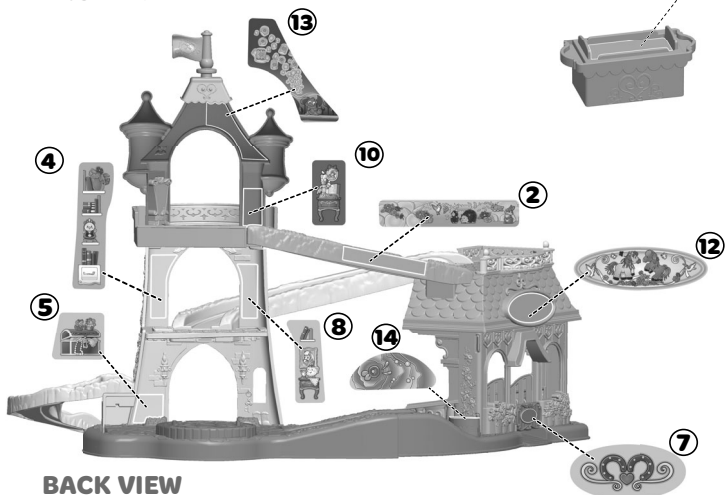

BACK VIEW

Battery Installation

Use **alkaline** batteries for longer life.

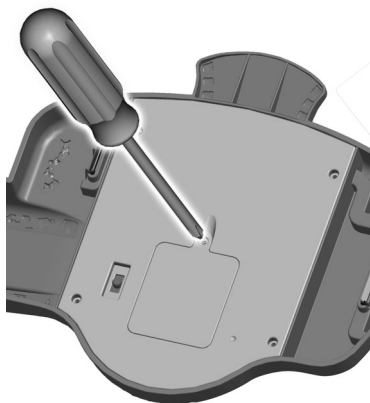


- Loosen the screw in the battery compartment door and remove the door.
- Insert three AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

 Battery Safety Information

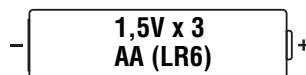

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Lots of play on all sides!



Place a horse on the ramp. Tap the tail and watch it “klip-klop” down!

Hint: For best results, be sure the ramp and the horse's feet are clean and dry. Wipe with a damp cloth to clean and dry thoroughly.

Listen to music and sounds as the horse rides through the doorway.



Slide the power/volume switch on the bottom of the toy to ON with low volume , ON with high volume  or OFF .



Spin the thumbwheel for music and to make the horse “dance”.

Hint: This toy times out after several minutes of inactivity. Spin the thumbwheel to wake it up.