

Fisher-Price®

BML40



Please keep this instruction sheet for future reference,
as it contains important information.

Requires four AA batteries (included).

Batteries included are for demonstration purposes only.

Adult assembly required for battery replacement and crib attachment.

Tool required for battery replacement: Phillips screwdriver (not included)

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

fisher-price.com

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Information



 
WARNING

Prevent Entanglement Injury


- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen. Use only the crib connector.
- Use crib connector **ONLY** attached to a crib or playpen.


IMPORTANT! Always attach with all provided fasteners tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to a crib. Check frequently.

Battery Replacement



 For longer life, use **alkaline** batteries.

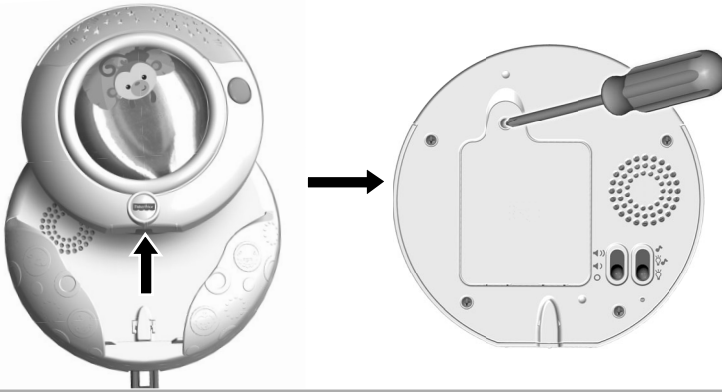

- Slide the soother out of the crib connector. Locate the battery compartment door on the back of the soother.
 - Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door. Remove the exhausted batteries and dispose properly.
 - Insert four, new AA (LR6) **alkaline** batteries.
 - Replace the battery compartment door and tighten the screw. Do not over-tighten.
 - If this product begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
 - When sounds/light become faint or stop, it's time for an adult to change the batteries.
-  • Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

 
Crib Attachment



- Slide the soother into the crib connector.
- Position the crib connector inside the crib. Make sure the attachment strap is on the outside of the crib **A**.
- Slide the end of the attachment strap down through the slot on the back of the crib connector **B**. Pull the end of the attachment strap up and fasten to the peg on the back of the crib connector **C**.

Note: This crib connector should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.


- If you have excess strap, slide the free end of the attachment strap through the opening near the top of the attachment strap **D**.

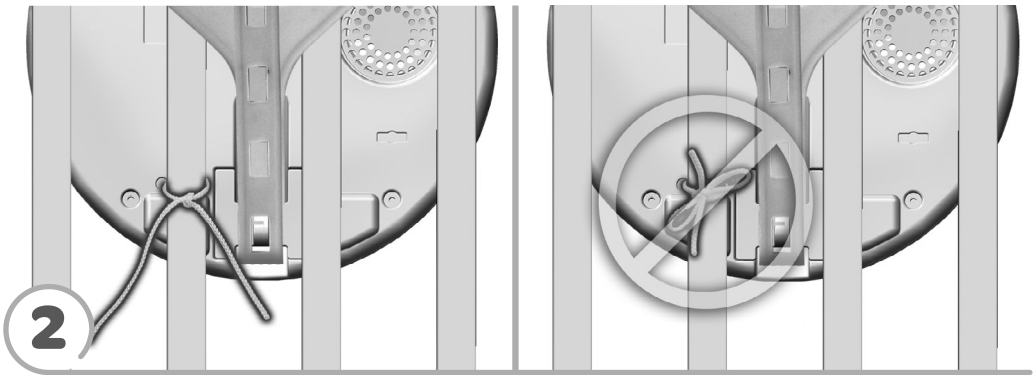

- Tie the strings to a crib spindle.

Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

 Crib Attachment

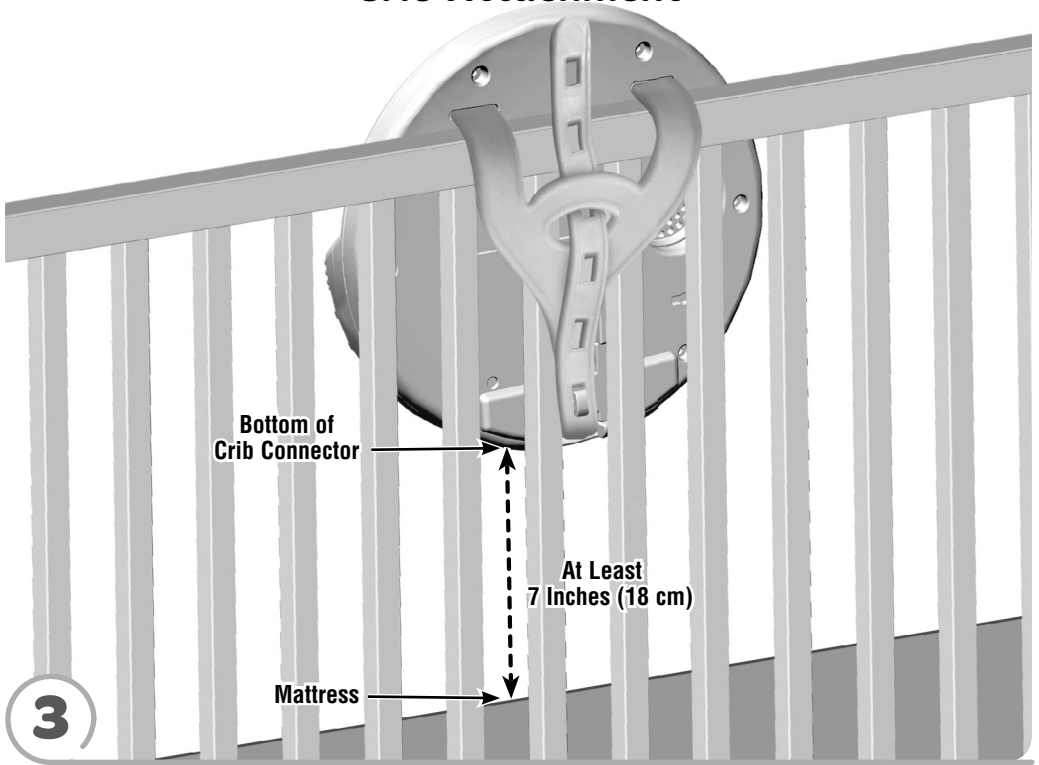



- If the distance between the crib connector and the mattress is less than 7 inches (18 cm), lower the crib mattress.

 Before First Time Use



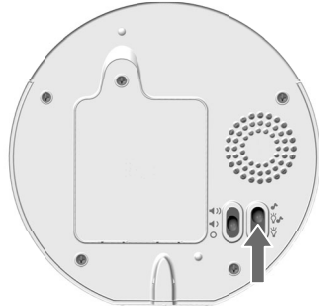


Slide the soother out of the crib connector.



Slide the mode switch to  to **turn off** try-me demonstration mode.






Slide the power/volume switch to:

-  ON with high volume
-  ON with low volume
-  OFF



Slide the mode switch to:

-  Music Only
-  Music & Lights
-  Lights Only

Soothing Music & Projection



- Slide the soother back inside the crib connector.
- Press the button to start music/lights. Press the button again to change the music. Press and hold the button to turn off music/lights.

Notes:

- This product times out after approximately 10 minutes in lights only mode; 30 minutes in music only mode; and in music & lights mode the lights will fade after approximately 10 minutes of use and the music will continue to play for approximately 30 minutes.
- Press the button again to restart.

Dresser Top & On-the-Go Use



- Slide the soother out of the crib connector for dresser top or on-the-go use.