


# Fisher-Price®

Model Number: C1159

## We've Made a Change!

Your product no longer includes  $\frac{1}{2}$ " screws.  
It now contains  $\frac{3}{8}$ " screws. You will also  
need to assemble the horns to the spire.

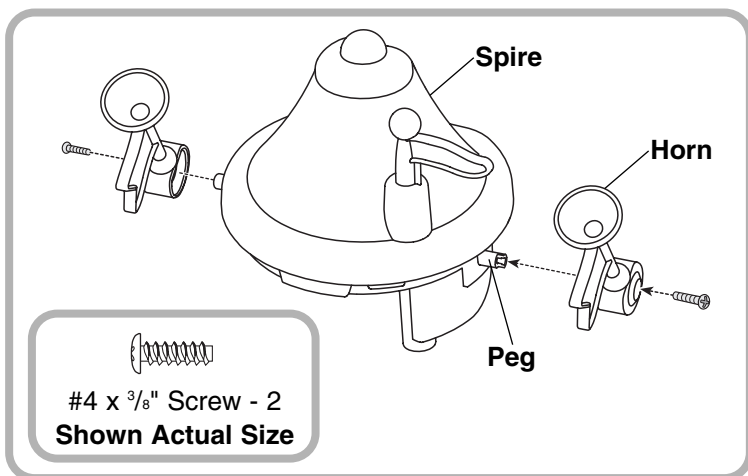

After completing assembly steps 1-2 on your original instruction sheet, follow the instructions below.

- Fit a horn onto a peg on each side of the spire.
- Insert a screw through the hole in each horn. Tighten the screws with a Phillips screwdriver. Do not over-tighten.

**Now, continue with step 3 on the original instruction sheet to complete assembly.**