



Overhead Gym



Sit & Play

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

No tools needed for assembly.

Includes non-replaceable button cell batteries.




www.fisher-price.com


### **⚠ WARNING**

To prevent possible entanglement injury, **NEVER** place gym or suspend links in crib or playpen. **NEVER** add strings, ties or other products to this item.

# **Assembly**

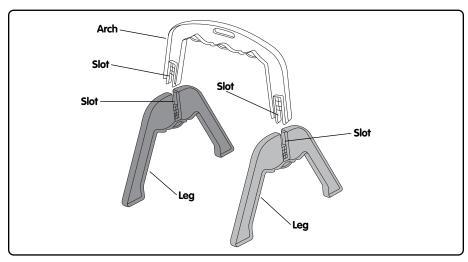

- Fit the slots in the arch into the slots in the legs.
- Push down firmly on the arch to "snap" it into the legs.

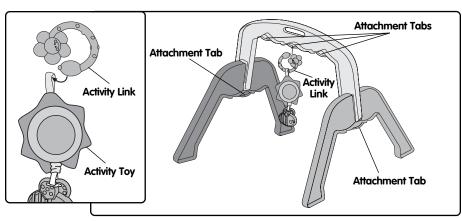

- To attach an activity link to an activity toy, gently pull open the activity link and slide the activity toy onto the activity link.
- To attach an activity toy to the play gym, gently pull open the activity link to clip it onto one of the attachment tabs on the play gym.

## **Helpful Hints**



- Pull the bee to hear fun music!
- The activity toys can be detached from the gym for take-along fun, wherever you and baby go!
- For a young baby we recommend assembling the activity links as shown in the photo above. This activity links arrangement will allow baby to reach the activity toys while lying underneath the play gym.
- Rearrange the activity toys in different locations to keep baby amused!
- As baby grows, you can remove some of the links from the play gym to keep the activity toys within baby's reach.

### **Battery Safety Information**

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Never short-circuit the battery terminals.
- Do not charge non-rechargeable batteries.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

### Care

• Wipe the Fun Links Gym<sup>™</sup> and activity toys with a clean cloth lightly dampened with a mild cleaning solution. Wipe dry with a clean cloth.

### **Consumer Information**

#### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

# **FCC Note (United States Only)**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

  Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

#### For countries outside the United States:

CANADA: Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.