

**Floor Quilt****Crawl-Through Aquarium**

Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.

No tools needed for assembly.

For ages birth and up.




www.fisher-price.com

Kick'n Crawl™ Aquarium


WARNING

To prevent entanglement injury, never place play quilt in a crib or playpen.
Never add strings, ties or other products to this item.

Assembling the Play Quilt

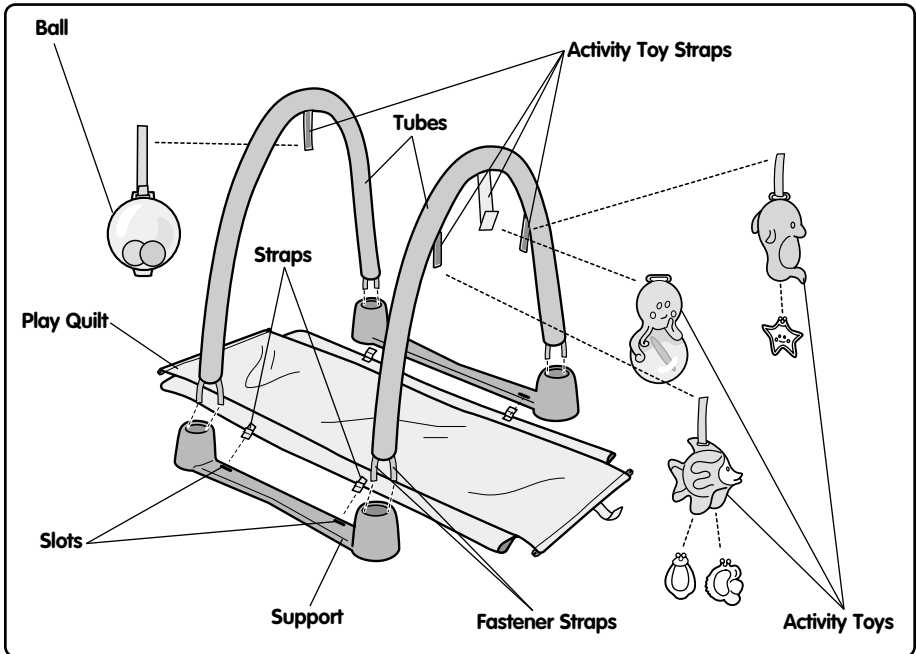


- Place the play quilt print side up on a flat surface.
- Fit the two straps on each side of the play quilt down through the slots in the supports. Make sure the tab at the end of each strap forms a "T" under the support. Pull up on the play quilt to be sure it is secure to the supports.

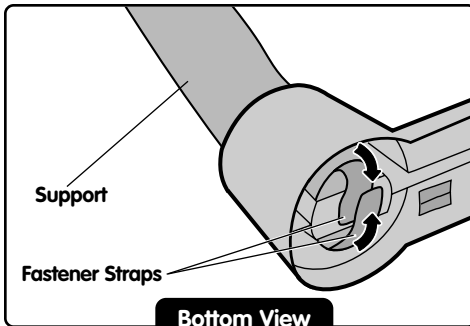


- Fit the two small fastener straps on each end of the tubes through the slots inside the circular opening in the supports. Fasten the fastener straps together to secure the tubes to the supports.

Attaching the Activity Toys

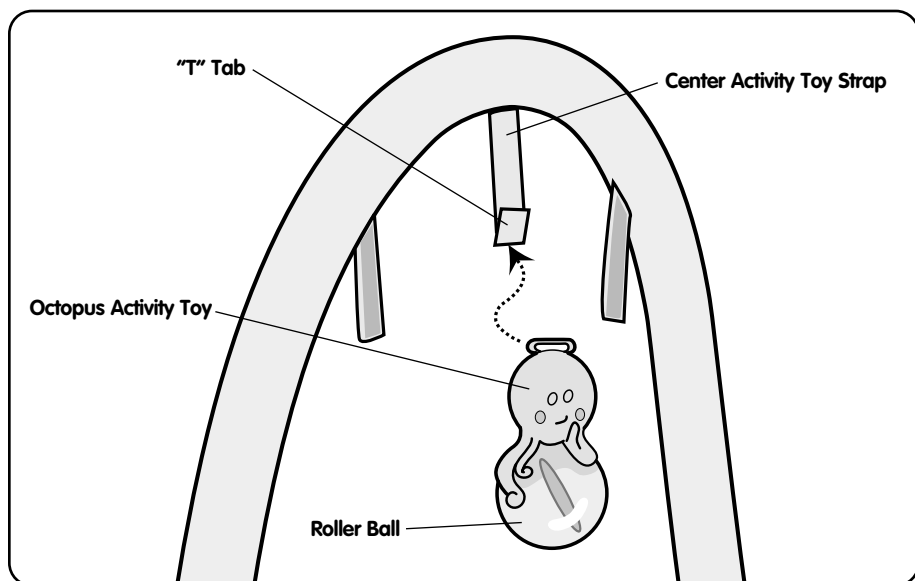


- Locate the tube with three activity straps.
- Insert the center strap on the tube through the slot in the top of the octopus activity toy. Make sure the tab at the end of the strap forms a "T" under the slot.
- Pull firmly on the octopus activity toy to be sure it is secure.
- Spin the roller ball on the octopus activity toy to hear a friendly tune and see flashing lights!
- Fasten the remaining activity toys to the other two activity toy straps on the tube.
- Inflate the ball and fasten it to the activity toy strap on the other arch.

Assembling the Crawl-Through Aquarium

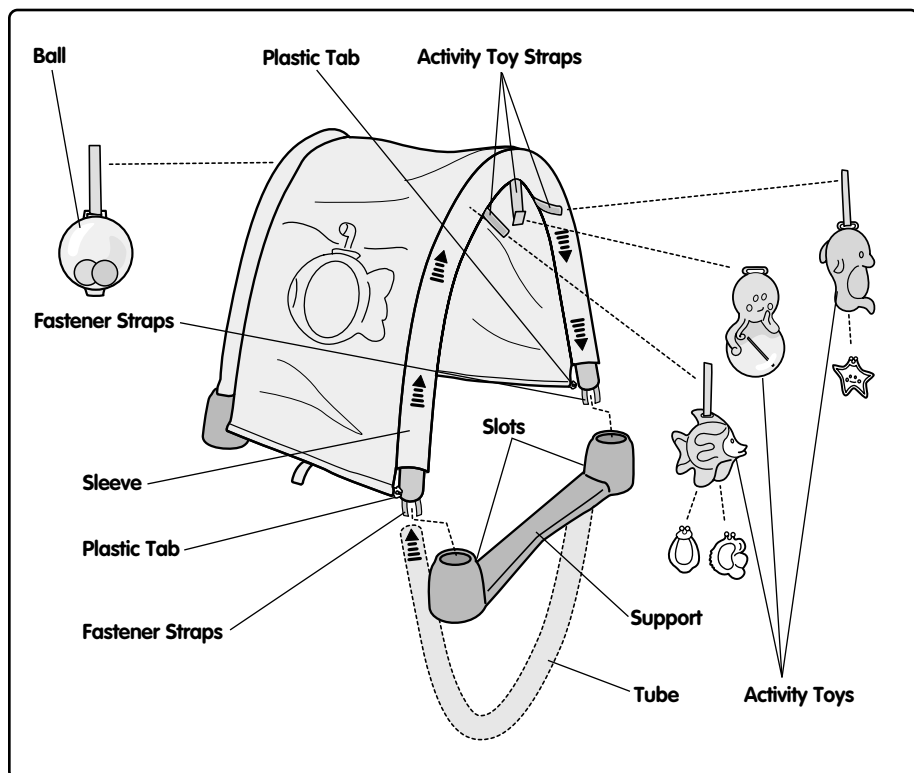

- Slide the tubes through the sleeves in each side of the play quilt.
- Position the supports so that the sides with the slots face inward.
- Fit the two small fastener straps on each end of the tubes through the slots inside the circular openings in the supports. Fasten the fastener straps together to secure the tubes to the supports.
- Fit the plastic tabs at the corners of the play quilt into the slots in the supports.
- Fasten the activity toys to the activity toy straps.

Carry-Along

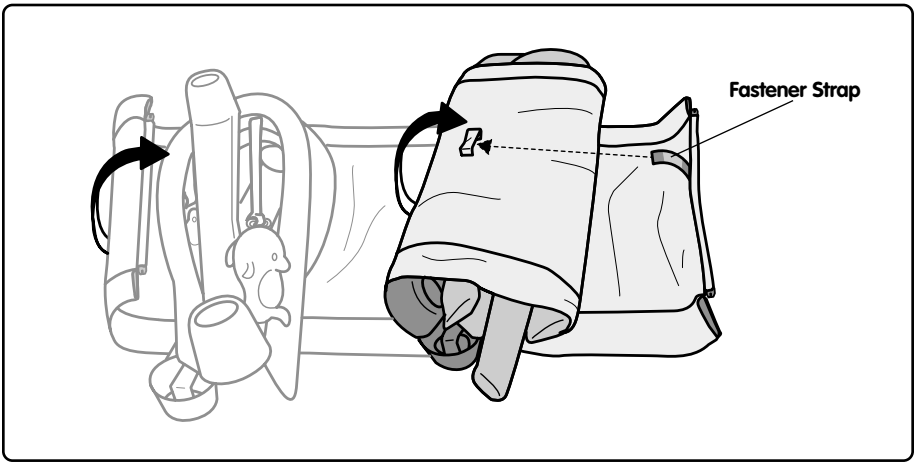

- Place the play quilt print side up on a flat surface.
- Attach the activity toys to the straps on the sides of the play quilt and place the toys on top of the quilt.
- Locate the fastener strap at one end of the play quilt. Place the supports and tubes at the opposite end of the play quilt and roll the play quilt from end to end.
- Fit the fastener strap through the loop on the outside of the play quilt and fasten to close.

Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Never short-circuit the battery terminals.
- Do not charge non-rechargeable batteries.
- Do not dispose of this toy in a fire. The batteries inside may explode or leak.

Care

- Machine-wash the play quilt in cold water on the gentle cycle. DO NOT use bleach. Tumble dry on low heat.
- Surface wash the tubes, activity toys and supports with a mild cleaning solution.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA: Questions? **1-800-567-7724**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.