

BATTERY SAFETY INFORMATION

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy (product). Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removable, rechargeable batteries are used; they are only to be charged under adult supervision.





WARNING: CHOKING HAZARD - Toy contains small balls and small parts. Not for children under 3 years.






• Toy Contains Small Balls/Small Parts.
• Keep these instructions for future use; they contain important information.

BATTERY REPLACEMENT


- CLEANING Brush away loose dirt, then wipe with a damp cloth. DO NOT IMMERSE IN WATER.
- · Batteries included are for demonstration purposes only.
- If sound distorts, or light dims, replace batteries.
- Unscrew and remove the battery cover. Remove the old batteries and dispose of them safely.
- Insert 3 new "AA" (LR6) batteries as shown in the diagram. Alkaline batteries provide best results.
- Make sure that polarity is correct.
- Replace the battery cover and its screw.

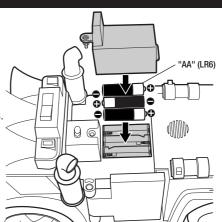

OPERATION



Do not fire at people or animals or at point blank range.

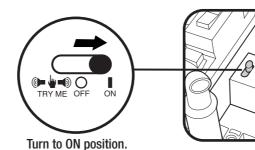

Normal Play: Slide switch to "ON" position instead of "TRY ME" position after unpacking the toy to play in full function.

