

www.fisher-price.com



Parts


- A. 4 End Rails
- B. 4 Side Rails
- C. 4 Supports
- D. Span
- E. Main Tower
- F. 4 Small Towers
- G. 2 Span Ends

Please keep this instruction sheet for future reference, as it contains important information.


Adult assembly is required.

No tools needed for assembly.

Younger children may need parental assistance building elevated GeoTrax[™] layouts. The more your child plays with these toys, and development and skill increases, the less assistance your child will need!

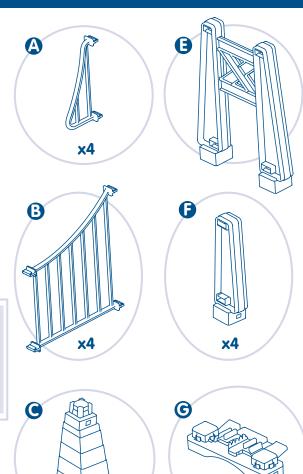


x2

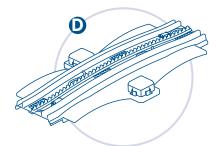


x4


Assembly

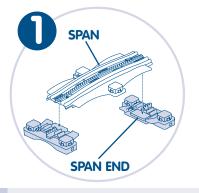

"Snap" the span ends onto the span.

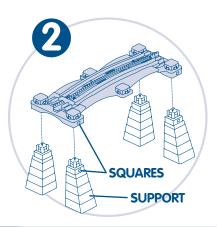

- Locate the square mark on both the side of a support and on the span assembly. Match the squares and "snap" the support into the underside of the span assembly, as shown.
- "Snap" the remaining supports into the span matching the square marks on each.

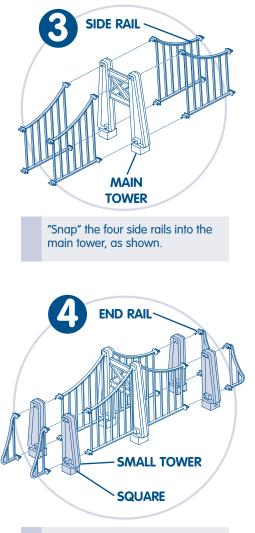


- Locate the square mark near the bottom of each small tower.
- With the square marks facing out, "snap" the small towers to the side rails, as shown.
- "Snap" the end rails to the small towers, as shown.

Multiple Level of Track Layo



"Snap" each of the towers onto the span assembly.

Assembly is now complete!

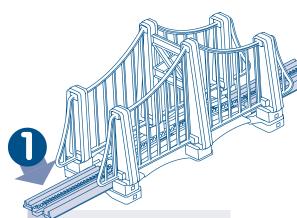


- To build a ground-level layout, separate the span assembly from the supports and place the span assembly on the floor.
- Attach straight tracks (sold separately) to either end of the span assembly.





ls uts!

TRACK NOT INCLUDED

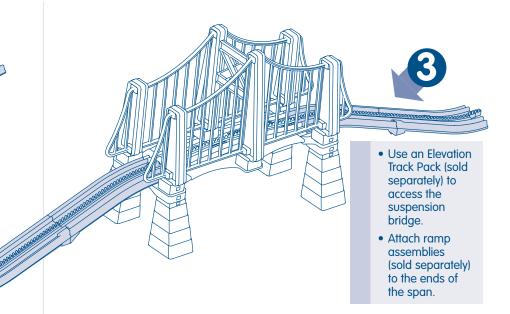



Elevation Track Packs take your GeoTrax[™] Rail & Road System to a whole new level!



Elevation Track Packs work with all GeoTrax[™] Rail & Road Track Packs. Multiple Elevation Track Packs used to create this configuration. Playset and accessories sold separately and subject to availability.





www.fisher-price.com

Questions? We'd like to hear from you!

Call Fisher-Price[®] Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price[®] Consumer Relations, 636 Girard Avenue East Aurora, New York 14052, U.S.A.

For other countries outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. Great Britain: telephone 01628 500302. Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312. New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland. Asia: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

PRINTED IN CHINA C5216pr-0920