




IMPORTANT!

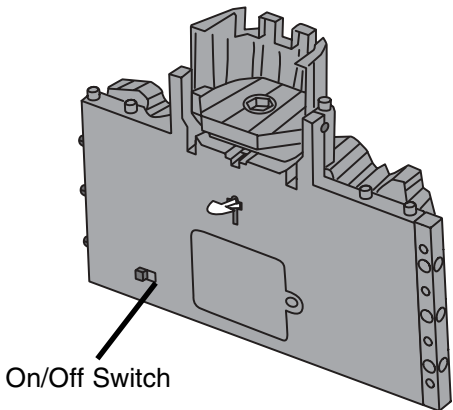

On/Off Switch

If the on/off switch is turned on ● and sounds and lights do not work, try sliding the switch off ○, then on ● again.

If sounds and lights still do not work, replace the batteries as indicated on page 3 of the original instruction sheet.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
©2004 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

PRINTED IN CHINA

C5235pr-0921