

**Fisher-Price®**

# Learning Table™

[www.fisher-price.com](http://www.fisher-price.com)

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for  
battery replacement:  
Phillips screwdriver  
(not included).



Green  
square

1-2-3

**Laugh & Learn™**



# 2 interactive play modes

 
 
## 1. Learning time

**ABC**


## 2. Music fun




Stir the soup bowl	<b>ABC</b> Hear the A-B-C song or a fun phrase
	Hear a fun song
Press the pizza shape buttons	<b>ABC</b> Learn the color or shape of the button you pressed or hear a fun sound effect
	Hear three musical notes – play like a piano
Lift up the napkin	<b>ABC</b> Hear a peek-a-boo greeting
	Hear a fun tune – flip the napkin down and the music stops
Press the sippy cup	<b>ABC</b> See it magically fill and empty and learn about opposites
	See it magically fill and empty with fun music or sound effects
Spin the apple, Slide the berries Press the banana	<b>ABC</b> Learn about colors and textures
	Hear more enjoyable songs
Press the cookie	<b>ABC</b> Hear the numbers counted to 10 in a fun song or hear a fun phrase
	Hear a another song or a fun sound effect
Twist the salt and pepper shakers	<b>ABC</b> Hear a fun sound effect
	Hear short song

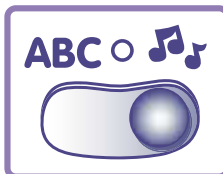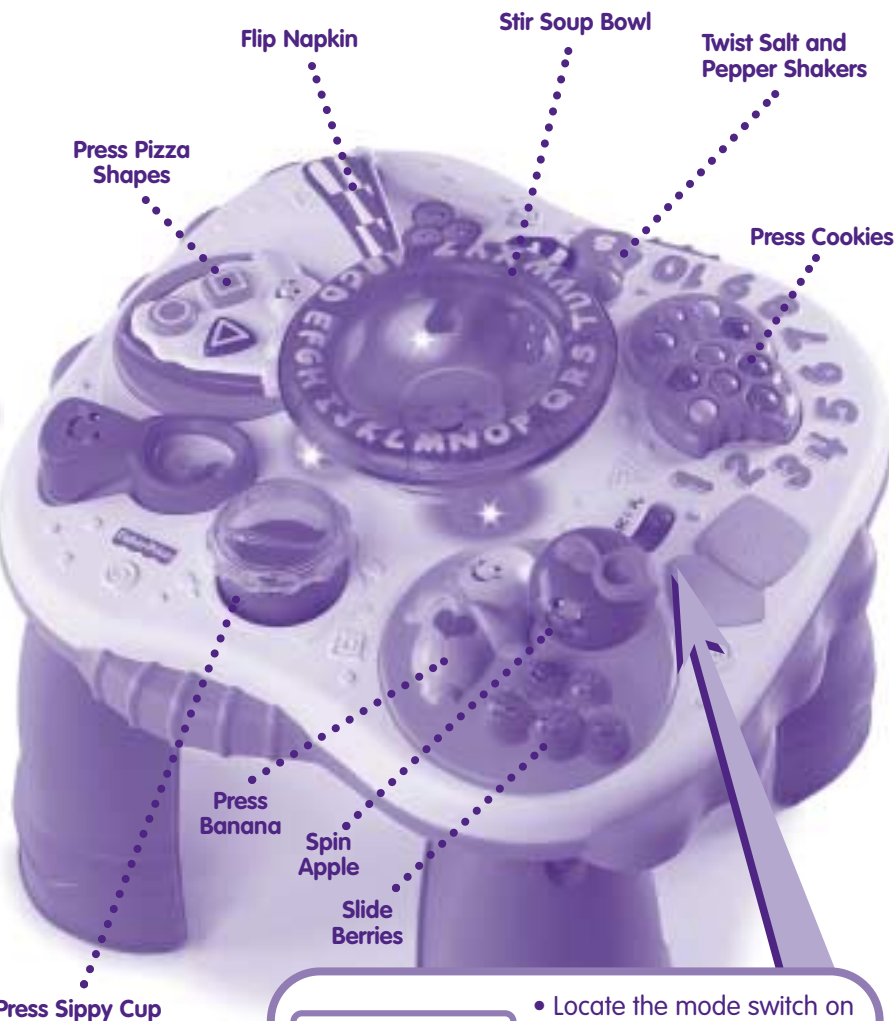

**MODE SWITCH**

- Locate the mode switch on the top of the toy.
- Slide the mode switch to either learning mode **ABC**, music mode , or off **O**.
- When your child is finished playing with this toy, slide the mode switch to the off **O** position.
 
# Battery Replacement

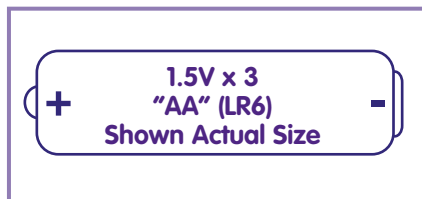


**Note:** We recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment on the underside of the tabletop.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

**Hint:** We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

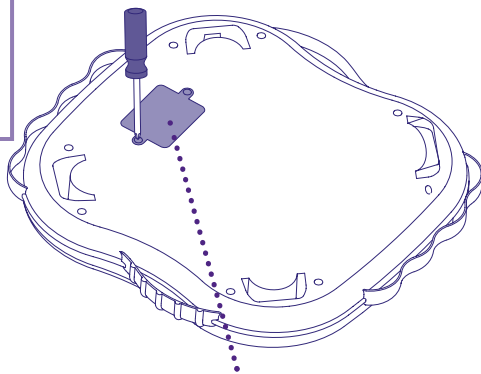


**Battery Compartment Door**

## Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Assembly

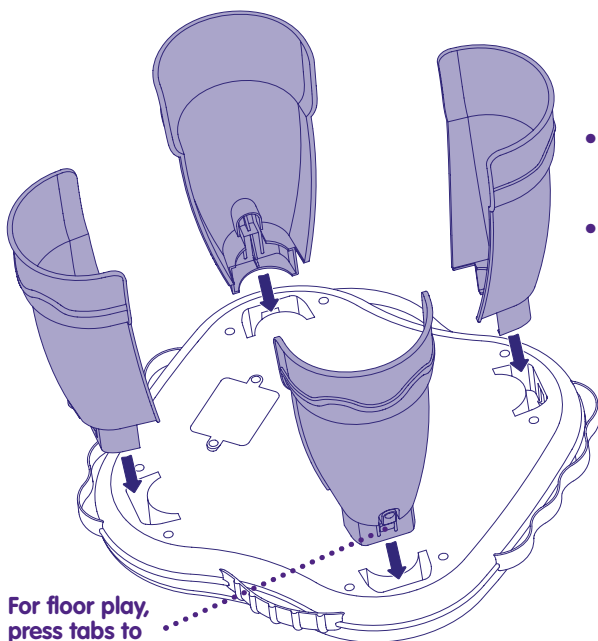

- Turn the tabletop upside down on a soft surface.
- Insert and “snap” the legs into the slots in the tabletop.

For floor play,  
press tabs to  
remove the legs

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.

## Consumer Information

### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

#### For countries outside the United States:

**CANADA Questions? 1-800-567-7724.** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**GREAT BRITAIN** Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

**AUSTRALIA** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**NEW ZEALAND** 16-18 William Pickering Drive, Albany 1331, Auckland.

**ASIA** Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



## Learn each day— through fun, familiar play!

Our Laugh & Learn™ toys build upon babies' innate curiosity and the natural way they learn through everyday experiences. Whether baby is stirring the soup for A-B-C's or pressing the sippy cup to see it fill and empty, the Laugh & Learn™ Learning Table™ provides baby with the opportunity to imitate mom and dad to learn the alphabet, numbers, colors, shapes, words, opposites, actions, textures, manners and more!

The Laugh & Learn™ Learning Table™ has two interactive modes of play – learning time and musical fun. Simply slide the switch and stir, flip, spin, press and twist for a whole new way to play! Snap the legs to the table top for walk around fun or remove them for sit and play fun!

**Look for other  
Laugh & Learn toys ...**



**Learning Phone™**

C6324



**Learning Home™**

C6327



**Learning Birdbath™**

C6513



**Learning Puppy™**

C6325