



Please keep this instruction sheet for future reference, as it contains important information.

Requires three “AA” batteries (included).

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).




Before Use

⚠ CAUTION

Please keep small parts such as the plastic tab out of children's reach. Throw the plastic tab away.

Note: A plastic tab was attached to the toy for in-store demonstration purposes. While the tab may have already been removed, check the back of the toy to be sure. If the plastic tab is still attached, open the fasteners on the back of the toy and pull and remove the tab. Close the fasteners and throw the plastic tab away.

Battery Replacement

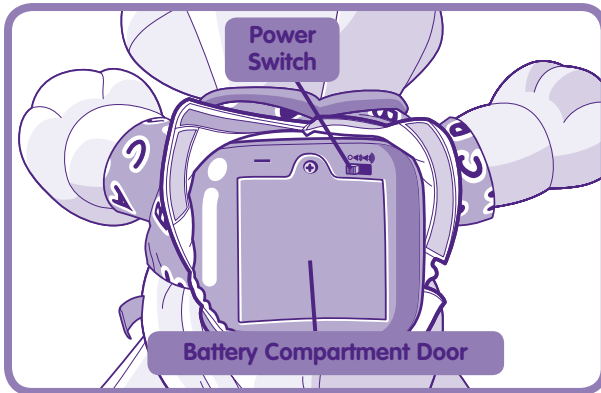

For best results, we recommend replacing the batteries that came with this toy with three, new “AA” (LR6) alkaline batteries.

- Open the fasteners on the back of the toy to access the battery compartment.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door. Throw the exhausted batteries away.
- Insert three, new “AA” (LR6) **alkaline** batteries.

 
Hint: We recommend using **alkaline** batteries for longer battery life.

- When sounds become faint or stop, it's time for an adult to change the batteries!
- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- Close the fasteners on the toy.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

FCC Statement

United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

2 Interactive Play Modes!

- Locate the mode select switch on puppy's left foot.
- Press the left foot to turn the toy on and start in learning mode. Press again for music mode. Press once more to turn the toy off.

Hint: If you'd like your child to play with this toy without sounds, there is a power switch near the battery compartment. Open the fasteners on the back of the toy, and slide the switch to either on with low volume 🔊; on with high volume 🔊; or off ⏻.



ABC Learning Mode

- Press the puppy's right foot, left hand, nose, tummy or right ear to hear it identified followed by a short ditty. Press again to learn a color.
- Press the note button 🎵 on the puppy's right hand to hear fun learning songs.

🎵 Music Mode

- Press the puppy's right foot, right ear, nose or hands to hear a fun song. Press again to hear a fun phrase.
- Press the puppy's tummy to hear another fun song. Press again to hear the puppy giggle and bark.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- This toy has no consumer serviceable parts. Do not take this toy apart.



Consumer Information



Visit us on line at www.service.fisher-price.com

Call our Consumer Relations Department, toll-free at **1-800-432-5437**, 9 AM - 7 PM EST Monday through Friday and 11 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.



K7164

Create a world of learning at home!
Make learning more fun with the whole collection of **Laugh & Learn™** toys. With rich music, lyrics and lots of activities, they combine early academics and everyday experiences, for the way kids really learn.

Each sold separately and subject to availability.



K7165



G6167



L5846



C5522



K6423



K0468



G6685



K6422



H6372



J2462



L3479

For countries outside the United States:

CANADA: Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.