



www.fisher-price.com








GeoTrax
Rail & Road System

Mile High Mountain™

Parts

- A. Mountain Half (with Tunnel)
- B. Mountain Half (with Trees)
- C. Platform with Fence
- D. Mountain Top
- E. Chalet
- F. Tree Cluster
- G. Lower Spiral Track
- H. Upper Spiral Track
- I. Straight Track
- J. Small Ramp
- K. 4 Support Pillars
- L. Guardrail (plain)
- M. Guardrail with Tabs
- N. Tunnel
- O. Tunnel Track Support
- P. Track with Barrier
- Q. Lower Ramp
- R. Upper Ramp
- S. Crate
- T. Loader Engine
- U. #4 x 1/2" Screw – 8

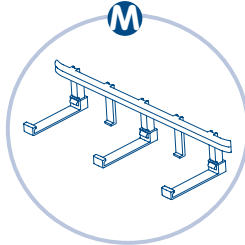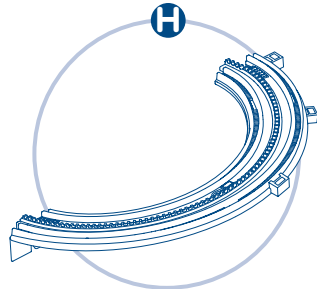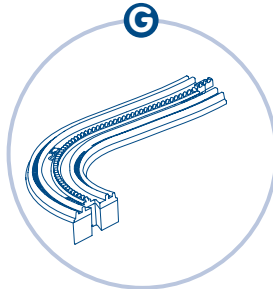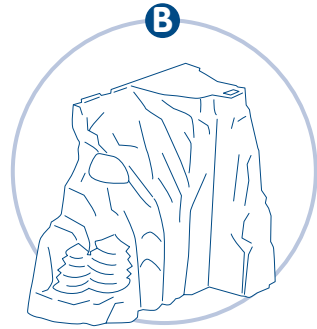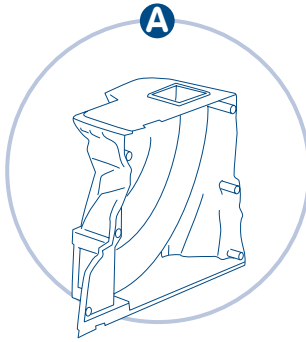



Please keep this instruction sheet for future reference, as it contains important information.

Adult assembly is required.


Tool required for assembly:
Phillips screwdriver
(not included).

WARNING


This product contains small parts in its unassembled state. Adult assembly is required.

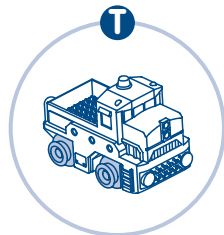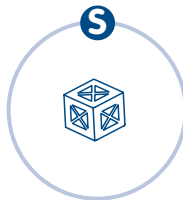

C

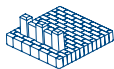

D

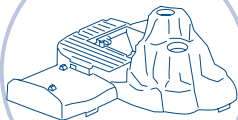


E



F



I

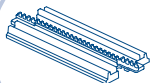


J



K




L

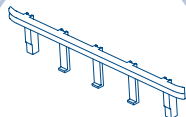


O




P

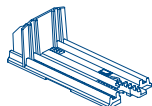

Q

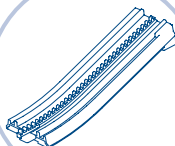

R

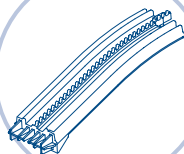

U




x8


Fastener Shown Actual Size




Assembly

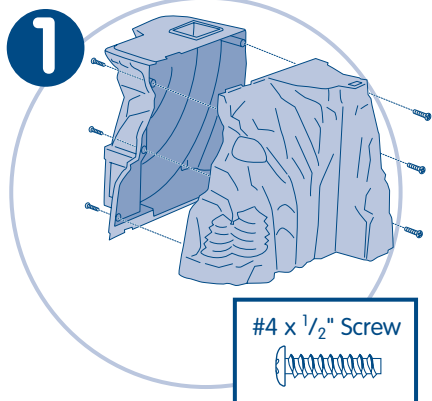


- Fit the two mountain halves together, as shown.
- Insert six screws into the mountain assembly and tighten the screws with a Phillips screwdriver. Do not over-tighten.

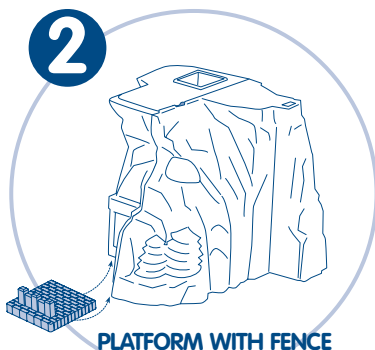


"Snap" the mountain assembly onto the platform with the fence.

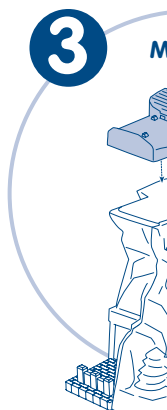


"Snap" top of assem

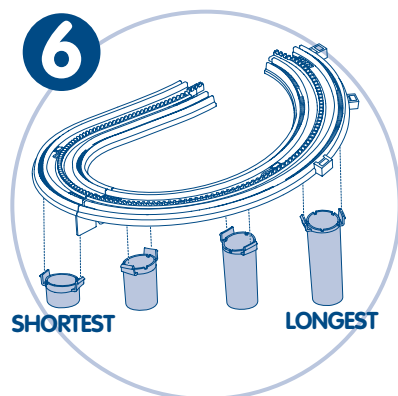

"Snap" the support pillars to the underside of the spiral track assembly, as shown, working from the shortest pillar to the longest.

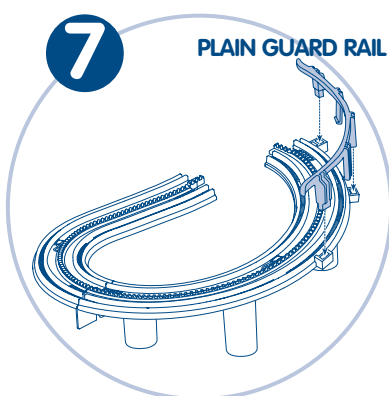

"Snap" the plain guardrail into the slots in the upper spiral track.

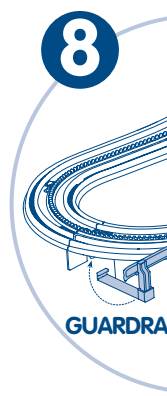


GUARDRA

- Locate the guardrail with the
- Fit a tab of the guardrail into the spiral track
- Bend the guardrail to fit the lower spiral track



MOUNTAIN TOP

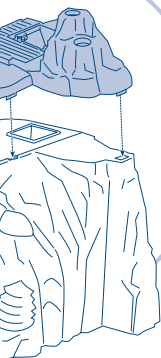


"Snap" the mountain
into the mountain
assembly.

4

TREE CLUSTER


CHALET

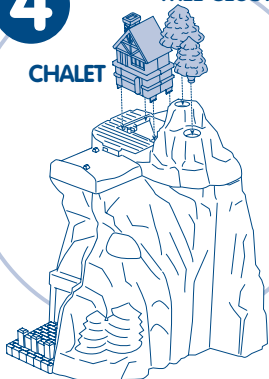

"Snap" the tree cluster
and the chalet into the
mountain top.


5

LOWER SPIRAL TRACK

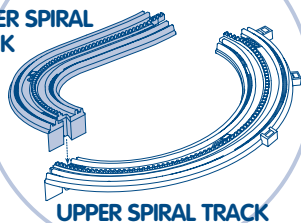

UPPER SPIRAL TRACK

Slide the tab on the
upper spiral track into
the groove in the lower
spiral track to join the
two parts.

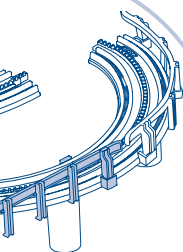


RAIL WITH TABS

Fit the other guardrail
with tabs.
Slide one end of the
guardrail under the lower
track, as shown.
Slide the guardrail slightly
under the other two tabs to
attach to the upper spiral track.

9


TUNNEL TRACK SUPPORT

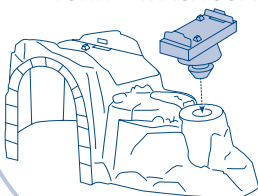

"Snap" the tunnel track
support to the tunnel.

10

UPPER RAMP

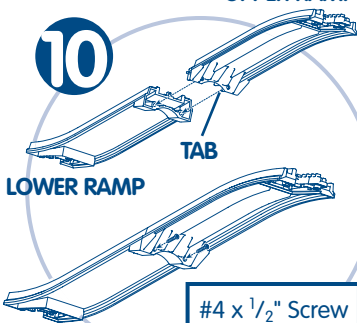

LOWER RAMP

#4 x 1/2" Screw




- Fit the tabs on the upper ramp into the slots in the lower ramp.
- Insert two screws into the upper ramp. Tighten two screws with a Phillips screwdriver. Do not over-tighten.


Assembly is now complete!

Track Layouts


Try making the suggested layout shown here.

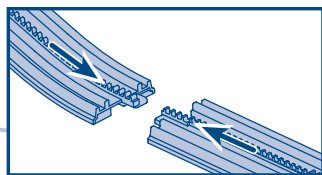

Track pieces easily snap together.

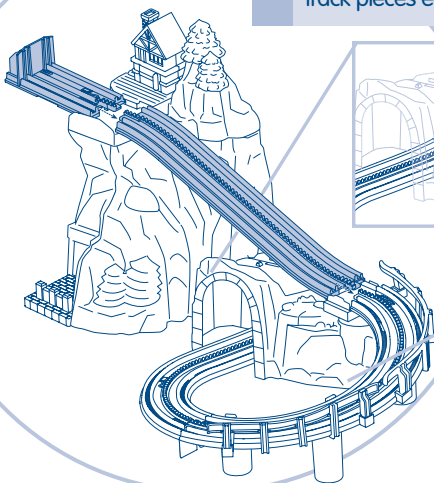

Set up this way to connect to the Tracktown Railway™ or Cross Valley Junction™ (each sold separately).

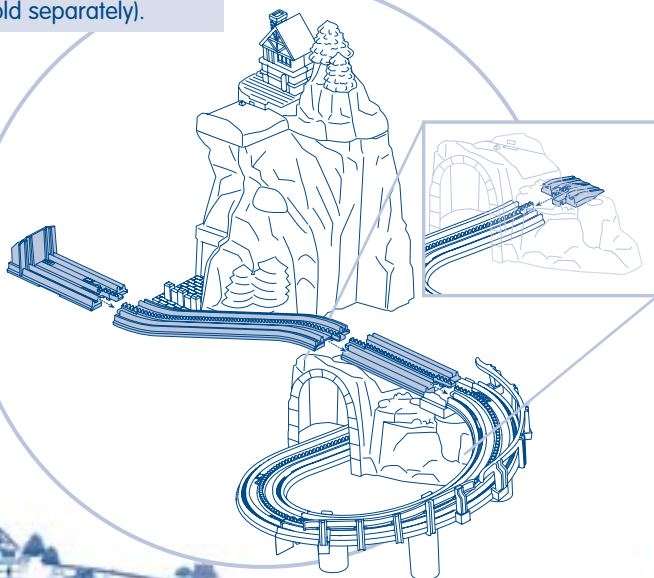


Load the Crate!



1
Load the crate into the chalet.




2
Close the chalet door.

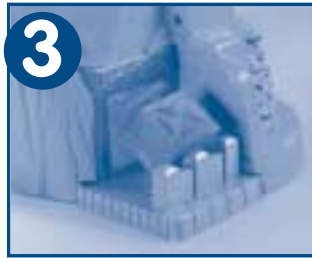

3
The crate tumbles out the door at the bottom of the mountain.

The more you collect, the more fun it gets!



Add the C6449 Elevation Track Pack - Ramps (sold separately) to build this layout and climb to the top of the mountain.



For additional layout ideas, visit the GeoTrax™ section of www.fisher-price.com



Playsets and accessories sold separately and subject to availability.
Two of each Elevation Track Packs used to make this configuration.

Fisher-Price®

GeoTrax™
Rail & Road System

**For layout ideas visit the
GeoTrax™ section of
www.fisher-price.com**

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**,
8 AM - 6 PM EST Monday through Friday. Hearing-impaired
consumers using TTY/TDD equipment, please call 1-800-382-7470.
Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue,
East Aurora, New York 14052, U.S.A.

Wipe the toy with a clean damp cloth.

For other countries outside the United States:

Canada: call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R
3W2. **Great Britain:** telephone 01628 500302. **Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag
#870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312. **New Zealand:** 16-18 William
Pickering Drive, Albany 1331, Auckland. **Asia:** Mattel East Asia Ltd, Room 1106, South Tower,
World Finance Centre, Harbour City, Tsimshatsui, HK, China.