

Fisher-Price
**PowerTouch
GAMES**



SpongeBob SquarePants Sea Science **GAME**

Interactive PowerTouch™ Game



For 1 or 2 Players

Designed For Ages 4+



Object of the Game

Be the first player to get to the treasure chest.

Contents

Game Board, Cartridge, 2 Game Pieces

Set-Up

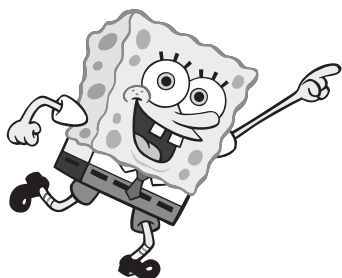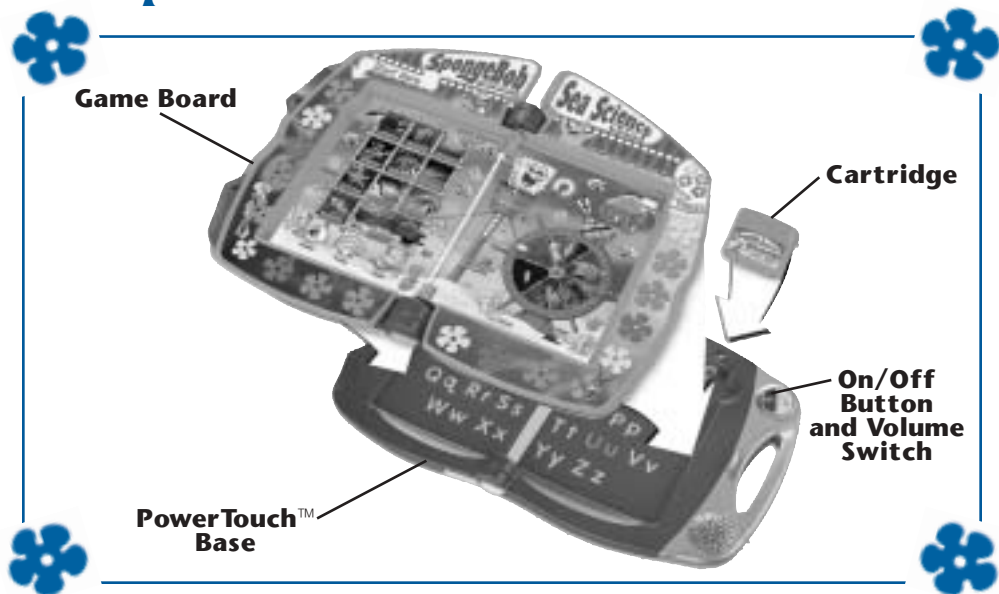

- Insert the cartridge into the cartridge port at the top of the PowerTouch™ base.
- Press the On/Off button and slide the volume switch on the PowerTouch™ base to a comfortable listening level.
- Fit the game board onto the PowerTouch™ base.



Let's Play

- Before playing, explore Bikini Bottom! Touch any picture or word on the game board to learn about it.
- Pick a game piece. Place the game piece(s) on the game board START space.
- If two players are playing, the youngest player goes first.
- To begin, touch SpongeBob's microphone on the top center of the game board. Listen carefully to SpongeBob's fishy question.
- Look for the answer(s) anywhere around Bikini Bottom. When you find the answer(s), touch the picture(s) or word(s) on the game board.



Good job! You touched the correct answer(s). Listen to the number of sea flowers you need to move the game piece on the path. Your turn is over. It's the next player's turn.

Nice try! You touched (an) incorrect answer(s). Look again for the answer around Bikini Bottom. If you answer incorrectly three times, it's the next player's turn.


- Touch SpongeBob's microphone on the top center of the game board for another question.
- If you hear it's time for a Shell Game (it's random), touch a shell, any shell! Now, dance, wiggle and move about!






You Win Matey!

- The first player to land on the FINISH space, **WINS!**
- Touch the treasure chest on the game board for a silly, seaworthy reward!
- To play again, touch SpongeBob's microphone on the top center of the game board.

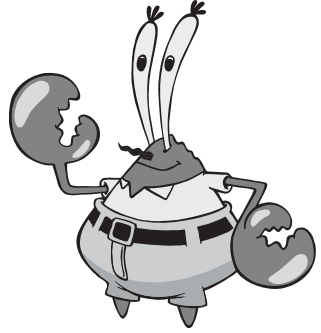

Game Tip

- Did you forget the question? Wait a few seconds to hear the question again along with a hint.

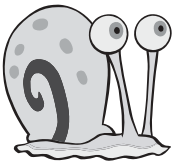


Consumer Information & Care

Questions?

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST, Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Visit us online at www.service.mattel.com.

Or, write to:

 Fisher-Price, Inc.
Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

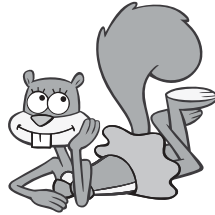


Care

- This toy is not intended for use outdoors.
- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.





 You can look for other
PowerTouch™ Games...

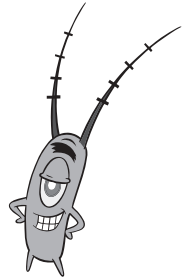

For countries outside the United States:

CANADA: Questions? 1-800-432-5437. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN: Mattel UK Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

©2004 Viacom International Inc. All rights reserved. Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc. Created by Stephen Hillenberg.

©2004 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

Fisher-Price, Inc., a subsidiary of Mattel, Inc. East Aurora, New York 14052, U.S.A.