


6 ATTACHING TARGETS



Peel backing off target before sticking it to surface.

✗ Do not stick target to walls or furniture as it may cause damage to the surface.

8 CLEANING DARTS

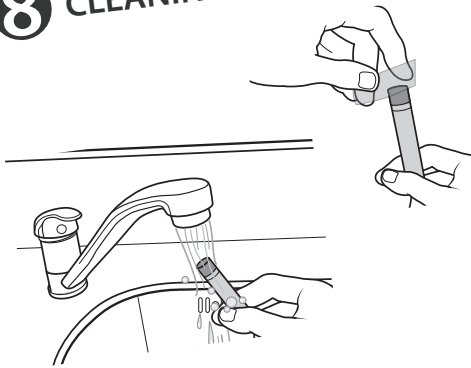


Dust, dirt, and other debris can cause darts to lose their adhesiveness.

To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

NOTE: Dry darts before using again.

7 REMOVING DARTS

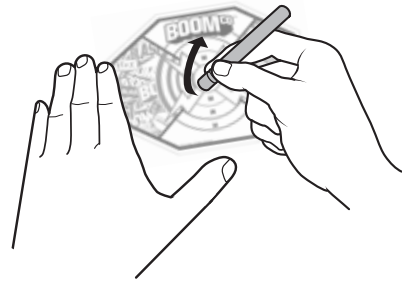

IMPORTANT:

Always remove darts from target after play. Keep one hand pressed on target, hold dart by the tip and gently peel dart off.

9 REPLACING TARGETS & SHIELDS



Replace time-worn targets and shields with **Y8620/BBY17 SMART STICK REFILLS**.

Each sold separately, subject to availability.



WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range. Always wear appropriate eye-wear, sold separately.


STEALTH AMBUSH™

6+

INSTRUCTIONS
BOOM-CO.COM


Please keep these instructions for future reference as they contain important information.

1 CONTENTS

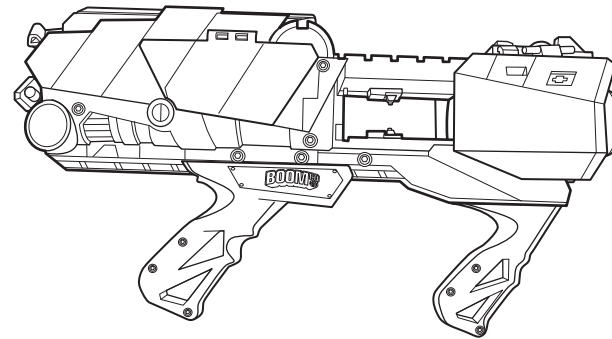


CAUTION: Do not aim at eyes or face. TO AVOID INJURY: Use only darts designed for this product. Do not modify darts or dart blaster.

x 17

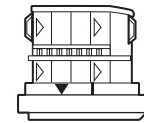


2 SHIELDS

A. Activate shields.

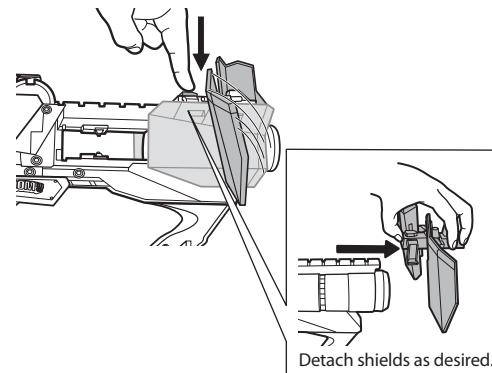

B. To close shields.

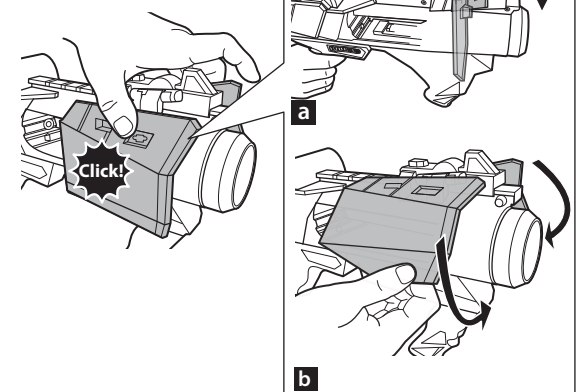


©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel:03-78803817, Fax:03-78803867.

CBP42-0920




3 TO FIRE



A. Push tab up.

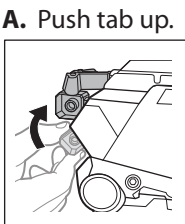


B. Fully load clip with darts.

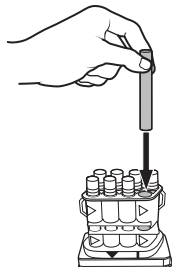


C. Insert the fully loaded clip from the left side of the blaster with the arrowheads pointing right.

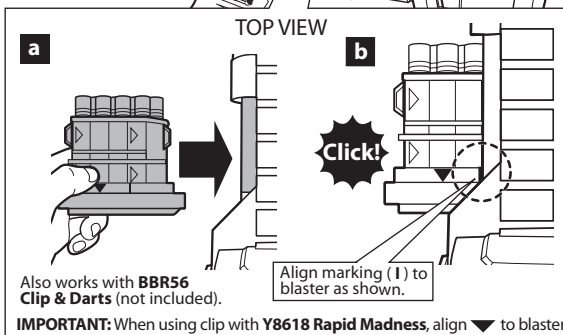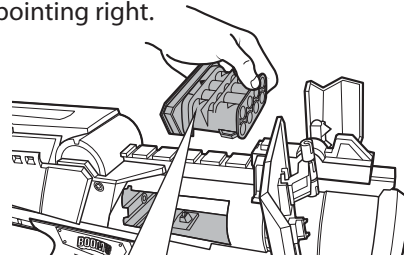

D. Pull rear handle all the way back and push it all the way forward to fire each dart.

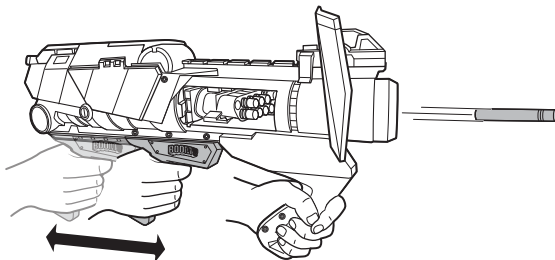


E. Remove empty clip from blaster for refill.

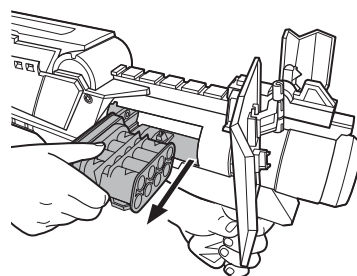


4 SURPRISE ATTACK MODE

A. Push tab down.

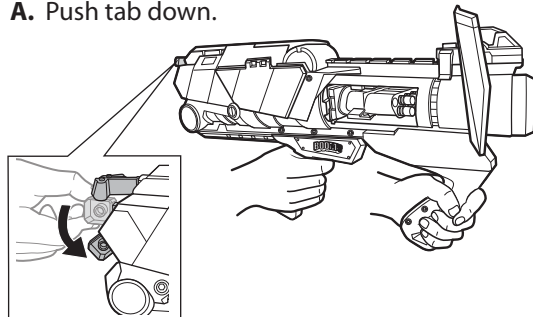


B. Pull rear handle all the way back and push all the way forward to raise launcher and side storage.

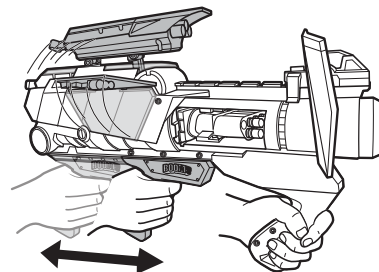


4 SURPRISE ATTACK MODE (CONTD.)

C. Load darts.

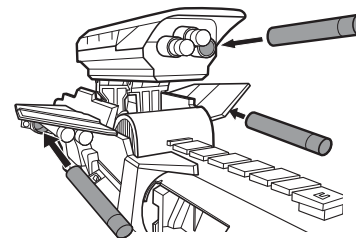


D. Close launcher and side storage.

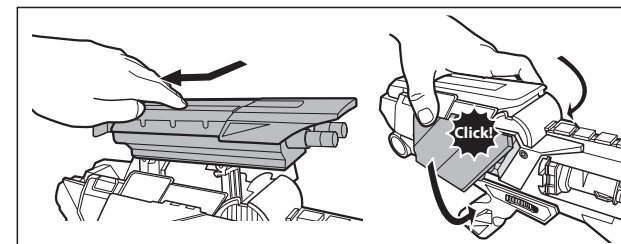


To activate surprise attack launcher:

E. Pull folding "T" handle all the way back to charge launcher.

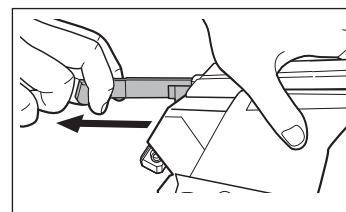


F. Pull rear handle all the way back and push all the way forward to launch surprise attack and reveal hidden dart storage!

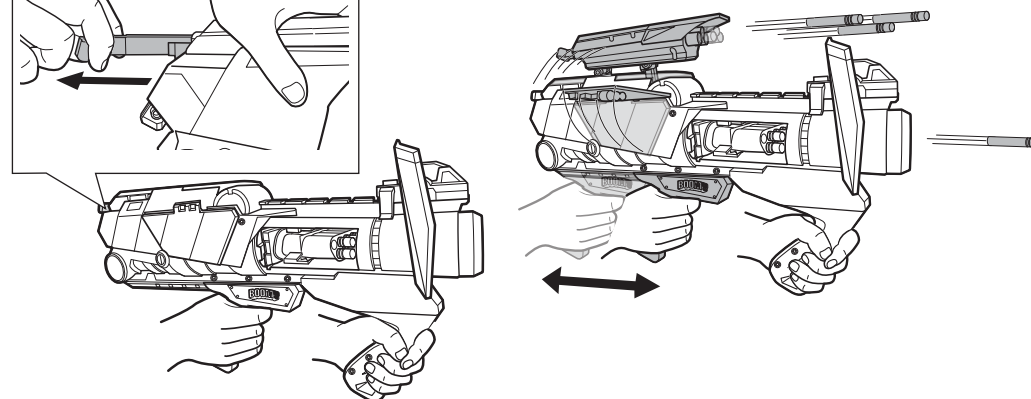

NOTE: Do not charge with launcher in "UP" position.

5 PERFORMANCE TIPS

A. If the launcher detaches, reattach as shown.

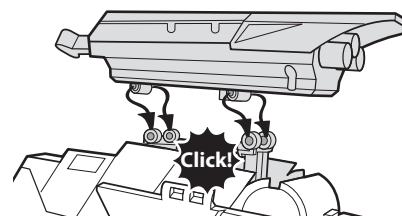

B. Clip may stop or slow down when dirt and lint gather in clip rails and blaster channels. For best performance, periodically wipe surfaces clean with paper towel (not included).

