




TREASURE CHASE SET

CONNECTABLE, EXPANDABLE, MOTORIZED PLAY!

INSTRUCTIONS

Keep these instructions for future reference as they contain important information.

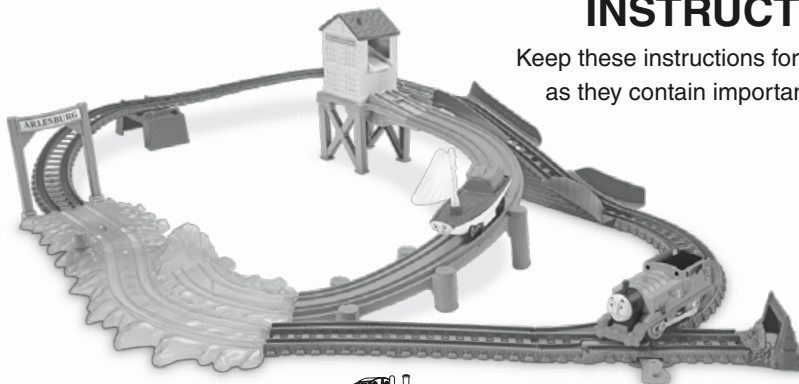

Thomas the Tank Engine & Friends™



CREATED BY BRITT ALLCROFT

Based on the Railway Series by The Reverend W Awdry.

©2015 Gullane (Thomas) Limited. Thomas the Tank Engine & Friends and Thomas & Friends are trademarks of Gullane (Thomas) Limited.

©2015 HIT Entertainment Limited. HIT and the HIT logo are trademarks of HIT Entertainment Limited.

©2015 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



CAUTION:

To prevent entanglement, keep hair away from wheels.



HIT entertainment

**CDB60
BDP12 Asst.**

Fisher-Price®

1100339582_DOM

2 CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.


Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.



Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

WHAT'S INCLUDED

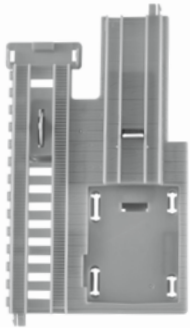

x2

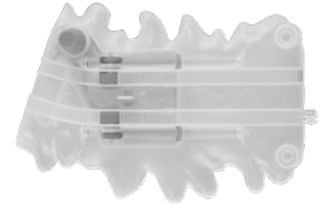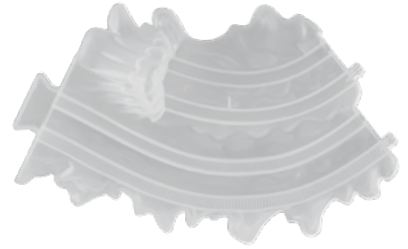

x2



CS x2



TLS



ES1




ECR x2




RB1



 S1




ES6

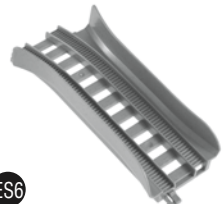


ASSEMBLY


1

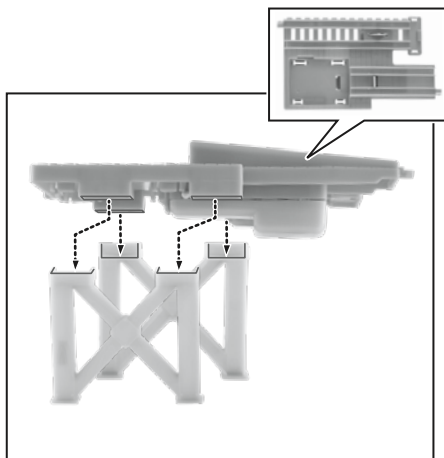

2

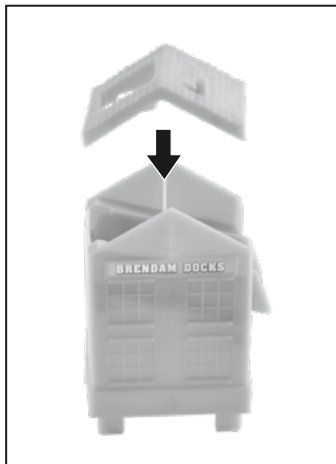


3

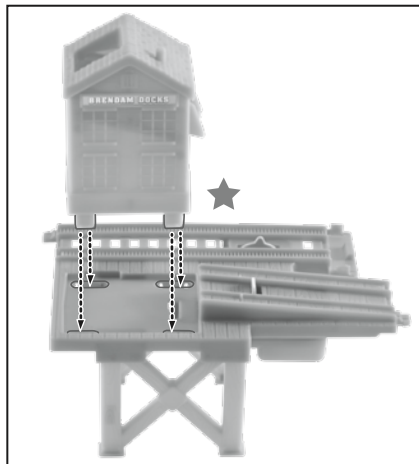


★
NOTE: This part
is a "one-time
snap" - once it
is put together,
it cannot be
taken apart.


4

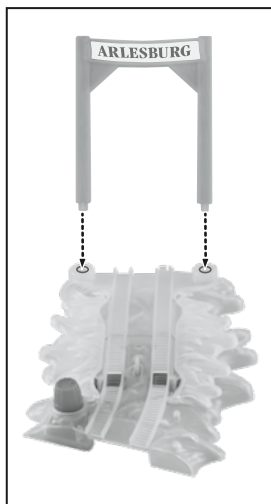

5

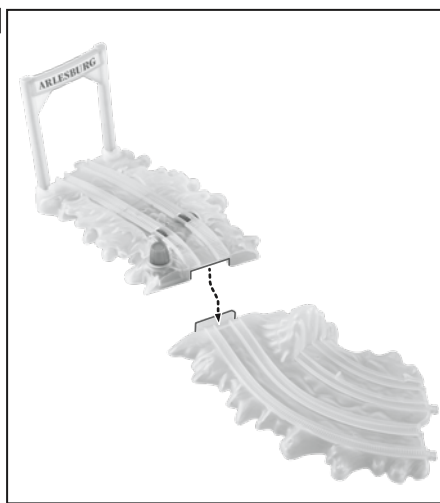


6

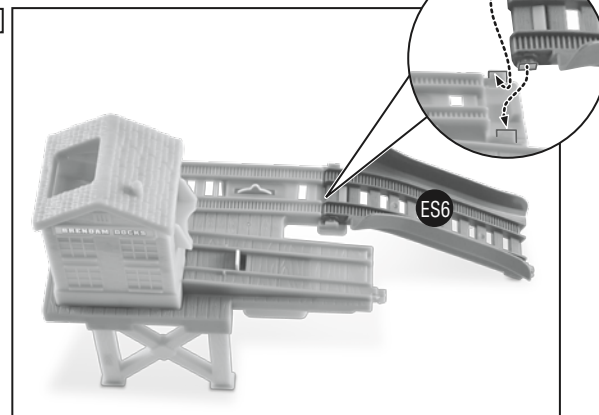

ADULT ASSEMBLY REQUIRED.
No tools needed.

TRACK LAYOUT

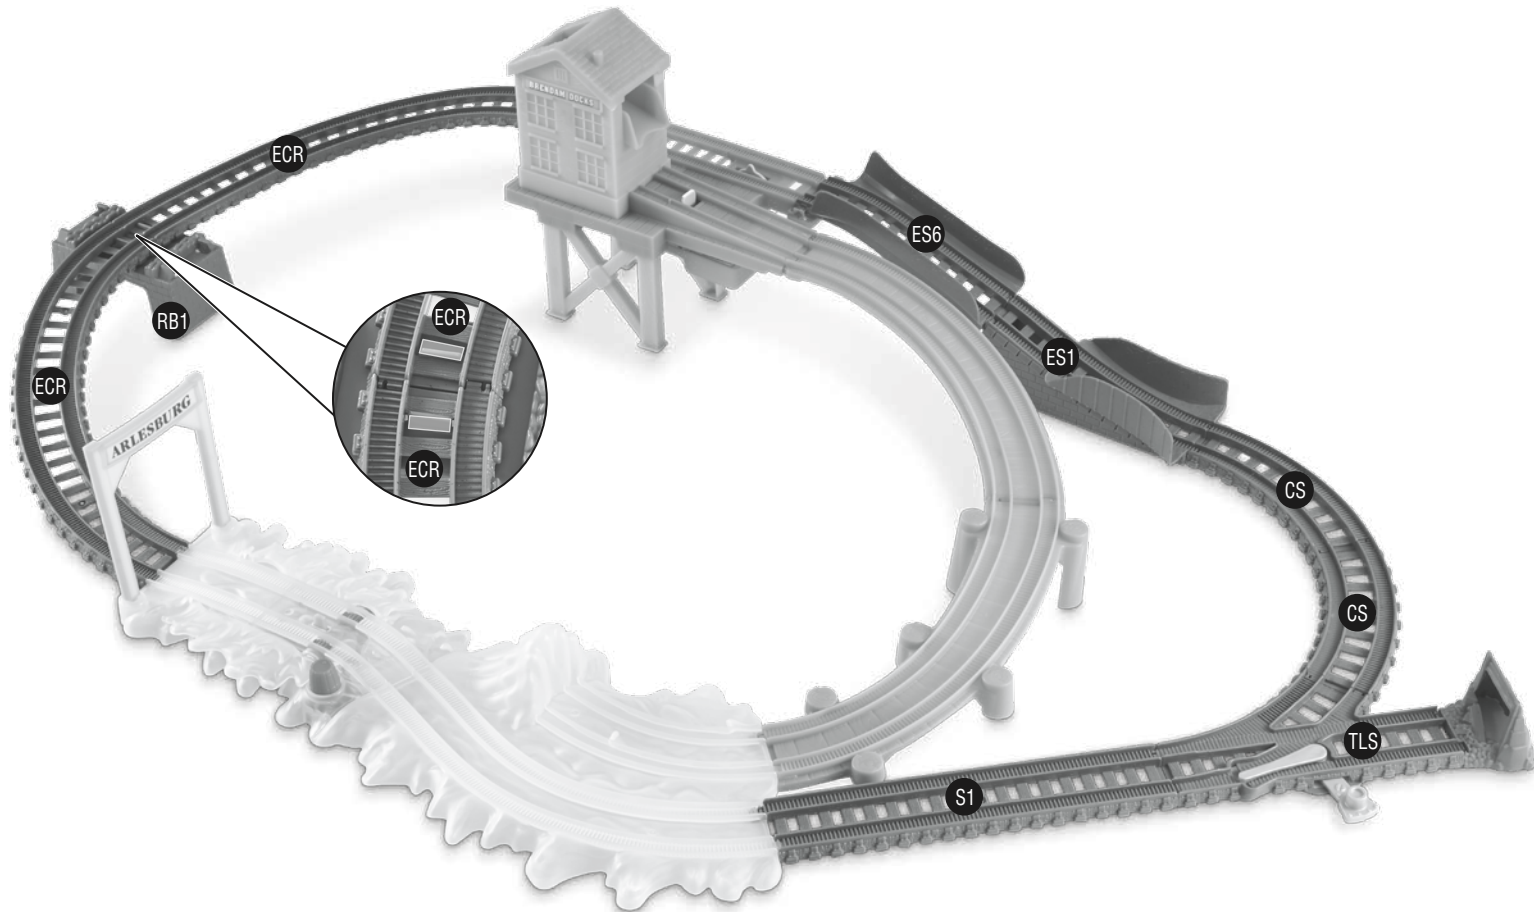


Note: Track marking code on the bottom of the track.
MAY NOT WORK WITH ALL ENGINES.

BEFORE YOU BEGIN


- 1** Press the red button on Skiff's back.



- 2** Place Skiff in front of the building.

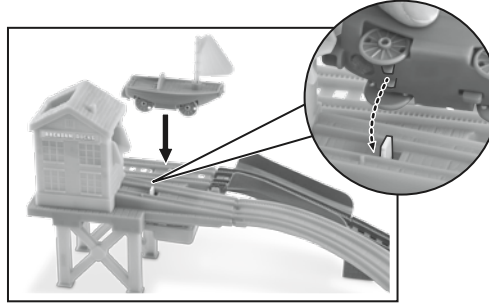


- 3** Load treasure chest on Skiff by placing it in the chute located on the building's roof.

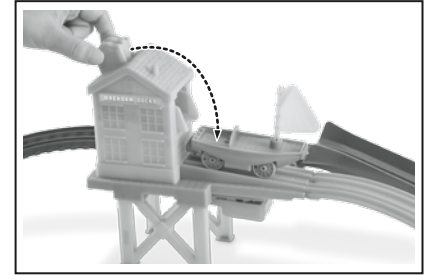

HOW TO PLAY


- 1** As Thomas passes, Skiff rolls down the path with the treasure.

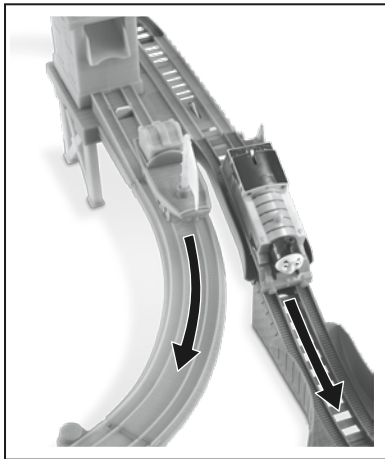

- 2** The treasure chest is thrown from Skiff when he hits the 'water'.



- 3** Thomas can push Skiff around the track!

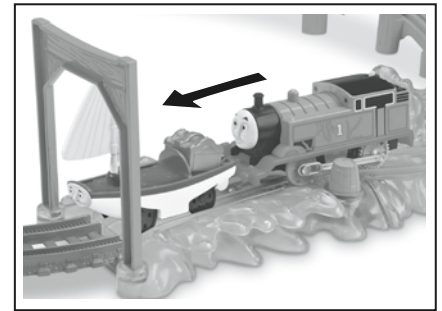

Note: Thomas should move forward in the direction as the arrow suggests.


WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

HOW TO PLAY

4 As Thomas speeds through the 'water', the waves splash up.



5 Press the button to release Thomas and send him on his way.

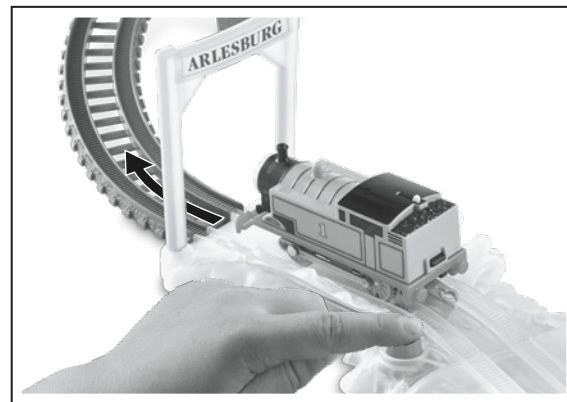


BATTERY INSTALLATION

Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Install the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy and replace them with fresh batteries. Requires 2 "AAA" (LR03) batteries.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

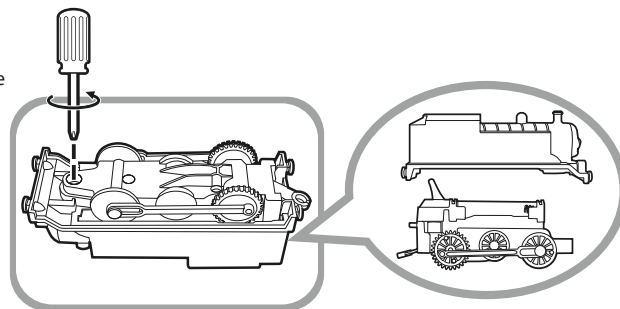

+ 1.5V x 2
AAA (LR03) |

Required tool: Phillips screwdriver (not included)