



Keep this instruction sheet for future reference, as it contains important information.

This product includes three AA batteries in a disposable box.

Batteries included are for demonstration purposes only. Before first time use, remove the AA batteries in the disposable box and dispose of them properly.

Requires three C (LR14) **alkaline** batteries (not included) for operation.

Adult assembly is required to attach this toy to a crib.

Tool required for battery installation: Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Alderman 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

 
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.


This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Replacement

Before first time use: The soother includes three AA batteries in a disposable box for demonstration purposes only. Remove the disposable box with AA batteries and **install three, new C (LR14) alkaline batteries**.

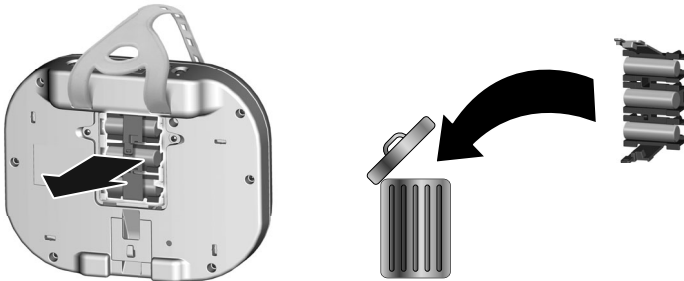

 - Loosen the screws in the battery compartment door and remove the door.
- Open the tabs on the disposable box and lift to remove it.
- Throw away the disposable box with included AA batteries.

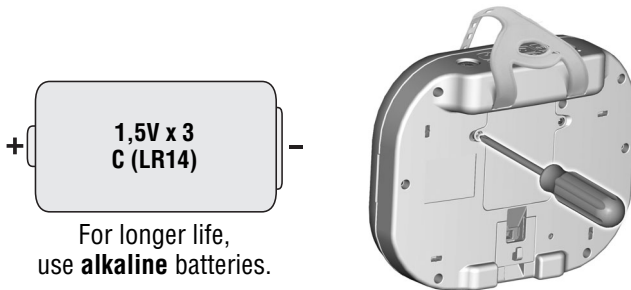

- Insert three, new C (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If the soother begins to operate erratically, you may need to reset the electronics. Slide the power/mode switch off and back on.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Crib Attachment

 


WARNING

Prevent Entanglement Injury

- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.
- Use ONLY attached to a crib.

IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.

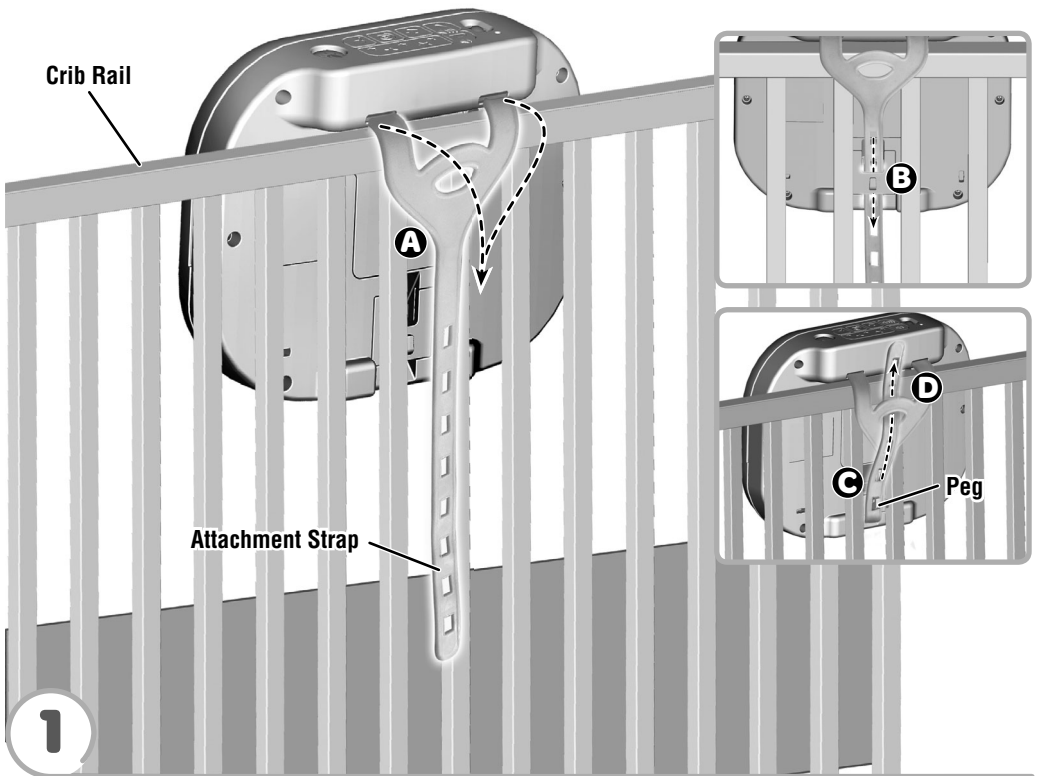


- Position the toy inside the crib. Make sure the attachment strap is on the outside of the crib **A**.
- Slide the end of the attachment strap down through the slot on the back of the toy **B**.
- Pull the end of the attachment strap up and fasten to the peg on the back of the toy **C**.

Note: This toy should be snug against the crib rail and spindles. Use the strap slot that provides the tightest fit.


- If you have excess strap, slide the free end of the attachment strap up through the opening near the top of the attachment strap **D**.

 Crib Attachment

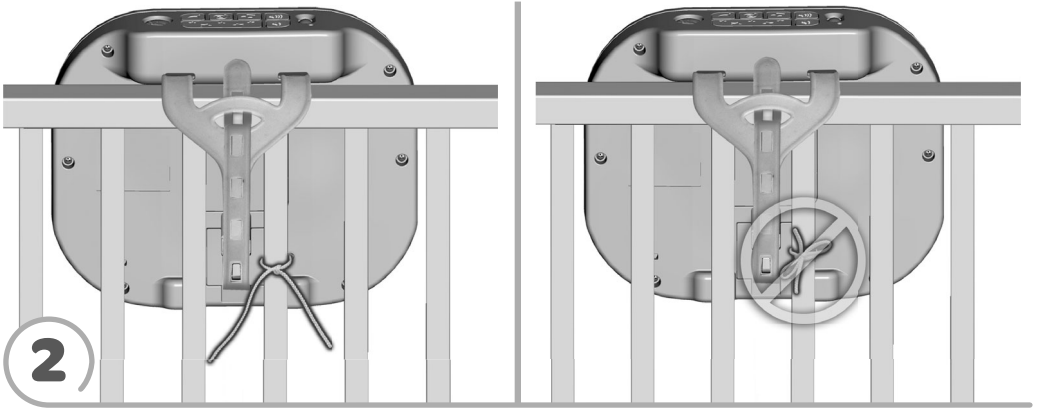


- Tie the toy's strings to a crib spindle.

 Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

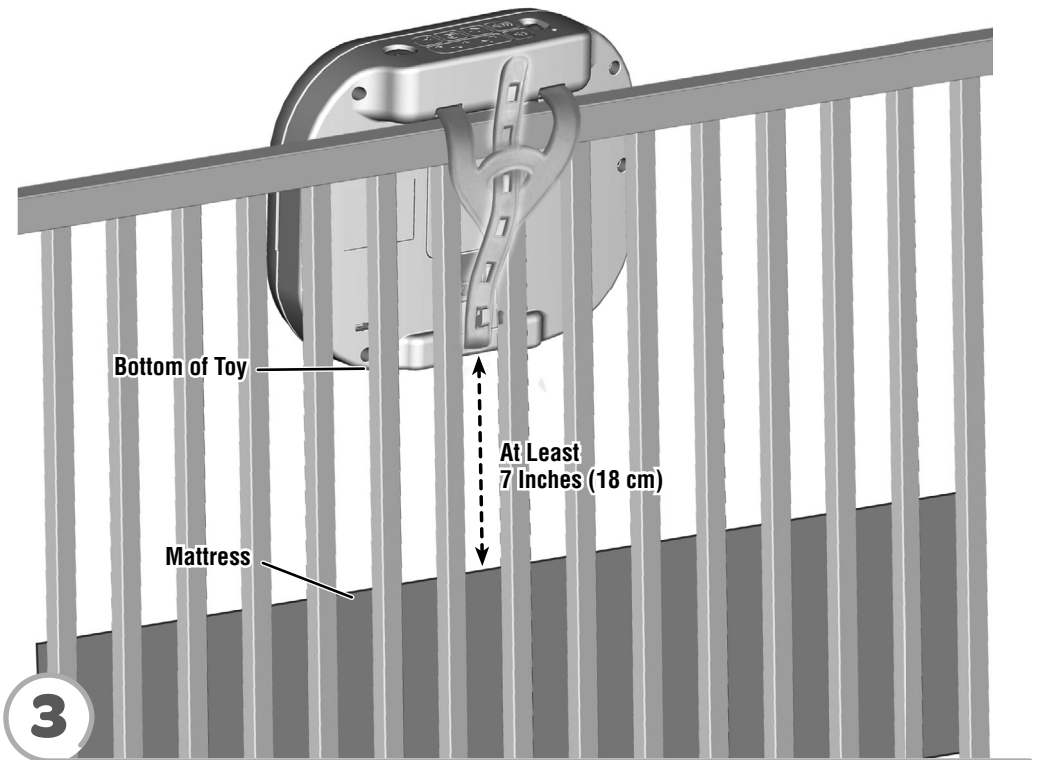

- Make sure the distance between the bottom of the toy and the crib mattress is at least 7 inches (18 cm).
- If the distance is less than 7 inches (18 cm): readjust the attachment strap to lift the product; or lower the crib mattress.

 Soothe and Delight!

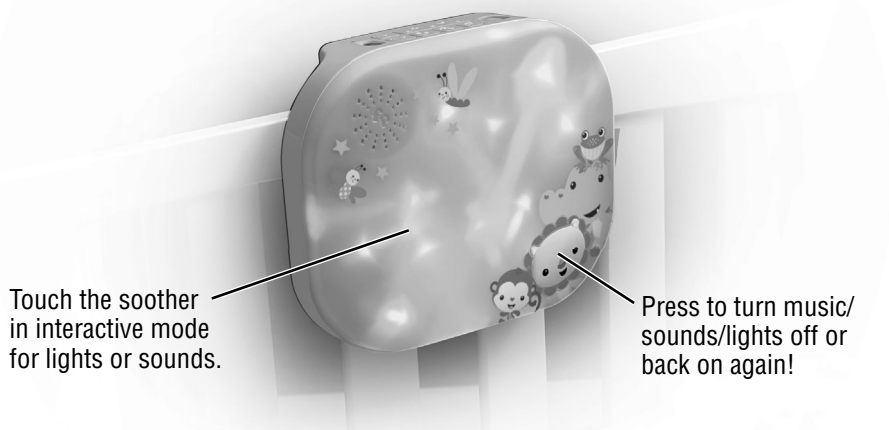

- **Power/Mode Switch** - Select a mode or turn off power.
 - ☀ **Soothing Mode** – Continuous music/sound effects/white noise/light show.
 - ☀ **Interactive Mode** – Lights “magically” appear/chime, tone or animal sound plays when baby touches soother.
 - **OFF**
 - **Selection Buttons** - Press to turn on; press again to turn off.
 - 🍃 **Nature Sound Effects**
 - 🌀 **White Noise**
 - 🎵 **Music**
 - ★ ★ ★ ★ **Light Show**
 - **Night Light Button** - Press ☀ to turn on night light; press again to turn off.
 - **Volume Buttons** - Press 🔊 🔊 to adjust the volume level.
- Hint:** The music/sound effects/white noise time out after approximately 30 minutes. The lights time out after approximately 15 minutes. Press a selection button to restart.*