



Please keep this instruction sheet for future reference, as it contains important information.

This product includes four AA batteries in a disposable box.

Batteries included are for demonstration purposes only. Before first time use, remove the AA batteries in the disposable box and dispose of them properly.

Requires four C (LR14) **alkaline** batteries (not included) for operation.

Battery installation is required. Only adults should install batteries.

 
Tool required: Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.


This toy has no consumer serviceable parts. Do not take apart.

Battery Replacement



Before first time use: The soother includes four AA batteries in a disposable box for demonstration purposes only. Remove the disposable box with AA batteries and **install four C (LR14) alkaline batteries**.

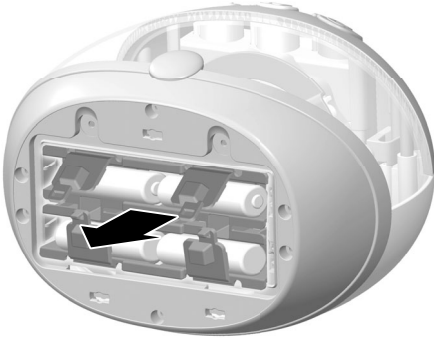

 - Loosen the screws in the battery compartment door and remove the door.
- Open the tabs on the disposable box and lift to remove it.

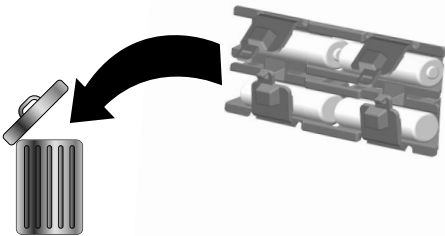

  - Throw away the disposable box and included AA batteries.

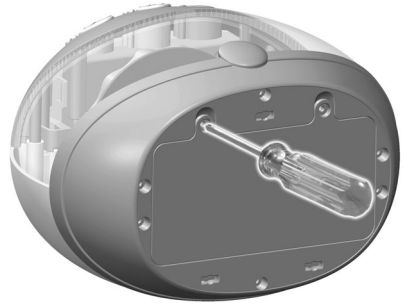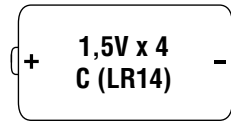

- For longer life, use **alkaline** batteries.
- Insert four, new C (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If the soother begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.

 
 
 
Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Soothing Lights, Music & Motion

Press the buttons
for sounds/music

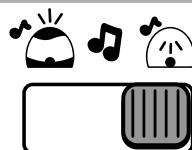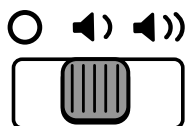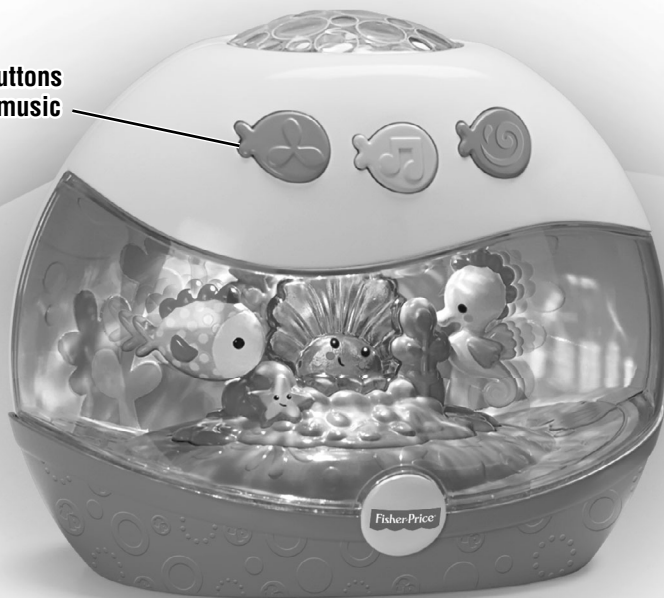

- Slide the power/volume switch on the back of the soother to ON with low volume, ON with high volume or OFF.
- Slide the mode switch to:
 - Projector, Music & Motion** – for projector lights show, music/sounds and swimming sea action.
 - Music only** – for music/sounds
 - Lights, Music & Motion** – for swimming sea action, music/sounds, and glowing lights inside the soother.

- Press a music/sound selection button to hear nature sounds, musical tunes or white noise. Press a button again to change the music/sound. Press and hold a music/sound selection button to turn off the music/sounds/lights.

Hint: The music only mode plays for approximately 60 minutes. When in the lights, music & motion or projector, music & motion modes the music will play for approximately 30 minutes, and lights/motion will turn off after approximately 15 minutes. Press a button to restart.

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.