 


1

lay & play

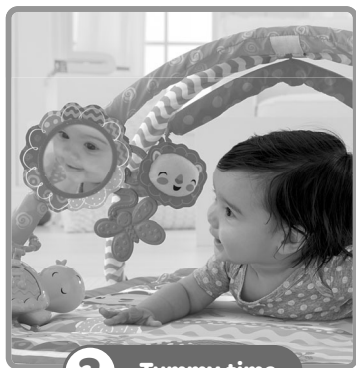

2

Tummy time



3

Take along music

Please keep this instruction sheet for future reference,
as it contains important information.

Adult assembly is required.

Requires two AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation:

Phillips screwdriver (not included).

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)



service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Battery Installation

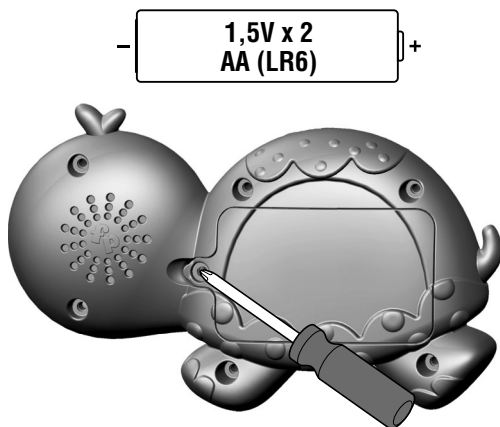

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- For longer life, use **alkaline** batteries.
- Locate the battery compartment door on the electronic toy.
- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert two AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.
- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.



Assembled Parts



3 Hanging Toys



Mirror

 


Electronic Toy




Arch Assembly with Mat

Assembly

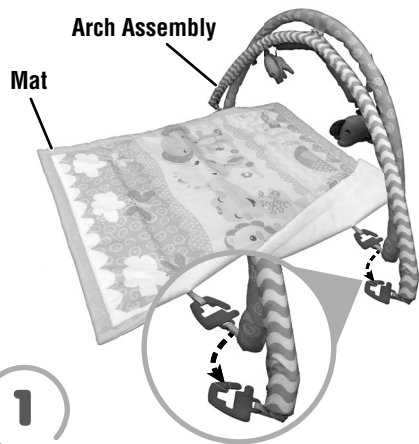


- Locate the hooks and loops underneath the mat. The hook straps and the loops are different colors. When properly assembled, the hook strap color will match the loop color.
- While holding the end of an arch, carefully unfasten the hook with the strap that is connected the other arch.

 Hint: This should be the hook that does not match the loop.

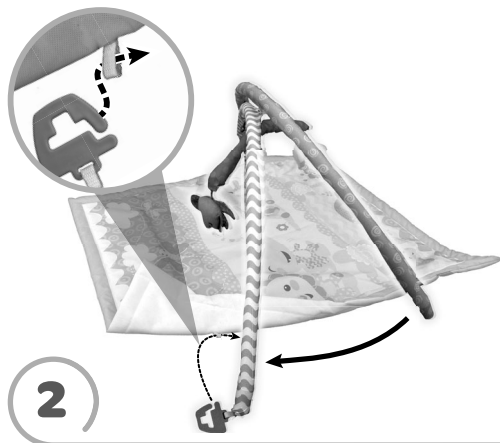


- Next, fasten the hook with strap that matches the color of the loop on the other end of the mat.
- Repeat this procedure to assemble the hooks to the loops on the other side of the mat.

 Assembly

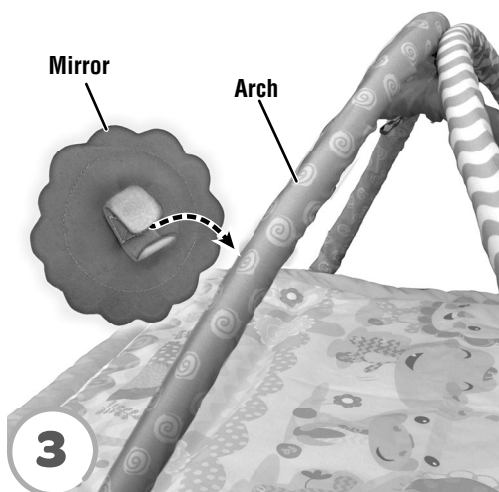

- Wrap the straps on the mirror around an arch and close the fasteners.

 
Care

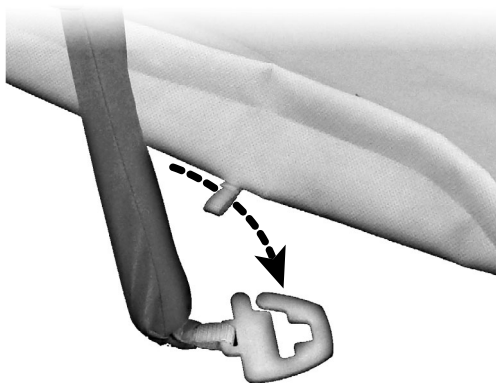

- The mat is machine washable. Remove the arch assembly from the mat.
- While holding the arches together, carefully unfasten the hook on each end of the arches.
- Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, hard toys and electronic toy are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

Playful music & bat-at wiggle bar!

 Electronic Toy

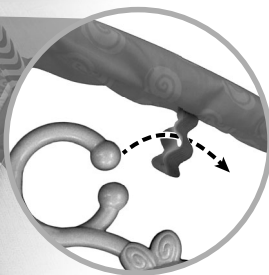


Hang the other toys on the loops around the gym.



WARNING

 To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.



Power/Volume
Switch

- Slide the power/volume switch on the electronic toy to ON with low volume , ON with high volume  or OFF .
- Press the button to play approximately 10 minutes of music.