

BEFORE FIRST TIME USE

Slide the power/volume switch to ◀ ON with low volume or ▶▶ ON with high volume to turn off try-me demonstration mode.



Please keep this instruction sheet for future reference, as it contains important information.

Requires four AA batteries (included).

Batteries included are for demonstration purposes only.

Battery replacement is required. Only adults should replace batteries.

Tool required for battery replacement: Phillips screwdriver (not included).

Adult setup is required to attach this toy to a crib.

To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.

This toy has no consumer serviceable parts. Please do not take this toy apart.

Crib Attachment



WARNING

 
Prevent Entanglement Injury

- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.
- Use **ONLY** attached to a crib.


IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.



- Position the soother so that the control panel is on the **inside** of the crib.
- Place the top of the center strap over the crib top rail **A**.
- Wrap the bottom of the center strap under the crib top rail and fasten to the top strap **B**.

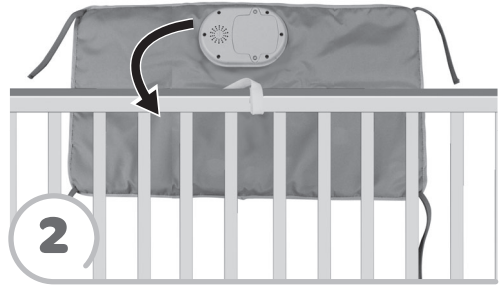


 - Fold the top of the soother over the crib top rail.

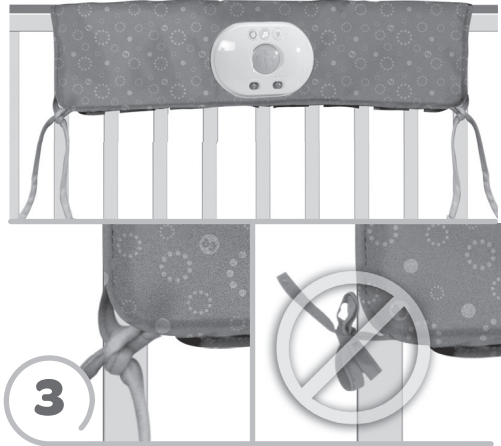

- The control panel should be facing the **outside** of the crib.
- Tie the soother strings to the crib spindles.
Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

 Battery Replacement

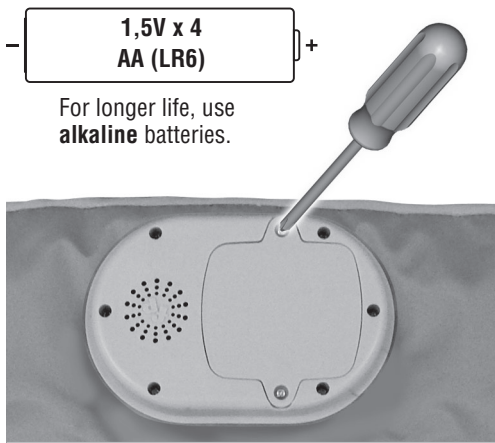

For longer life, use **alkaline** batteries.

 
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert four AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If the toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- If sounds or lights become faint or stop, it's time for an adult to change the batteries.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Soothing Music & Twinkling Lights

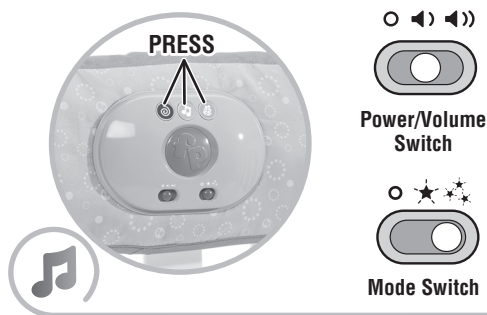

- Slide the power/volume switch to ON with low volume, ON with high volume or OFF.
- Slide the mode switch to:
 - **Sounds only** - listen to soothing music or sounds
 - ★ **Twinkling lights** - watch animal friends randomly light up
 - ★ **Tracking lights** - follow the lights as they move from one end of the soother to the other
- Press a sound selection button on the control panel for lullabies, nature sounds or white noise. Press the same button again to turn off music/sounds. Press the same button again to change the music/sound effect.
- Press the music button inside the crib for music/sounds.
- The music button inside the crib will play the last music/sound effect selected on the control panel outside the crib.
- Sounds will play for approximately 30 minutes. Lights will turn off after approximately 15 minutes. Press any button to restart.

Consumer Information

**CONSUMER ASSISTANCE**

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.