

Fisher-Price®

CDN55

CDN88



Press owl's tummy for soothing music and light. Music plays for about 15 minutes and fades off. Light turns off after about five minutes. Press again to repeat. If you'd like to turn off music and light immediately, press and hold for two seconds.

Please keep this instruction sheet for future reference,
as it contains important information.

Requires two AA batteries (included).

Batteries included are for demonstration purposes only.


Battery replacement is required. Only adults should replace batteries.

Required tool: Phillips screwdriver (not included).


Actual product may appear different than the photo shown.

fisher-price.com


Battery Replacement and Power

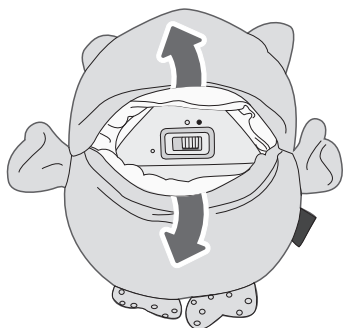

- For longer life, use **alkaline** batteries.
- Open the fasteners on the back of the toy.

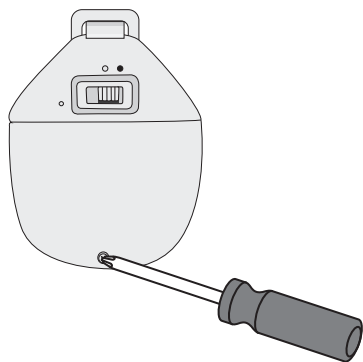

- Pull the electronics box out of the toy to access the battery compartment.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the door.
- Remove the exhausted batteries and dispose of them properly.
- Insert two, new AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.

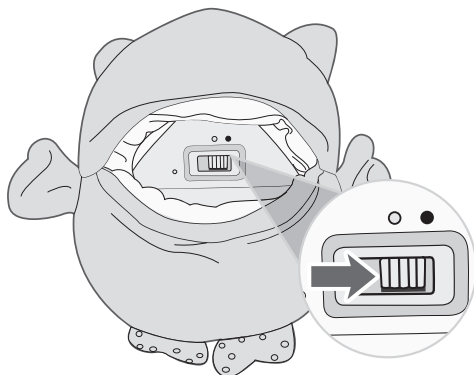

- Slide the power switch ON ● to remove from the try-me demonstration mode. When you are finished playing with this toy, slide the power switch OFF ○.
- Close the fasteners.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.
- When the sound or light from this toy become faint or stop, it's time for an adult to change the batteries.

Battery Safety Information



In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Care

- The toy is machine washable without the electronics box. Do not immerse electronics box.
- To remove the electronics box, open the fasteners on the back of the toy and pull to remove.
- Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat
- Replace the electronics box back inside the toy. Open the fasteners and place the electronics box back in the toy with the power switch facing the back of the toy. Close the fasteners.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes :
(1) il ne doit pas produire de brouillage et
(2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.