


#### 4 ATTACHING TARGETS

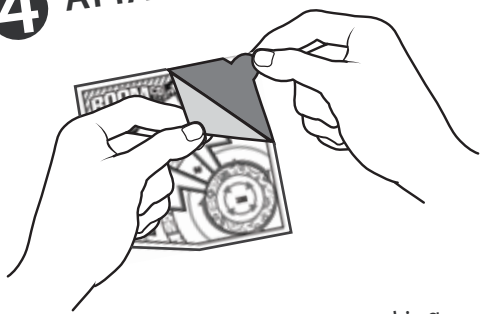


Peel backing off target before sticking it to surface.

**✗ Do not stick target to walls or furniture as it may cause damage to the surface.**


#### 6 REMOVING DARTS

Keep one hand pressed on target, hold dart by the tip and gently peel dart off.

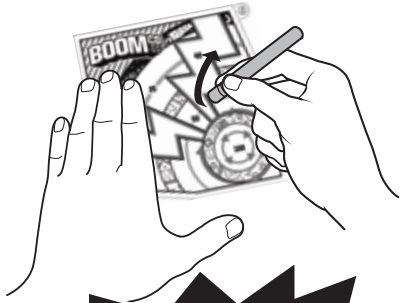

**REMOVE DARTS IMMEDIATELY TO MAINTAIN SMART STICK™ TECHNOLOGY!**

#### 5 CLEANING DARTS

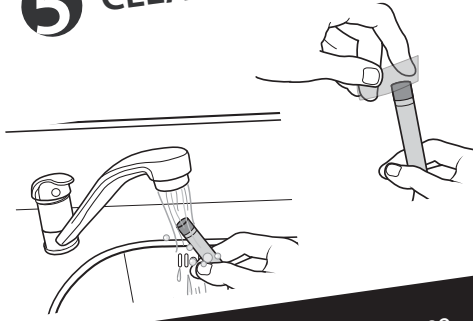

Dust, dirt, and other debris can cause darts to lose their adhesiveness. To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

**NOTE:** Dry darts before using again.

#### 7 REPLACING TARGETS & SHIELDS



Y8620/BBY17

Replace time-worn targets and shields with Y8620/BBY17 SMART STICK REFILLS.

Each sold separately, subject to availability.



INSTRUCTIONS  
BOOM!-CO.COM

MAD SLAMMER™ BLASTER


6+

Please keep these instructions for future reference as they contain important information.


#### 1 CONTENTS

**WARNING:** Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

**TO AVOID INJURY:** Do not modify rounds, darts, or dart blaster. Always wear appropriate eye-wear, sold separately.

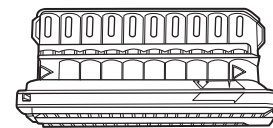

x 20

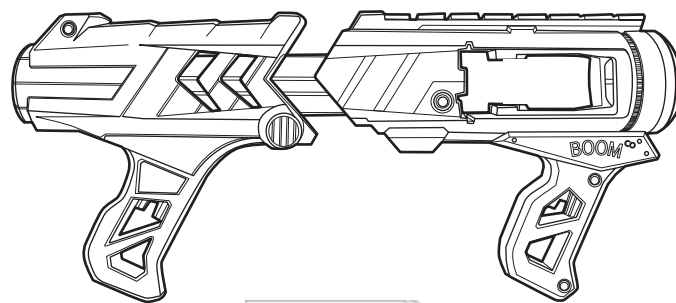

x2


©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd., No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.




1

#### 2 TO LOAD

A. Fully load clip with darts.

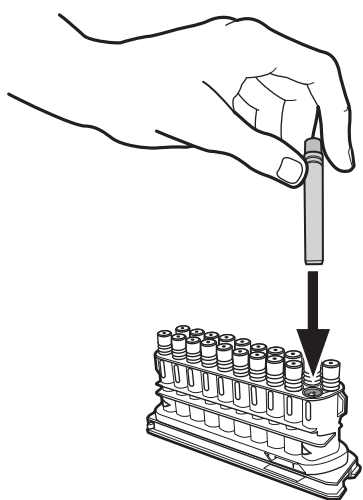


B. Load extra darts into storage.

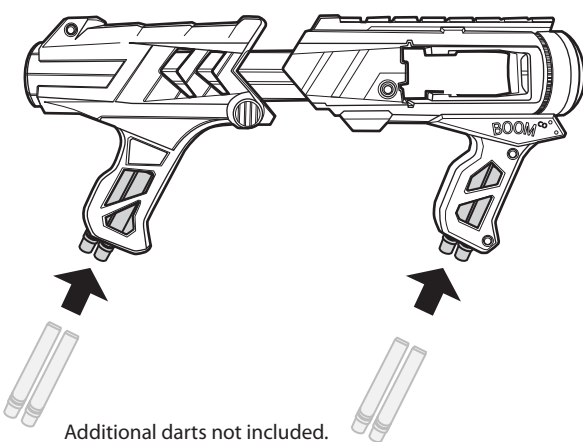


Additional darts not included.


C. Insert the fully loaded clip from the left side of the blaster with the arrowheads pointing right.

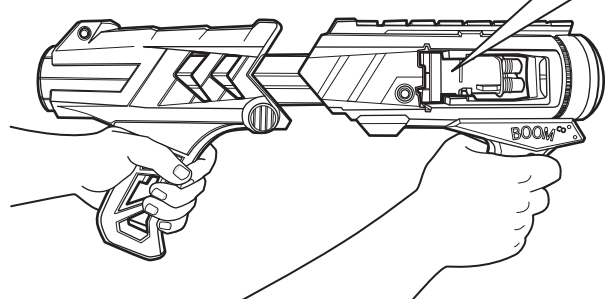

TOP VIEW

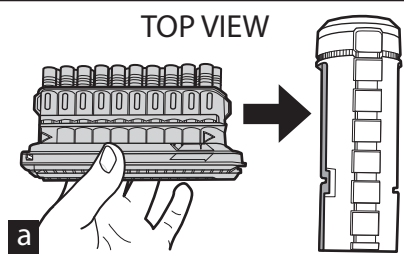

a

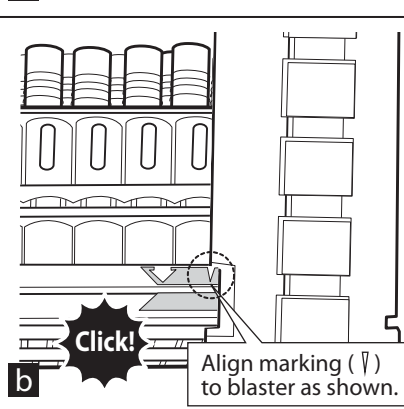


b

Click!

Align marking (V) to blaster as shown.


D. Pull rear handle back to lock clip into position.

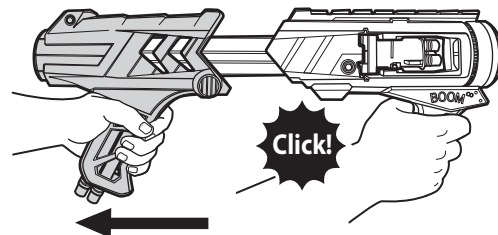


Click!

#### 3 TO FIRE


A. Slam rear handle forward to fire!

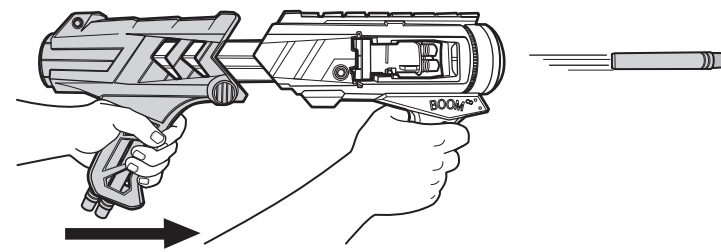

B. Pull and push rear handle back and forth for rapid fire!

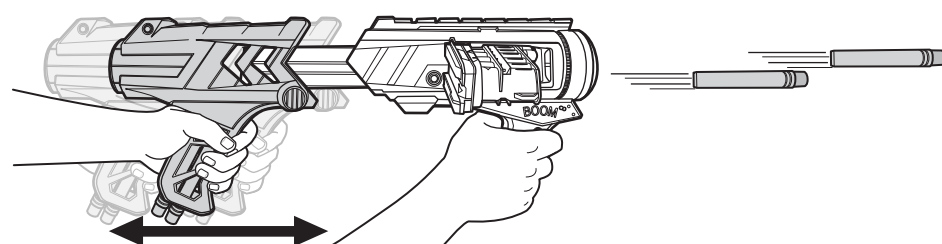

C. Remove empty clip and reload!

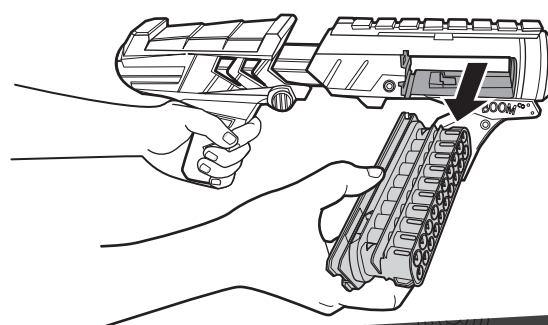

2

3