



Keep this instruction sheet for future reference,
as it contains important information.

Requires four C (LR14) **alkaline** batteries (not included) for operation.
Adult assembly is required. Tool required: Phillips screwdriver (not included).

Wipe this toy with a clean, damp cloth. Do not immerse.

This toy has no consumer serviceable parts. Do not take apart.

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Assembled Parts



Arch



 
**2 Narrow Braces
(left and right)**




Upper Ramp



Lower Ramp

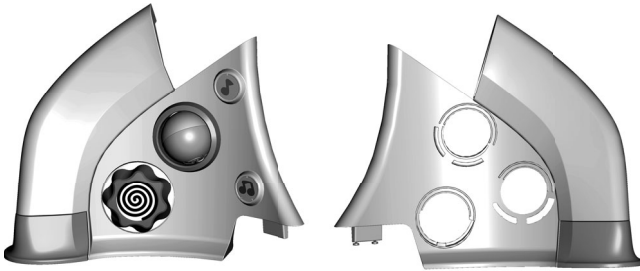

**2 Walls
(left and right)**

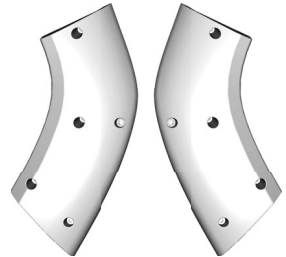 

**2 Wide Braces
(left and right)**



Base



CAUTION

This package contains small parts.
For adult assembly only.




#8 x 3/4" (1,9 cm) Screw - 20

 SHOWN ACTUAL SIZE


Tighten and loosen all screws
with a Phillips screwdriver.
Do not over-tighten screws.

Assembly

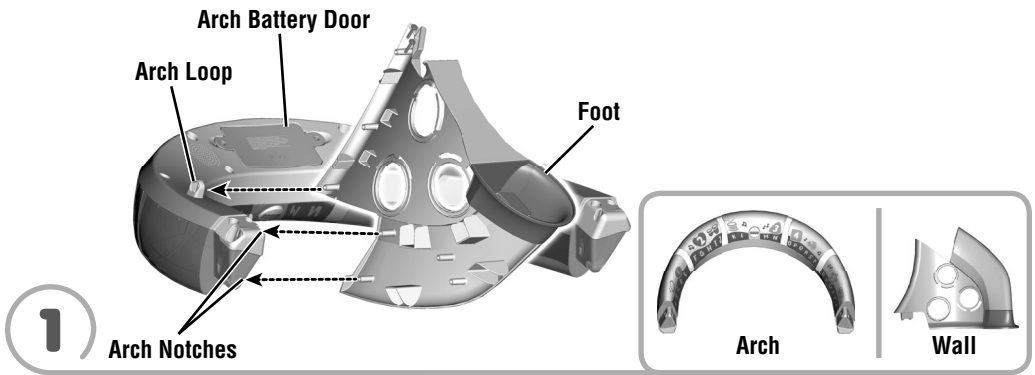


- Turn the arch over so the battery door is facing up. Position a wall so the foot is facing up.
- Fit three of the pegs on a wall into the loop and notches in the arch.

 Hint: The wall is designed to fit one way. If it does not seem to fit, try the other wall.

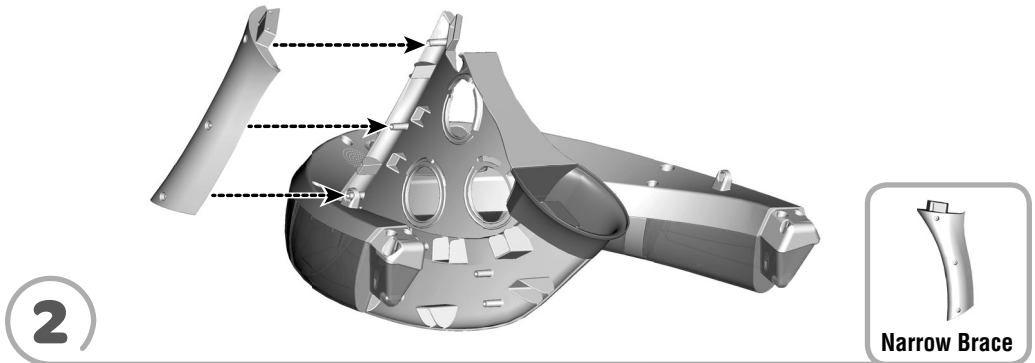

- Fit a narrow brace to the posts on the wall.

 
Hint: Each narrow brace is designed to fit one way. If it does not seem to fit, try the other narrow brace.

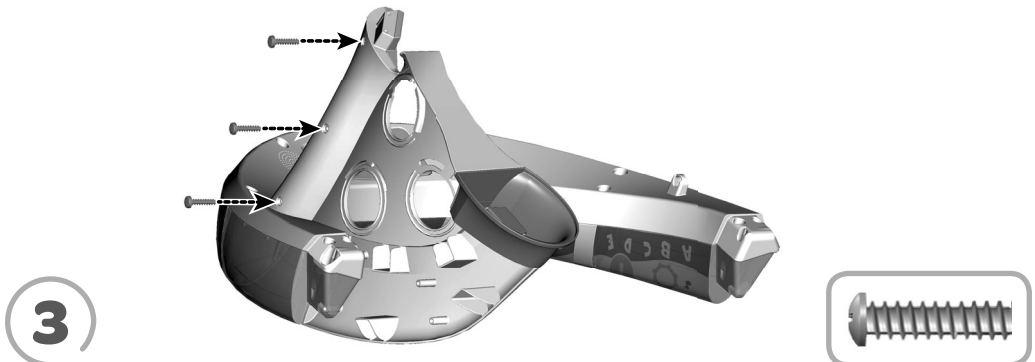

- Insert three screws into the holes in the narrow brace and tighten.

Assembly

 4

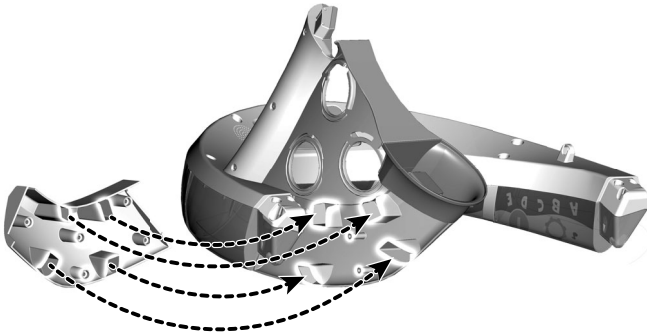


Wide Brace

- Fit the sockets on a wide brace to the sockets on a wall.


Hint: The wide brace is designed to fit onto the wall one way. If the wide brace does not seem to fit, try the other wide brace.

 5

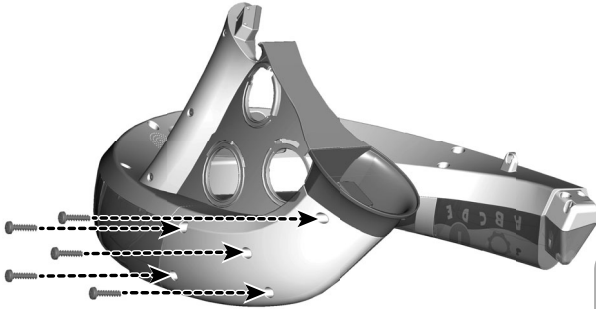

- Insert five screws into the holes in the wide brace and tighten.

 6

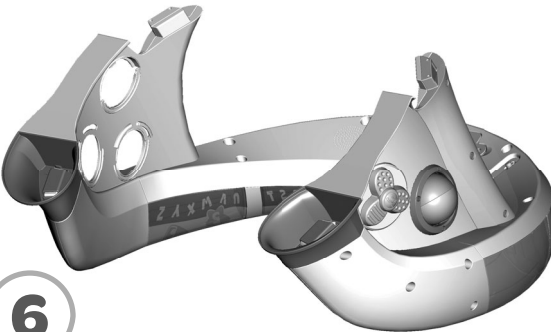

Wall



 
Narrow Brace




Wide Brace

- Repeat assembly steps 1-5 to attach the other wall, narrow brace and wide brace to the arch.


Assembly

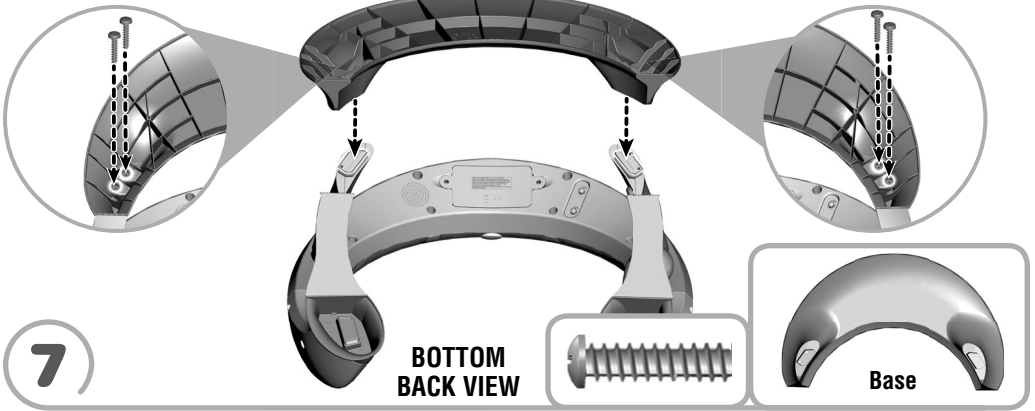

 - Fit the base onto each wall assembly.
- Insert four screws into the base and tighten.
- Turn the arch assembly upright.

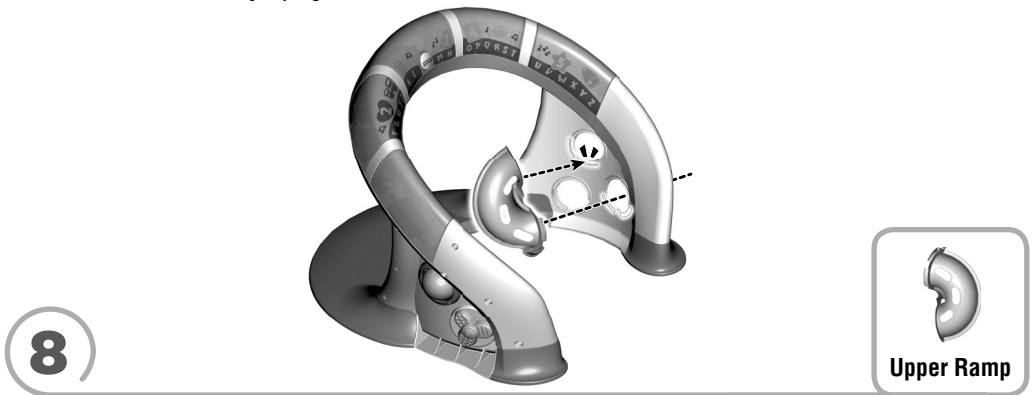


 - **“Snap”** the upper ramp to the upper hole in the inside of the wall assembly.

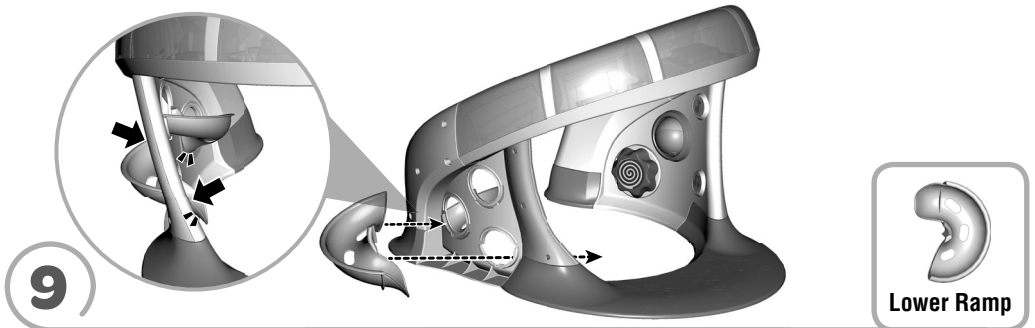

- Fit the lower ramp through the lower and middle holes in outside of the wall assembly.
- Press the ends of each ramp together to **“snap”** in place.

 Battery Installation

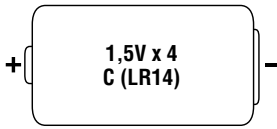

- For longer life, use **alkaline** batteries.
- Locate the battery compartment under the arch.
- Loosen the screws in the battery compartment door.
- Using the finger indents, lift to remove the battery door.
- Insert four, C (LR14) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds/lights become faint or stop, it's time for an adult to change the batteries.
-  Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

3 Ways to Play!



- Slide the power/volume switch to **ON** with low volume, **ON** with high volume or **OFF**.
 - Slide the mode switch to:
 - 1 **Sit & Play** – Touch a block on the arch to hear a piano note and watch the block light up! Then, wait and listen for a song to play!
 - 2 **Stand & Dance** – Touch a block to hear a song. Touch any other block while a song is playing for sounds effects, phrases and dancing lights!
 - 3 **Move & Explore** – Touch a block to learn colors, numbers and letters, or listen to a learning song. You can also listen for prompts to play a game!
- Hint:** This toy times out after two hours of inactivity. Slide the power/volume switch off and back on to restart.*