 


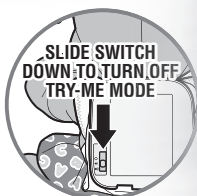

Open the fasteners on the back of the puppy. Slide the power/volume to ON with low volume  or ON with high volume  to turn off try-me demonstration mode.



Please keep this instruction sheet for future reference, as it contains important information.

Table requires adult assembly.

Requires six AA batteries for table and puppy. Batteries are included.

Batteries included are for demonstration purposes only.

Tool required for battery replacement: Phillips screwdriver (not included).

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

 
Care

- These toys are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.
- These toys do not have consumer serviceable parts. Do not take these toys apart.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Battery Replacement

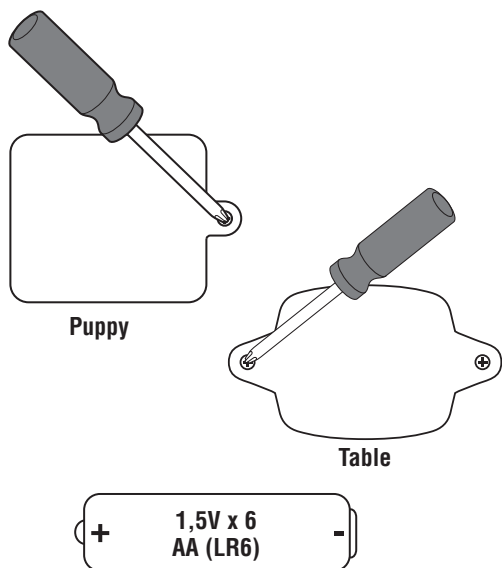

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

- For longer life, use **alkaline** batteries.
- For the puppy, open the fasteners on the back of the toy to access the battery compartment.
- Loosen the screw in each battery compartment door with a Phillips screwdriver and remove each door.
- Remove the exhausted batteries and dispose of them properly.
- Insert three, new AA (LR6) **alkaline** batteries in the table and in the puppy.
- Replace the battery compartment doors and tighten each screw. Do not over-tighten the screws.
- If either toy begins to operate erratically you may need to reset the electronics. For the table, slide the power/mode switch off and then back on. For the puppy, slide the power/volume switch off and then back on.
- When sounds/lights from these toys become faint or stop, it's time for an adult to change the batteries.

ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.

Table Assembly for Stand & Cruise

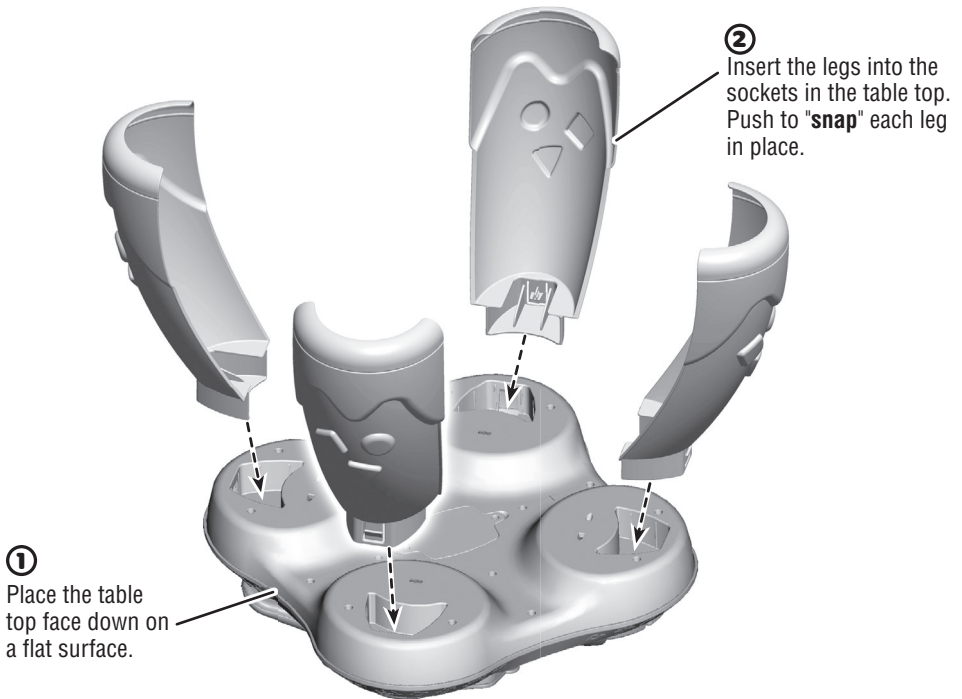 


Table Disassembly for Sit & Play

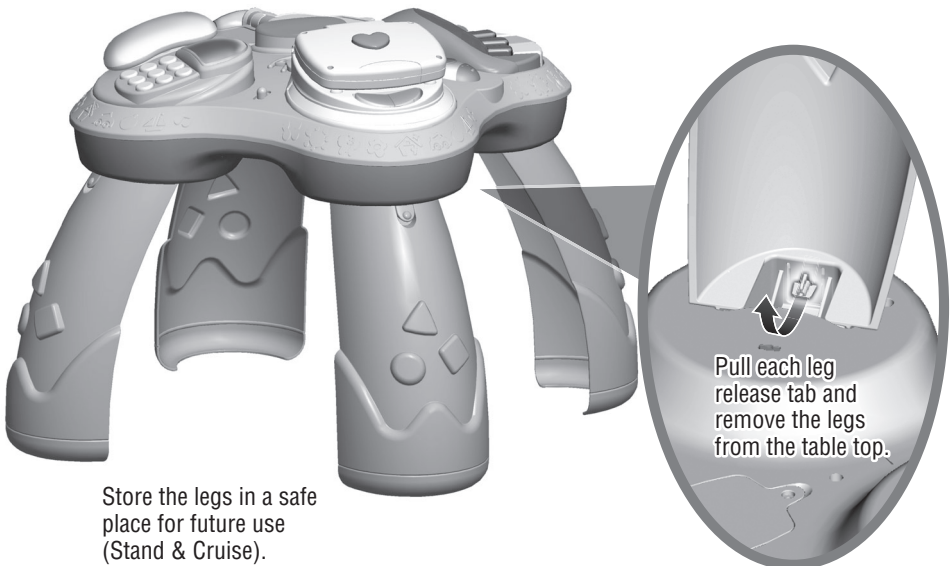 


Table has four modes of play!

Press a button or
lift the handset

Press a button

Turn a page

Press a key



• Slide the power/mode switch to:
ABC Learning - Learn letters, numbers, shapes and animals!

SP Bilingual - Learn in English and Spanish!

Music - Hear fun songs and musical tunes!

Imagination - Hear lots of fun sounds!

 
OFF



• Slide the volume switch (on bottom of toy) to:
🔊 low, 🔊 medium or 🔊 high volume.

Puppy has two interactive play modes!

Open the fasteners on the back of the toy. Slide the power/volume to ON with low volume  ON with high volume  or OFF . Close the fasteners on the back of the toy.

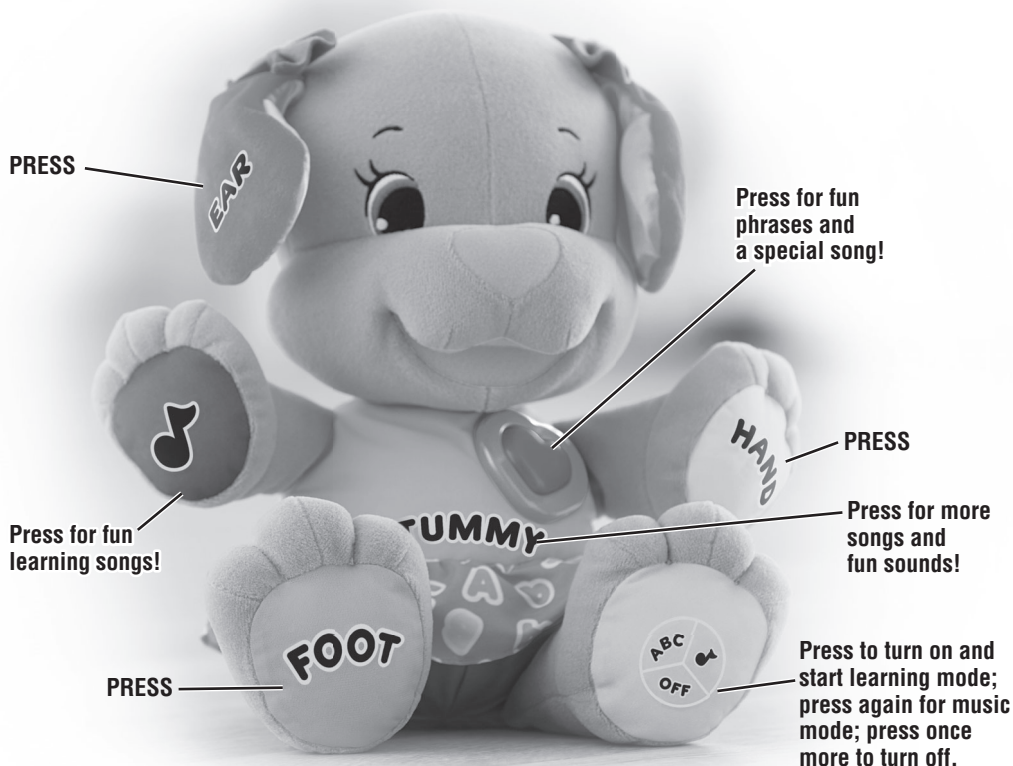

Learning Mode

- Learn about parts of the body and colors.

Music Mode

- Listen to fun songs, sounds and phrases!