



WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range. Always wear appropriate eye-wear, sold separately.


RAPID MADNESS™

6+

INSTRUCTIONS
BOOM-CO.COM


Please keep these instructions for future reference as they contain important information.

1 CONTENTS

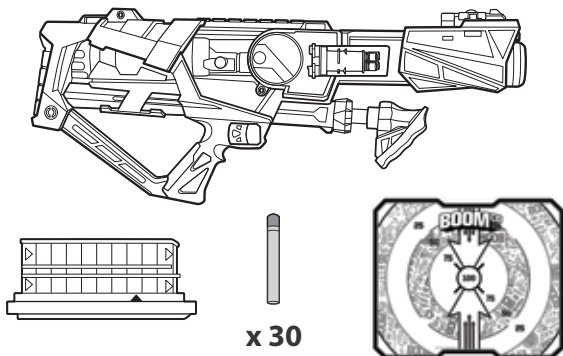

CAUTION: Do not aim at eyes or face.
TO AVOID INJURY: Use only darts designed for this product.
Do not modify rounds, darts, or dart blaster.



Pull rounds apart and stick them back together!

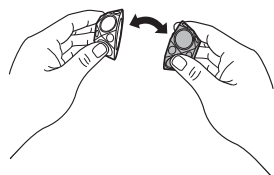


2 SHIELDS

A. Activate shields.

B. To close shields.

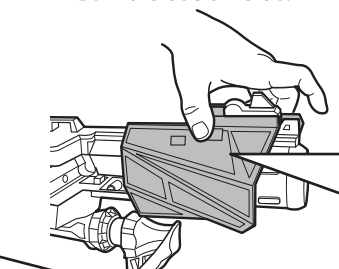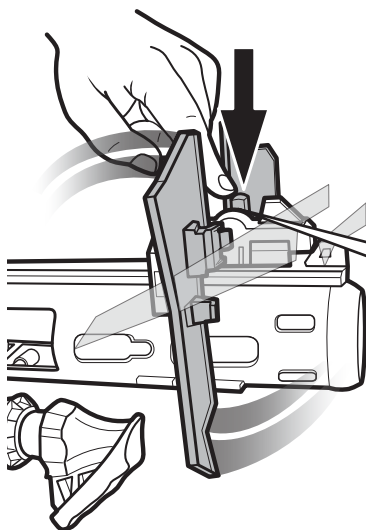


Detach shields as desired.


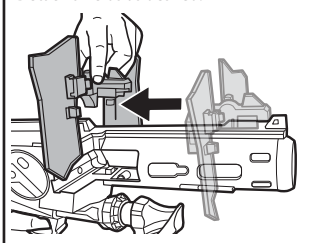


3 TO FIRE


A. Fully load clip with darts.

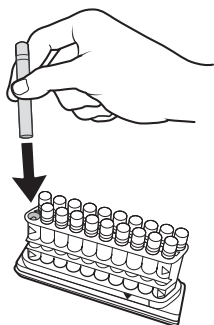


B. Insert the fully loaded clip from the left side of the blaster with the arrowheads pointing right.

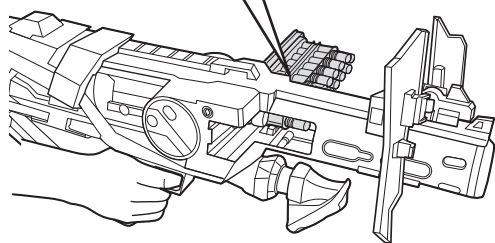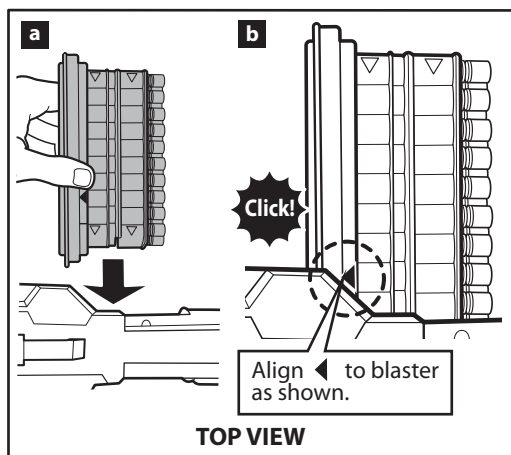


C. Pump sliding handle all the way forward and all the way back up to 18 times for maximum fire power.

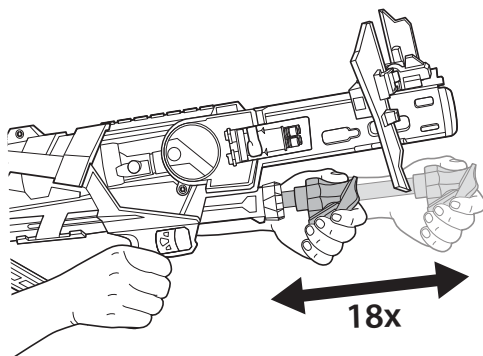

D.

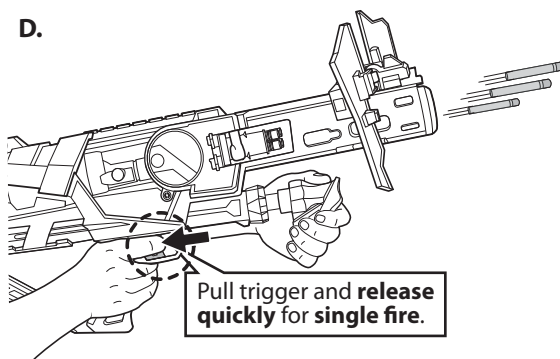


OR

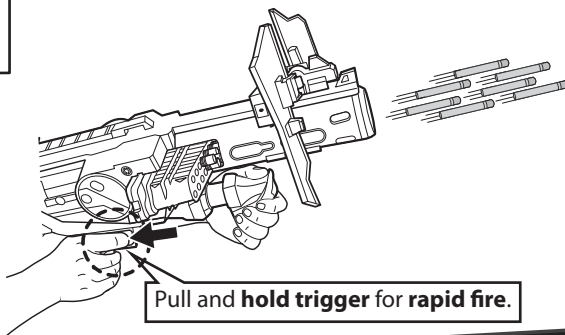


4 RESET

A. Remove empty clip from blaster.

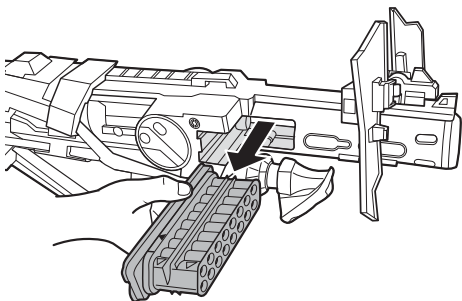

B. Press and hold RESET button and trigger to release all air from blaster.

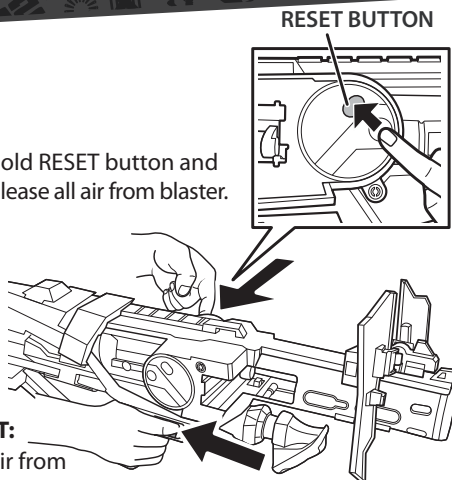


IMPORTANT:

Release all air from blaster when not in use.


5 PERFORMANCE TIPS

If rapid fire suddenly stops, try doing the following:


1. Check if there are empty slots in the clip. Press and release RESET button and pull trigger to advance clip one slot. At last empty slot, press and release RESET button and pull trigger to fire blaster.

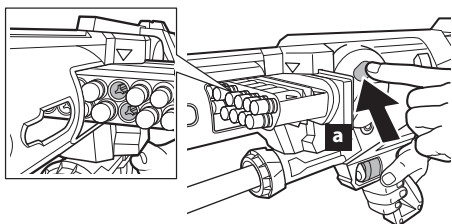

2. Pump sliding handle again to restore air pressure as needed to fire remaining darts.

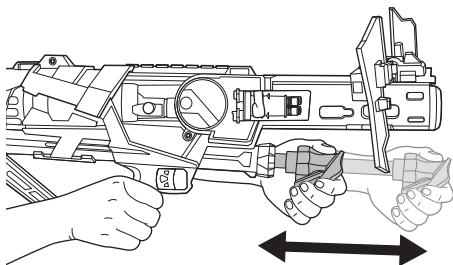


3. Clip may stop or slow down when dirt and lint gather in clip rails and blaster channels. For best performance, periodically wipe surfaces clean with paper towel (not included).

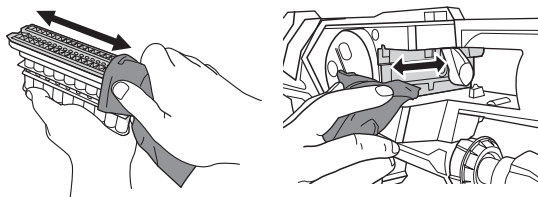

IMPORTANT INFORMATION
Read Carefully!


6 ATTACHING TARGETS

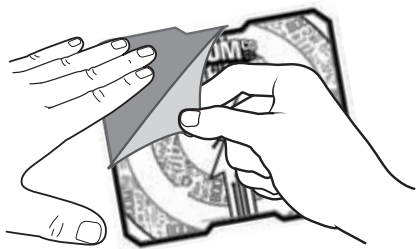

Peel backing off target before sticking it to surface.

- ✗ Do not stick target to walls or furniture as it may cause damage to the surface.

8 CLEANING DARTS & ROUNDS

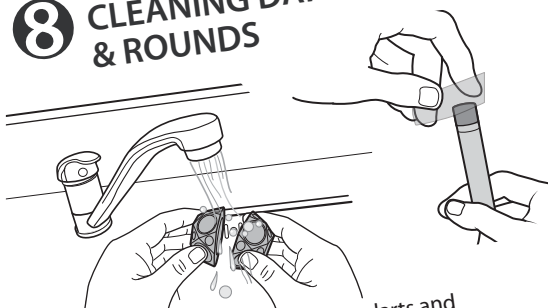


Dust, dirt, and other debris can cause darts and rounds to lose their adhesiveness.

To clean them, rinse darts' tips and rounds with tap water or use tape to remove excess debris.

NOTE: Dry darts and rounds before using again.

7 REMOVING DARTS & ROUNDS

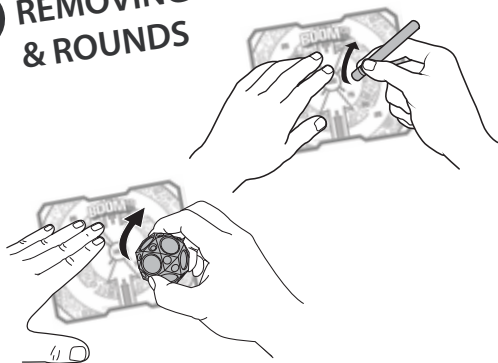

IMPORTANT:

Always remove darts and rounds from target after play. Keep one hand pressed on target, gently peel round off or hold dart by the tip and peel off.

9 REPLACING TARGETS & SHIELDS



Y8620/BBY17

Replace time-worn targets and shields with **Y8620/BBY17 SMART STICK REFILLS**.

Each sold separately, subject to availability.

©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel: 03-78803817, Fax: 03-78803867.

CGN78-0920



service.mattel.com