

CHF49
DGN25



Keep these instructions for future reference as they contain important information.




Adult assembly required.
Required tool: Phillips screwdriver (not included).



Requires two AA (LR6)
alkaline batteries
(not included).



Periodically wipe each part of this toy with a clean damp cloth.
Do not immerse.

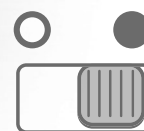

Slide the power switch on the cloud ● ON or ○ OFF.



Then, press the button to send the plane "flying" and hear more sounds!



First, lift the cloud and plane to the top and hear a fun sound!

Press the pilot seat for phrases, songs and sounds!



Listen for more phrases and sounds when the plane lands.


**Little
People**®
Fisher-Price

fisher-price.com


Assembly




1 *Hint: We recommend installing the batteries in the cloud before beginning assembly. See the **Battery Installation** section.*

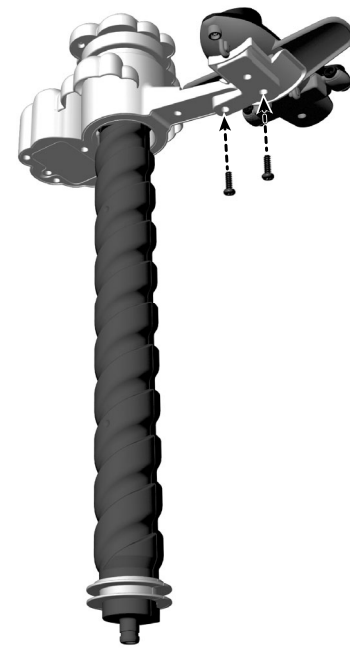


2 **BOTTOM VIEW**
Insert two screws into the underside of the cloud and tighten.

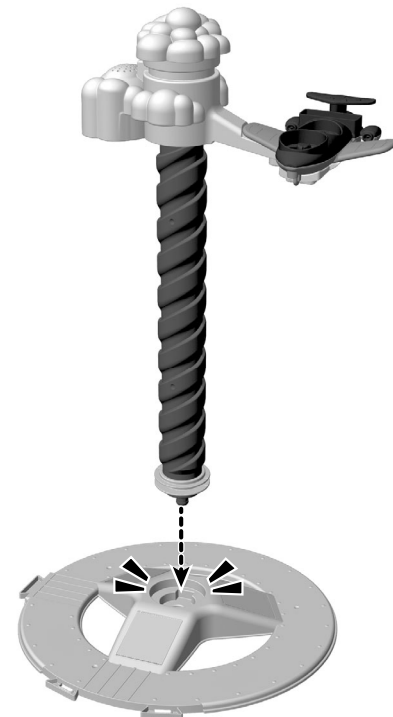


3 *Hint: You may need to lift the cloud to the top of the center post to complete this step.*

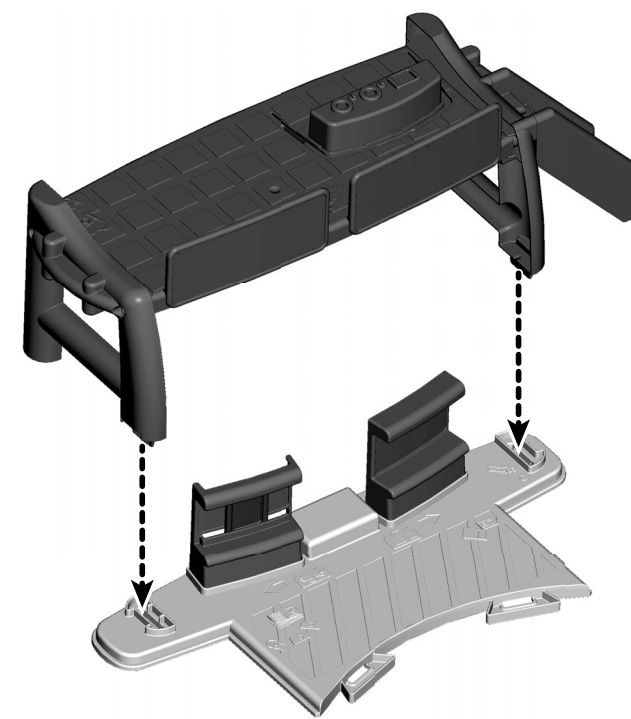


4

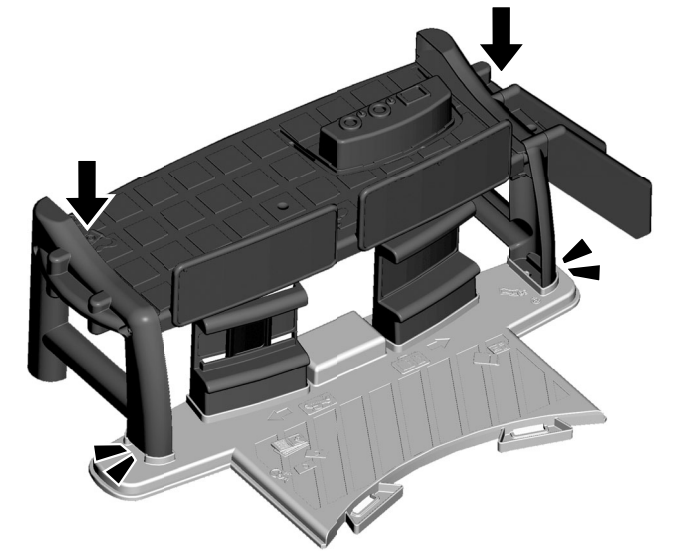


5

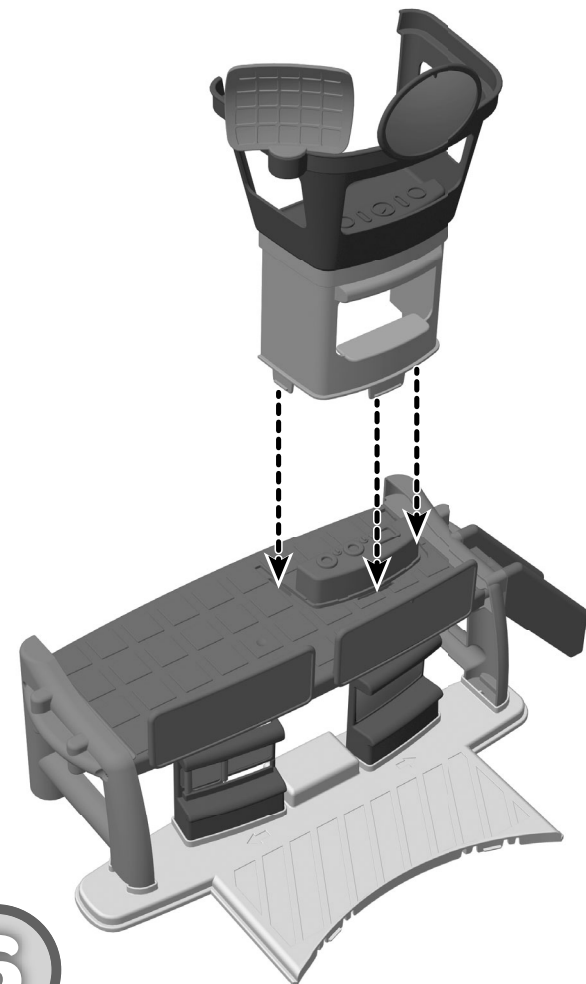


6

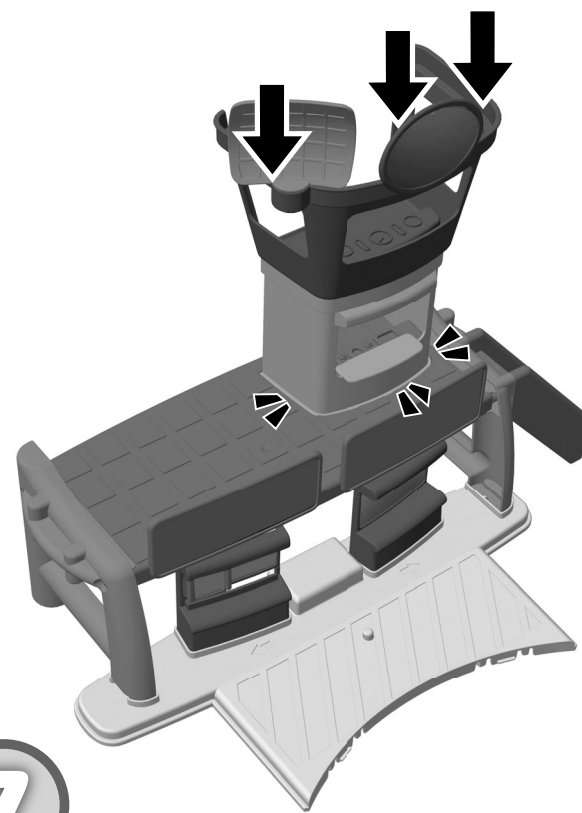


7

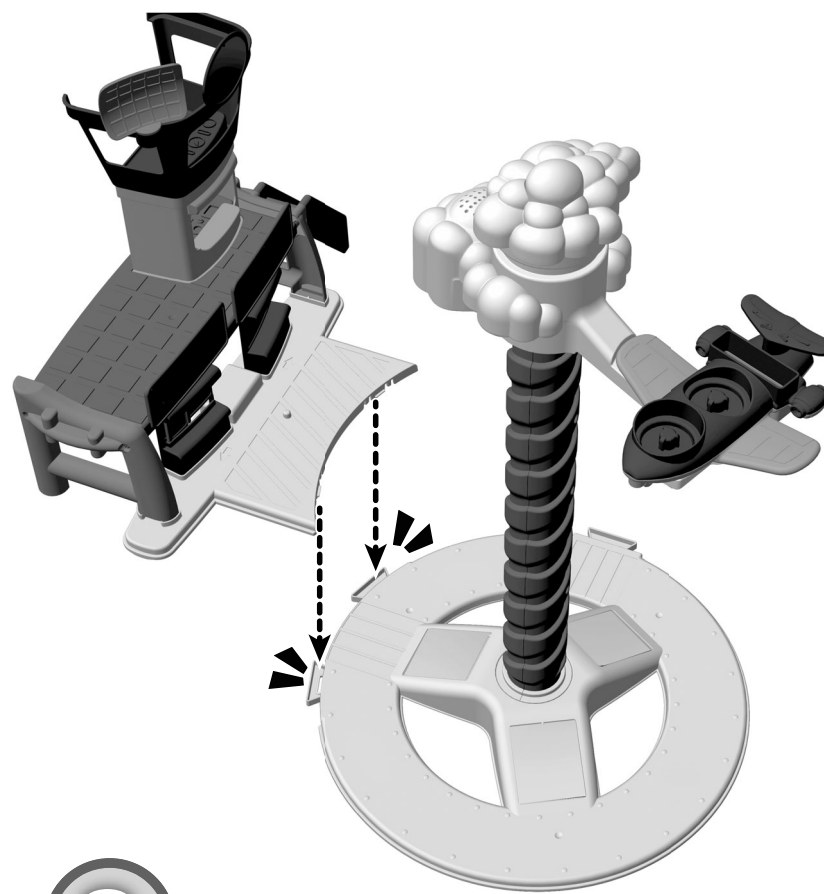


8

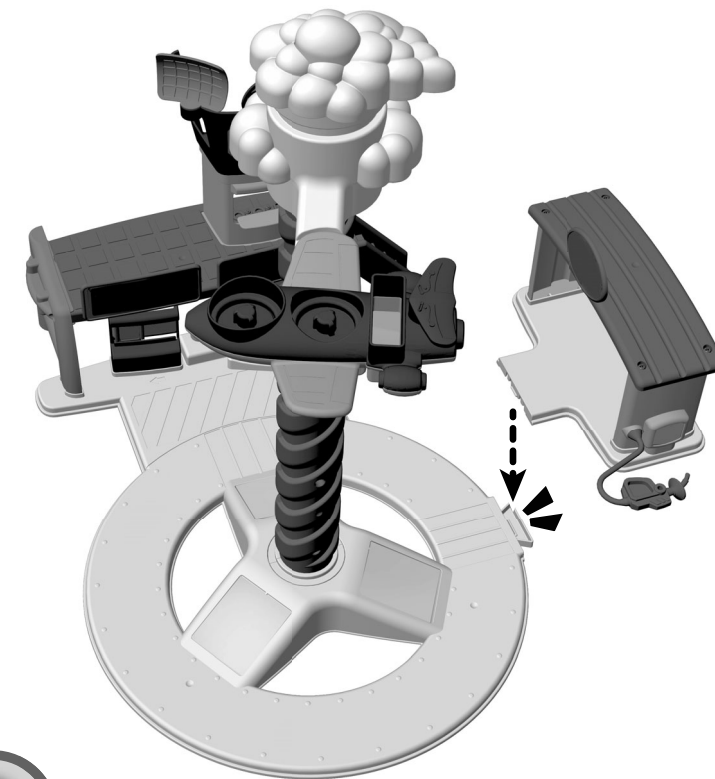

9

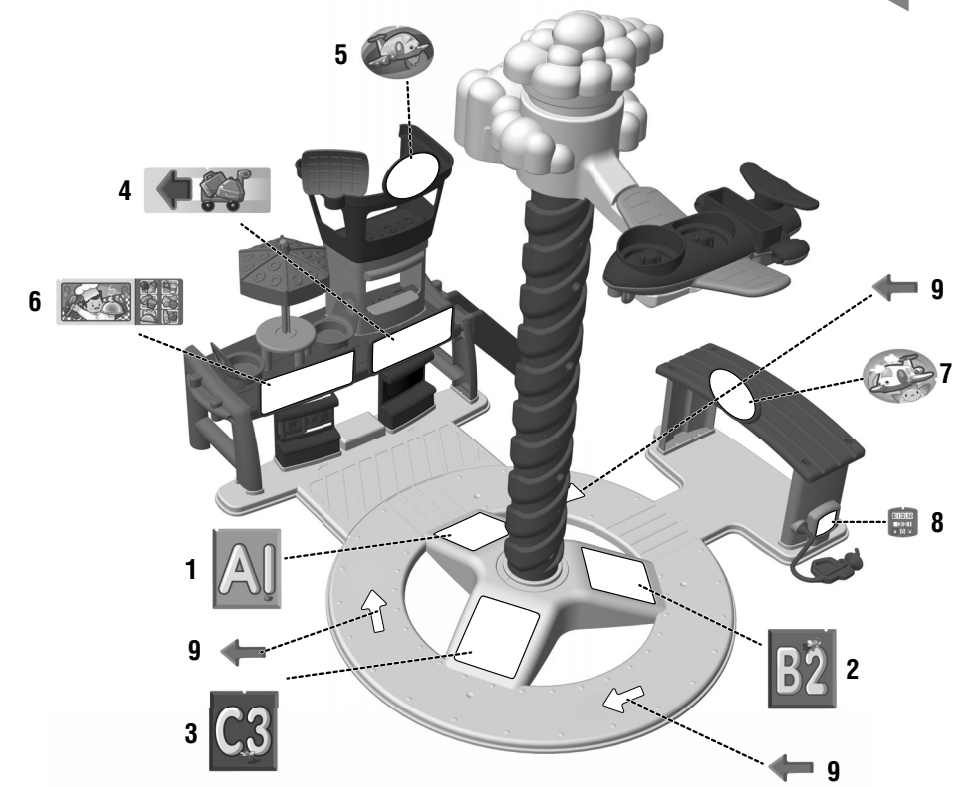

10 Apply the labels exactly as shown in the illustration. For best results, avoid repositioning a label once it has been applied.

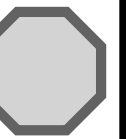

Assembled Parts



CAUTION

This package contains small parts.
For adult assembly only.



Center Post




Tower




Terminal Base



Hangar

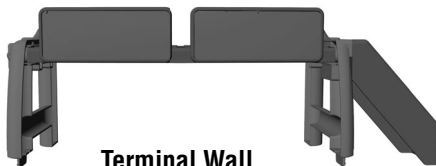

Terminal Wall

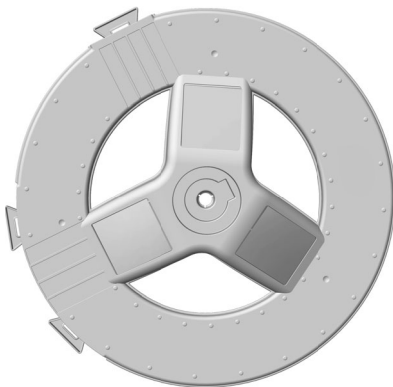

Base



Airplane

Part not shown: Label sheet




#6 x 3/4" (1,9 cm) Screws – 2
SHOWN ACTUAL SIZE

Tighten and loosen all screws with a Phillips
screwdriver. Do not over-tighten screws.

Battery Installation

Hint: We recommend installing the batteries before
beginning assembly.

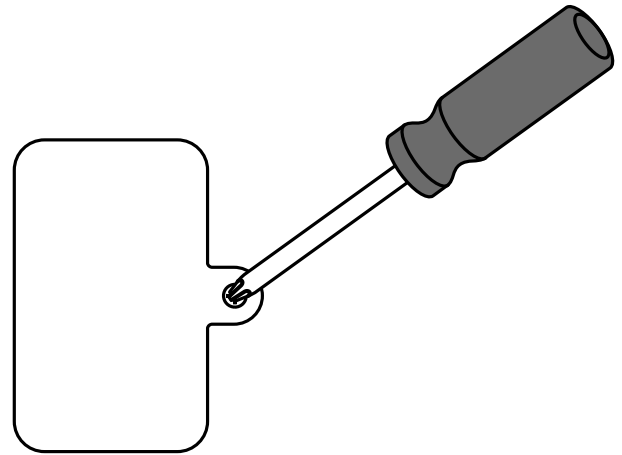

- For longer life, use **alkaline** batteries.
- Locate the battery compartment door on the bottom of the cloud.
- Loosen the screw in the battery compartment door and remove the door.
- Insert two AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

 **service.fisher-price.com**

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Godel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.