



## 4 ATTACHING TARGETS

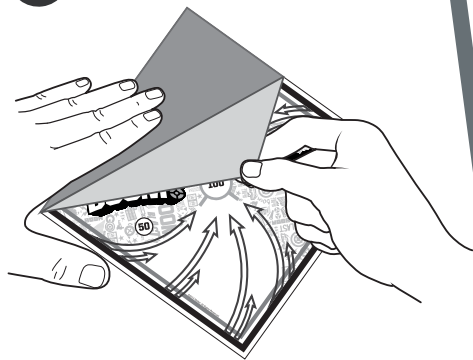

Peel backing off target before sticking it to surface.


- ✗ Do not stick target to walls or furniture as it may cause damage to the surface.

## 5 REMOVING DARTS

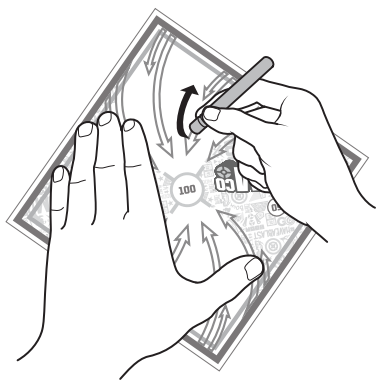

**IMPORTANT:**  
Always remove darts from target after play.  
Keep one hand pressed on target, hold dart by the tip and gently peel dart off.

## 6 CLEANING DARTS

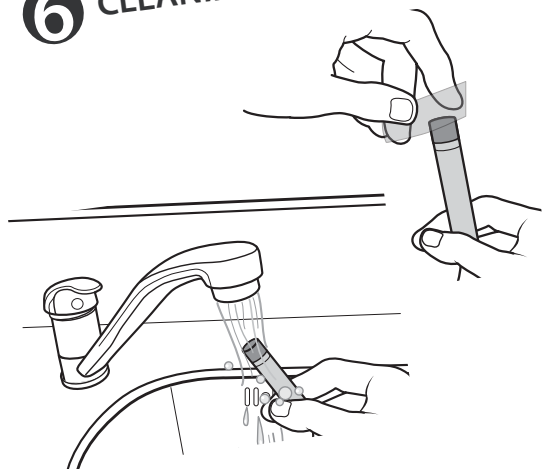

Dust, dirt, and other debris can cause darts to lose their adhesiveness.

To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

**NOTE:** Dry darts before using again.

## 7 REPLACING TARGETS & SHIELDS



Y8620/BBY17

Replace time-worn targets and shields with  
**Y8620/BBY17 SMART STICK REFILLS.**  
Each sold separately, subject to availability.



**WARNING:** Do not aim at eyes or face. Only use projectiles supplied with this toy.  
Do not fire at point blank range.  
Always wear appropriate eye-wear,  
sold separately.



**TWISTED SPINNER™**

**6+**

Please keep these instructions for future reference as they contain important information.

## 1 CONTENTS

**CAUTION:** Do not aim at eyes or face.  
**TO AVOID INJURY:** Use only darts  
designed for this product.  
Do not modify darts or dart blaster.

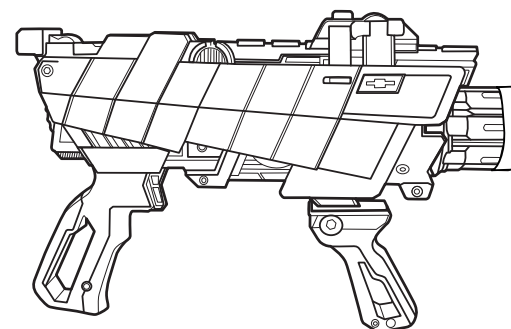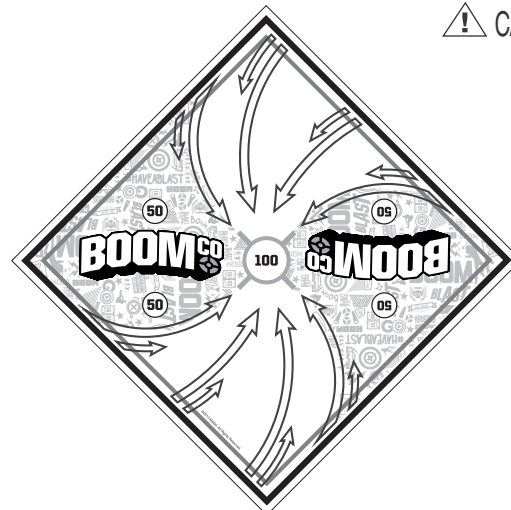

x 8


©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel:03-78803817, Fax:03-78803867.

CHM20-0920




## 2 SHIELDS



**A. Activate shields.**

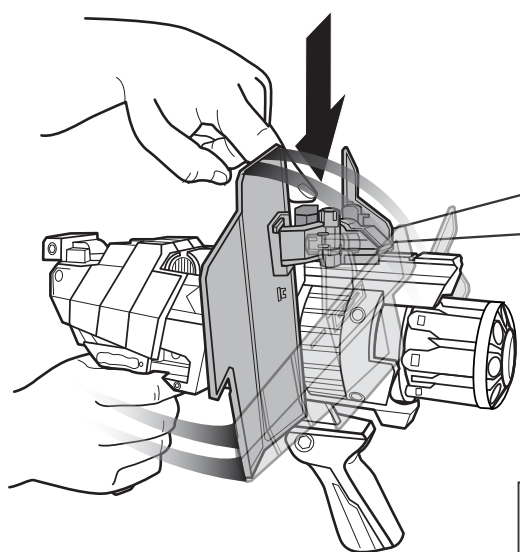

Detach shields as desired.

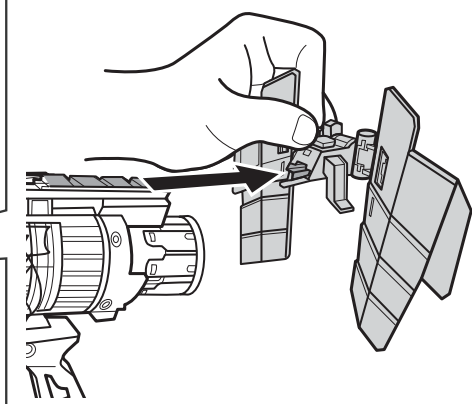


**B. To close shields.**

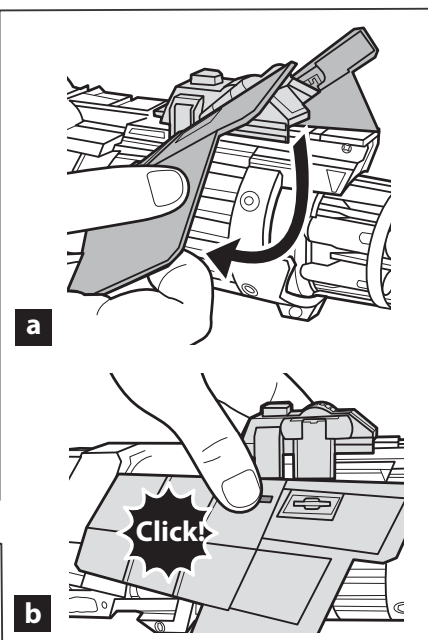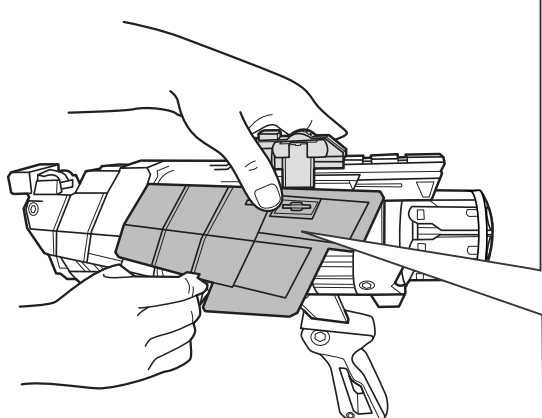


## 3 TO FIRE

**A. Load all darts into spin barrel.**

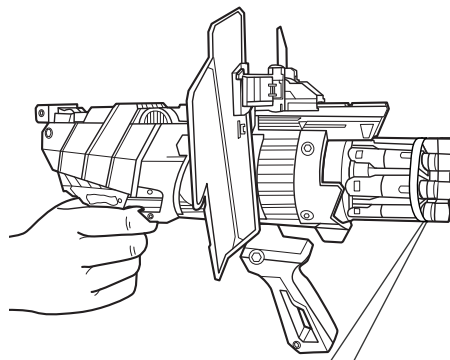


**B. Pull handle all the way back to fire.**

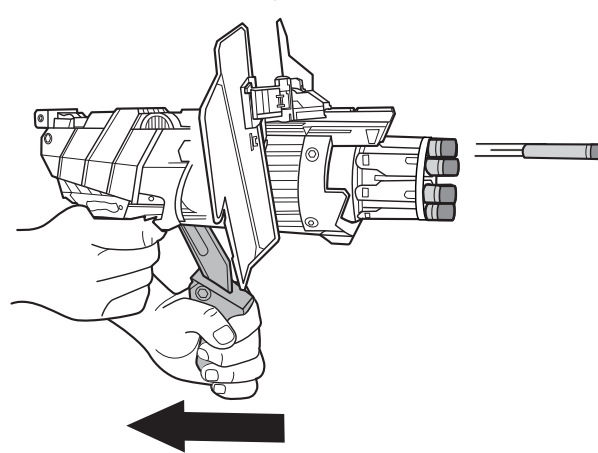

**NOTE:** Unload all darts from spin barrel when not in use.

**C. Push handle all the way forward to rotate to next dart.**

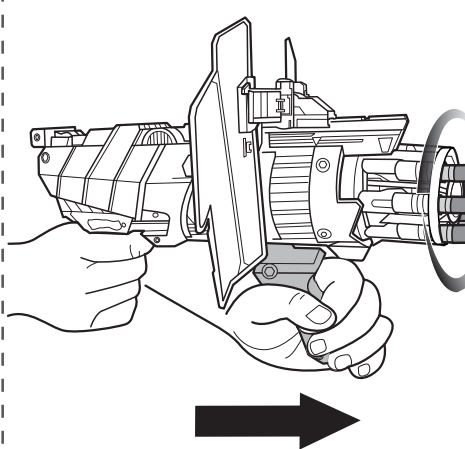

**D. Pull and push handle all the way forward and all the way back repeatedly for rapid fire.**

