



Keep these instructions for future reference, as they contain important information.
 Adult assembly is required. Tool required: Phillips screwdriver (not included).
 Wipe this toy with a clean, damp cloth.
 This toy has no consumer serviceable parts.
 Do not take apart.



CAUTION

This package contains small parts. For adult assembly only.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
 1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
 Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. www.service.mattel.com/uk


Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.


Assembly

1

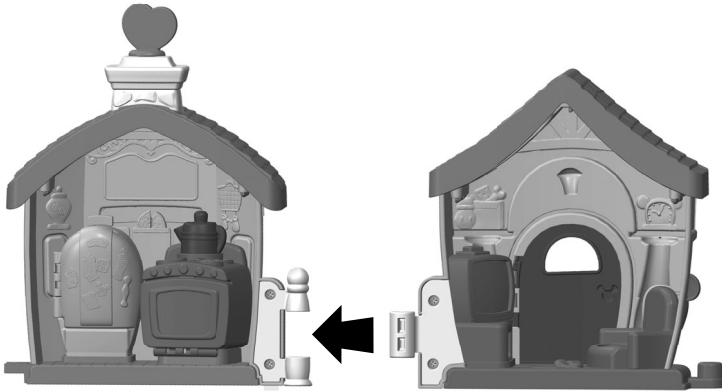

- Fit the front and back of the house together.

2

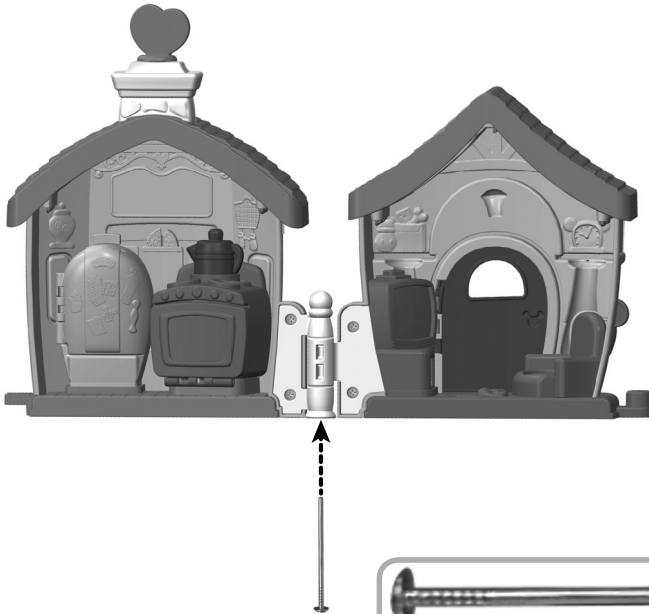

- Insert a #6 x 2 1/4" (57 mm) screw through the hole in the hinge and tighten with a Phillips screwdriver. Do not over-tighten.