
BEFORE YOU PLAY

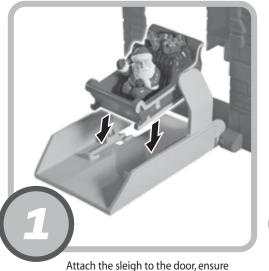


Attach the sleigh to the door, ensure the tabs on the underside of the sleigh fit into the slots on the door.



Raise and close the door.




Place the barrel on the platform of the Candy Cane Factory.

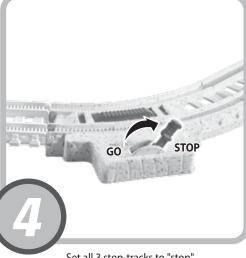


Set all 3 stop-tracks to "stop".

HOW TO PLAY


Thomas should move forward in the direction of the arrow.

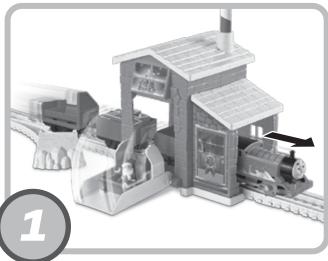


As the engine passes, Sir Topham Hatt pops out dressed as Santa!

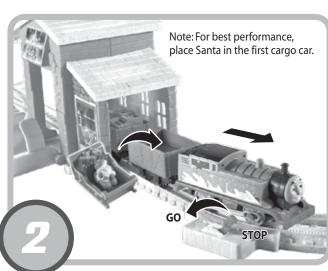


Load Santa into the first cargo car. Then flip the switch to let the engine go.

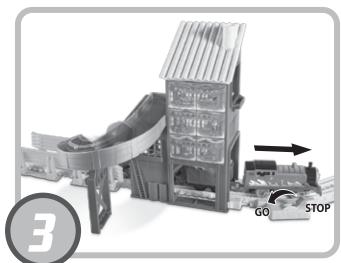

As the engine passes, the barrel rolls down into the third cargo car. Then flip the switch to let the engine go.

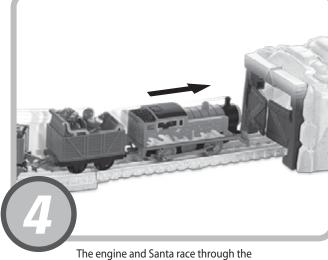

snow-covered tunnel.

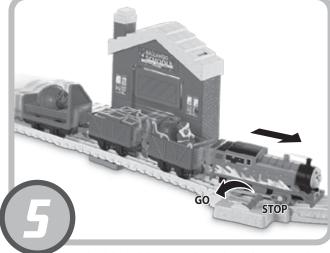

Unload the holiday cargo, then release the stop-track to send the engine on his way.

Note: If the engine runs continuously for approximately 5 minutes, it will automatically shut off to preserve battery life. To resume play, press the button on the engine.

nterference to radio or television reception, which can be determined by turning the equipmen off and on, the user is encouraged to try to correct the interference by one or more of the

Consult the dealer or an experienced radio/TV technician for help.

Operation is subject to the following two conditions

BATTERY INFORMATION

BATTERY INSTALLATION

Access the battery compartment by unscrewing and separating the top half of the engine from the bottom half of the engine. Replace the batteries as indicated inside the battery compartment. Re-assemble the two halves of the engine, re-insert the screw and tighten. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. If the product begins to malfunction, check the battery installation. You may need to reset the electronics by removing the batteries and reinstalling them. If the product continues to malfunction or no longer operates, remove the batteries from the toy Requires 2 "AAA" (LR03) batteries.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage


CONSUMER ASSISTANCE

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052. Hearing-impaired consumers: 1-800-382-7470.

- Non-rechargeable batteries are not to be recharged. • Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision • Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries. • Only batteries of the same or equivalent type as recommended are to be used Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product

The supply terminals are not to be short-circuited. • Dispose of battery(ies) safely. • Do not dispose of this product in a fire. The batteries inside may explode or leak.

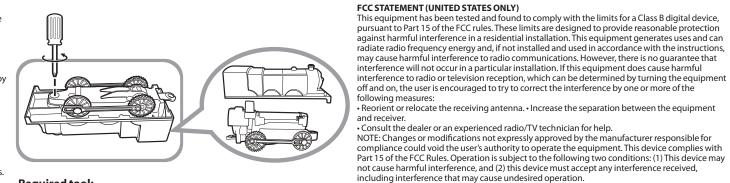

Phillips screwdriver (not included)

Required tool:

+ 1,5V x 2 + "AAA" (LR03)

Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

reçu, même si ce brouillage est susceptible de compromettre son fonctionnemen

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique



Great Britain: Mattel UK Ltd, Vanwall Business Park Maidenhead SL6 4UB. Helpline: 01628 500303. ©2015 Mattel. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, except as noted. **PRINTED IN CHINA.** Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, lattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Ned Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Australia: Mattel Australia Pty. Ltd., 658 Church Street Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Outside the United States:

CHY06-0970-G2



authority for recycling advice and facilities.



CAN ICES-3 (B)/NMB-3 (B)






CHY06




INSTRUCTIONS

Keep these instructions for future reference as they contain important information.




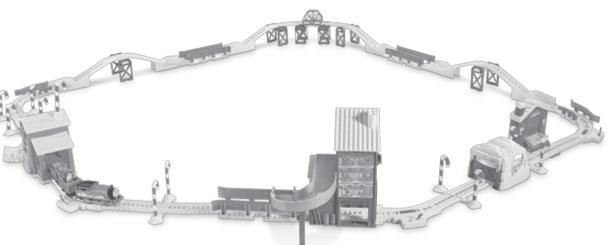


WHAT'S INCLUDED

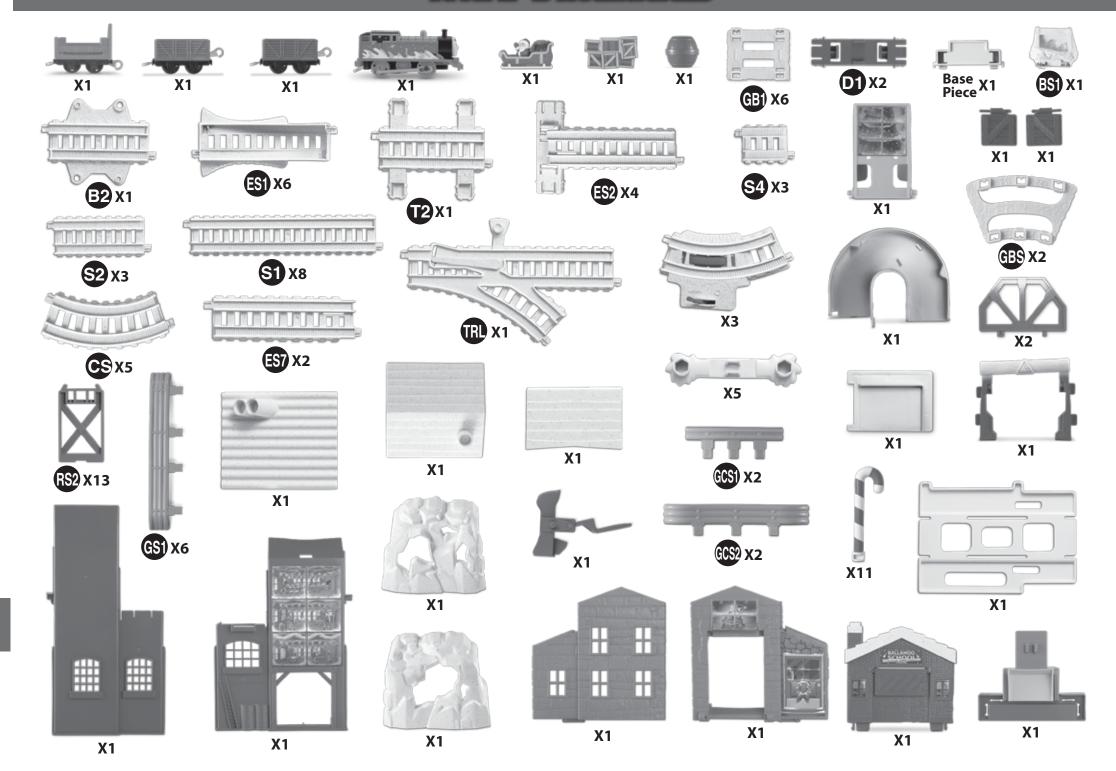

LABEL PLACEMENT

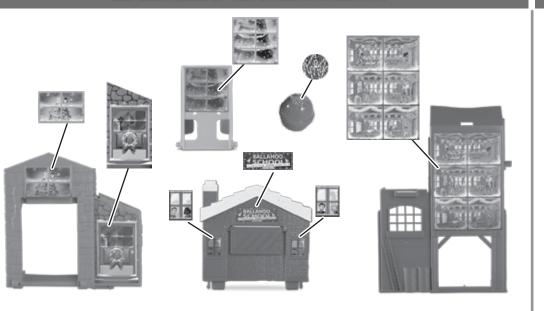

HELPFULHINTS

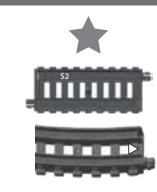

- **ONE-TIME SNAP:** Assembly step that is marked with a star is "one-time snap". Once this part is put together, it cannot be taken apart.
- Track marking codes are found on the bottom of tracks and risers.
- While connecting the track (ES7) that are marked with a triangle >, make sure the side with the triangle always points towards the lower track.
- Some track sections (ES2, ES7) are intentionally curved, they are not damaged.

Note: Some engines may not work on this track set.


ADULT ASSEMBLY REQUIRED. No tools needed.


ASSEMBLY


ASSEMBLY ASSEMBLY


Note: After step17, please follow the track layout to connect and assemble all the tracks and risers.


Note: Arrows should always point to the lower track.

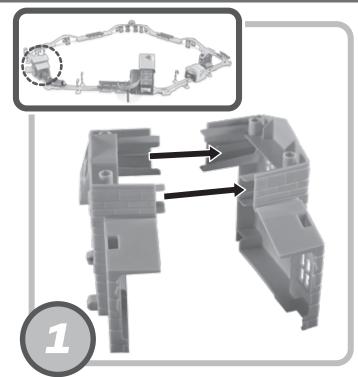

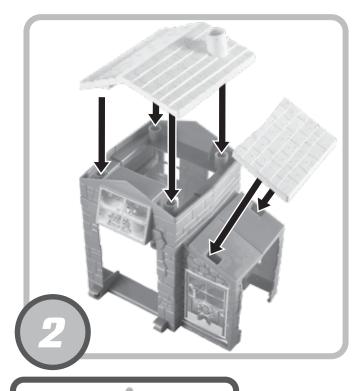


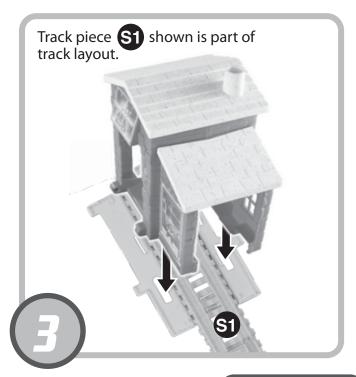


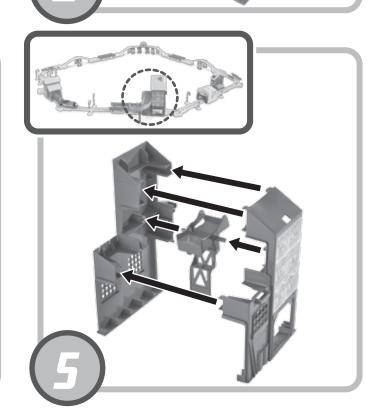


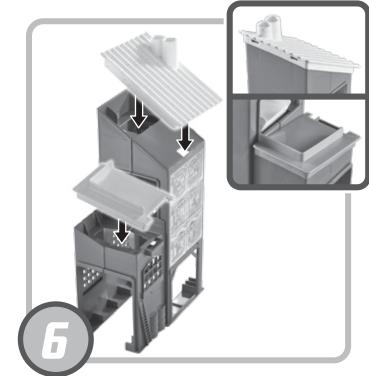




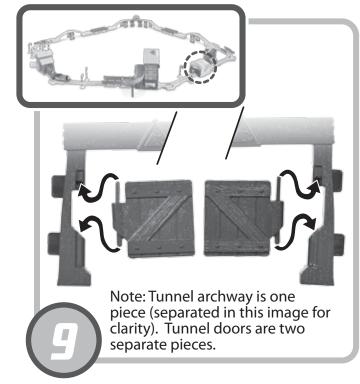

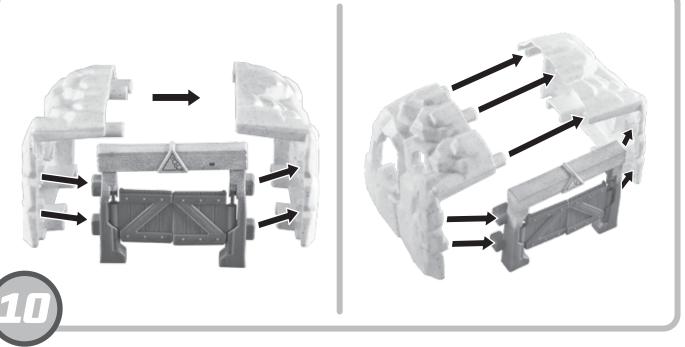

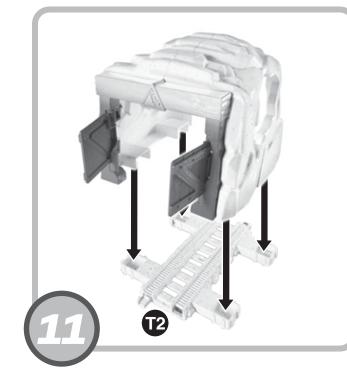

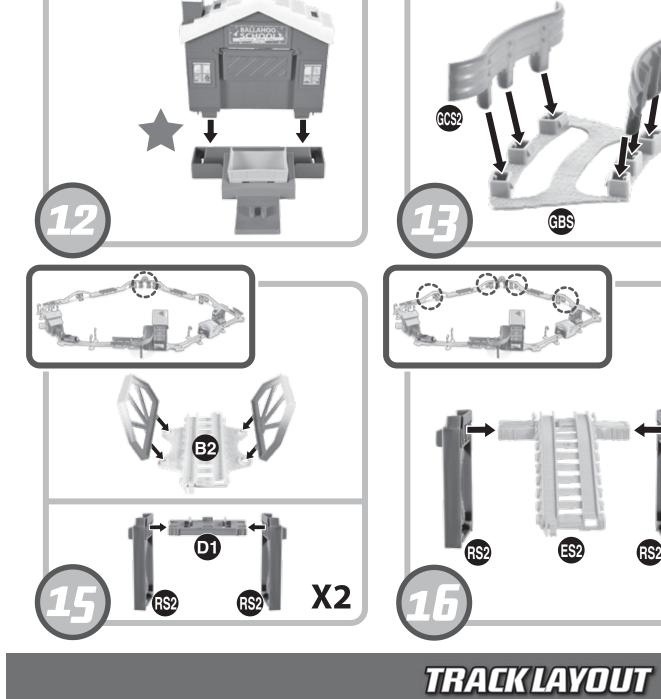


S2 [

S2 Base Piece

S2

SI

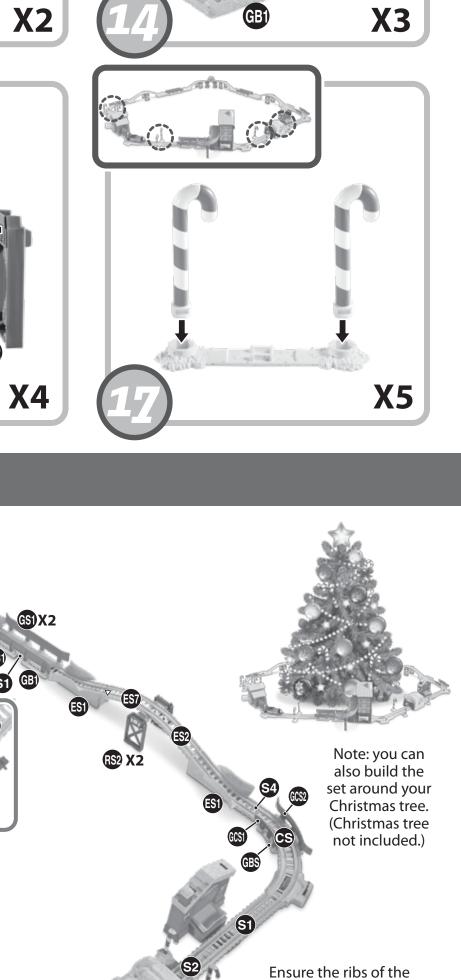

house fit into the slots of the Base Piece beneath the track.