



## 6 ATTACHING TARGETS

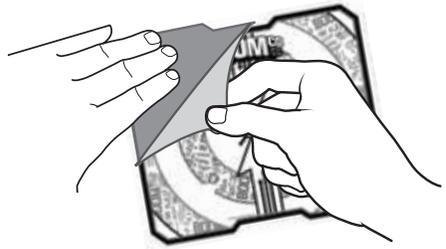

Peel backing off target before sticking it to surface.

- ✗ Do not stick target to walls or furniture as it may cause damage to the surface.

## 8 CLEANING DARTS

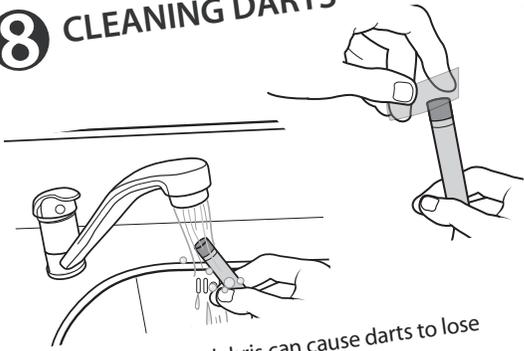


Dust, dirt, and other debris can cause darts to lose their adhesiveness.

To clean darts, rinse darts' tips with tap water or use tape to remove excess debris.

**NOTE:** Dry darts before using again.

## 7 REMOVING DARTS

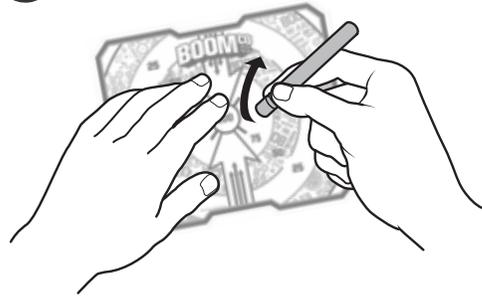

### IMPORTANT:

Always remove darts from target after play. Keep one hand pressed on target, hold dart by the tip and gently peel dart off.

## 9 REPLACING TARGETS & SHIELDS



Y8620/BBY17

Replace time-worn targets and shields with **Y8620/BBY17 SMART STICK REFILLS**.

Each sold separately, subject to availability.



**WARNING:** Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range. Always wear appropriate eye-wear, sold separately.

 

**RAPID MADNESS™**

**6+**


Please keep these instructions for future reference as they contain important information.

## 1 CONTENTS

**CAUTION:** Do not aim at eyes or face. TO AVOID INJURY: Use only darts designed for this product. Do not modify darts or dart blaster.

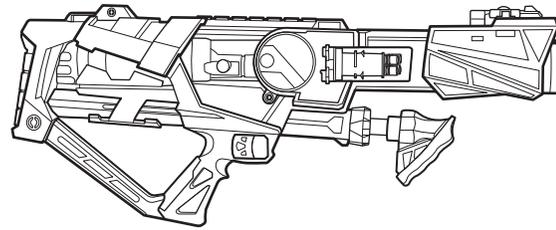


x 30

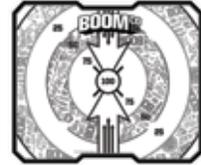




## 2 SHIELDS

A. Activate shields.

B. To close shields.

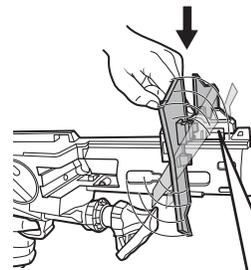

Detach shields as desired.

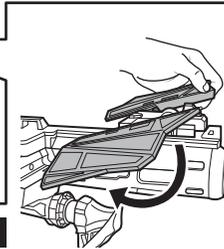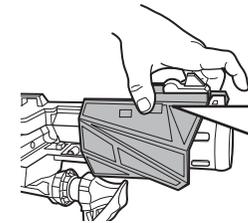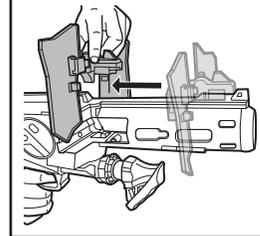

a



b


©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd. (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ, Malaysia. Tel:03-78803817, Fax:03-78803867.

Y8618-0920





### 3 TO FIRE


A. Fully load clip with darts.

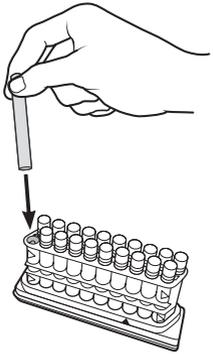


B. Insert the fully loaded clip from the left side of the blaster with the arrowheads pointing right.

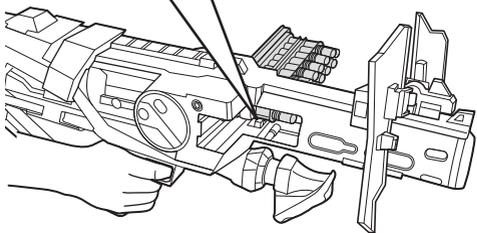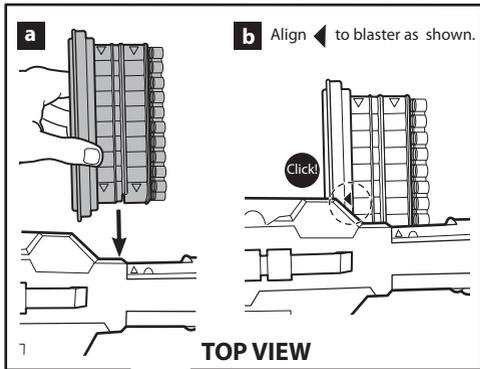


C. Pump sliding handle all the way forward and all the way back up to 18 times for maximum fire power.

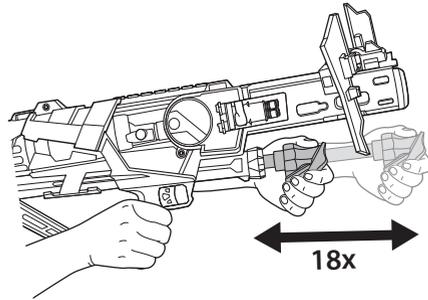

D. Pull trigger and release quickly for single fire.

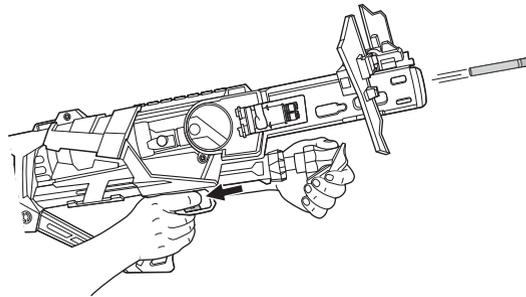


E. Pull and hold trigger for rapid fire.

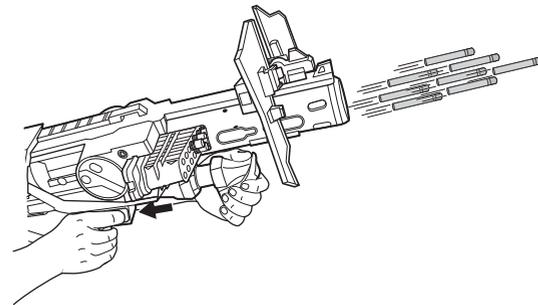


### 4 RESET

A. Remove empty clip from blaster.

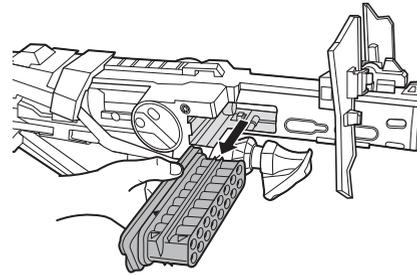

B. Press RESET button and trigger. Hold to release all air from blaster.

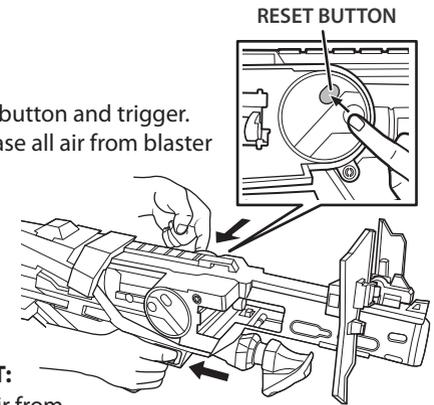


**IMPORTANT:**  
Release all air from blaster when not in use.

### 5 PERFORMANCE TIPS

**! IMPORTANT INFORMATION**  
Read Carefully!

If rapid fire suddenly stops, try doing the following:

A. Check if the remainder of the clip is loaded. Rapid fire will stop at empty slots. Press and release RESET button to advance to loaded slots, then pull and hold trigger to continue firing.

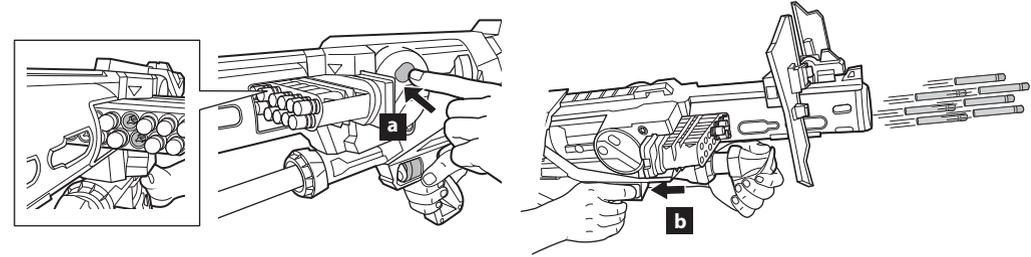

B. Pump sliding handle again until there is resistance, then pull and hold trigger to continue firing.

