


STAR WARS™



FLIGHT CONTROLLER™ HANDHELD ACCESSORY

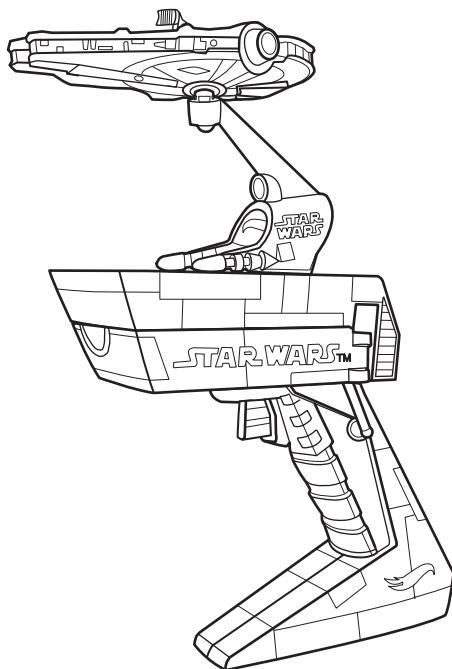

4+

© & ™ Lucasfilm Ltd.
service.mattel.com

HOTWHEELS.COM




ASST.DFT83
CKB11-0970
1100313188-DOM

INCLUDES 3 (AG13, LR44) BUTTON CELL BATTERIES. DISPOSE OF BATTERIES SAFELY.


PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

CONTENTS

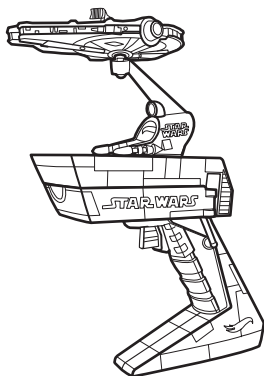



TO PLAY

- 1. MAKE SURE STARSHIP IS ATTACHED TO FLIGHT CONTROLLER™ FOR LIGHTS AND SOUNDS TO WORK.**

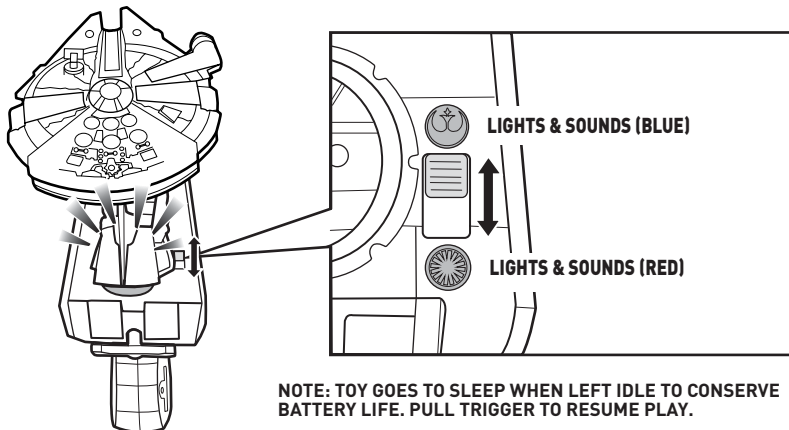

NOTE: TOY GOES TO SLEEP WHEN LEFT IDLE TO CONSERVE BATTERY LIFE. PULL TRIGGER TO RESUME PLAY.


- 2. PULL TRIGGER TO ACTIVATE LIGHTS AND SOUNDS.**
- 3. TILT CONTROLLER LEFT AND RIGHT TO MANEUVER THE STARSHIP.**

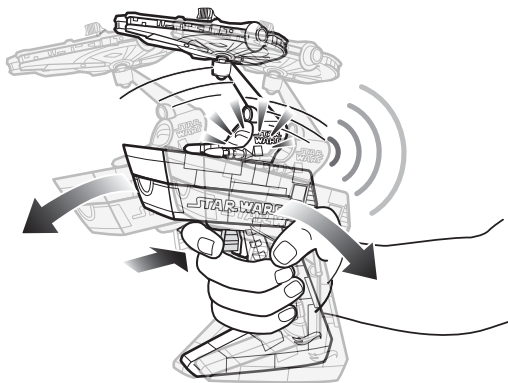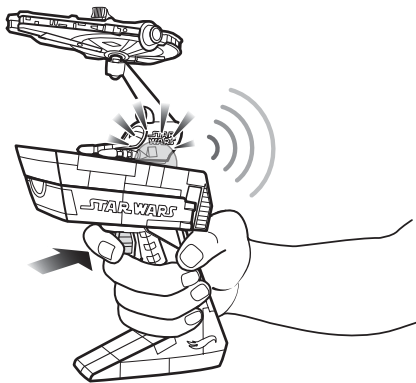


TO PLAY (CONTD.)

4. ATTACH ENEMY STARSHIP (NOT INCLUDED) TO PLAY AS THE ENEMY!

a

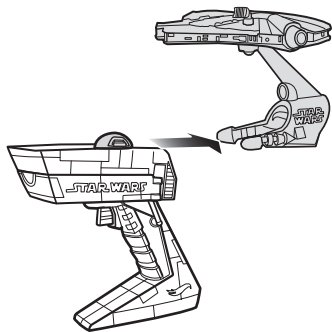


b

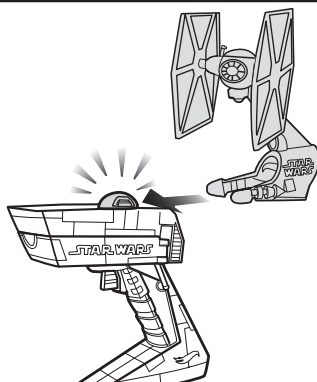


MORE WAYS TO PLAY


1. OPEN THE CONTROLLER TO HOLD UP TO 3 STARSHIPS.

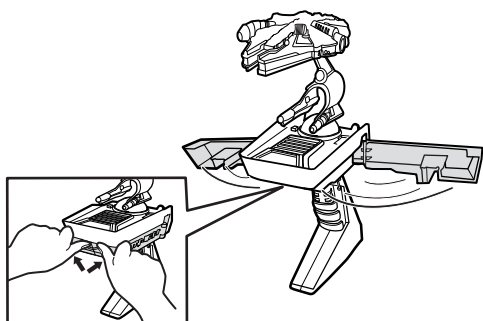

2. ATTACH ADDITIONAL STARSHIPS (NOT INCLUDED).

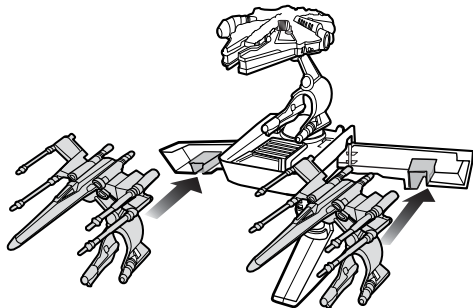


3. SHIFT THE LEVER LEFT AND RIGHT TO MANEUVER ALL STARSHIPS.

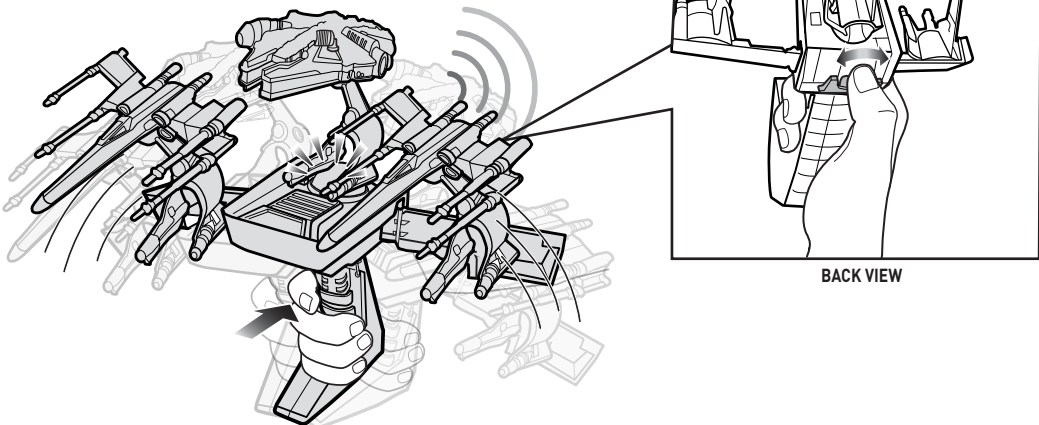

INCLUDES 1 STARSHIP. ADDITIONAL STARSHIPS SOLD SEPARATELY. NOT FOR USE WITH SOME HOT WHEELS® VEHICLES.

BATTERY REPLACEMENT

- Batteries included are for demonstration purposes only.
- Replace the batteries if sounds distort or lights dim.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries and dispose of them safely.
- Install 3 new button cell (AG13, LR44) batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life use alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

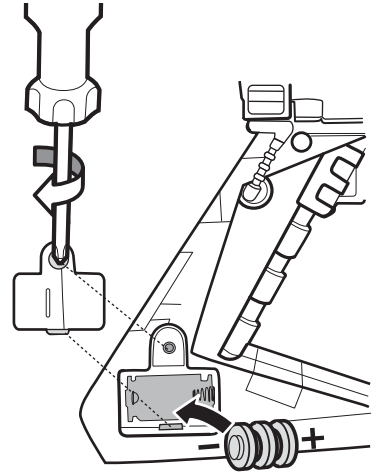

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.