



1

Lay & Play



2

Tummy Time



3

On-the-go

Keep this instruction sheet for future reference,
as it contains important information.


Adult setup is required.

Requires three, AA (LR6) **alkaline** batteries (not included).

Only adults should install batteries.

Tool required for battery installation: Phillips screwdriver (not included).

Battery Installation

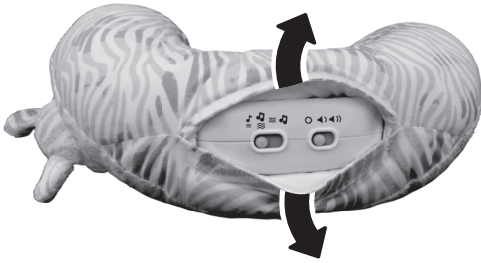

- Open the fasteners on the back of the tummy wedge.
- Remove the electronic unit from inside the tummy wedge.



For longer life, use **alkaline** batteries.



- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three, AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.



- Protect the environment by not disposing of this product with household waste (2013/19/EU). Check your local authority for recycling advice and facilities.




- Fit the electronic unit back inside the tummy wedge.
- Make sure the electronic unit button/speaker is facing the front side of the tummy wedge.
- Make sure the power/volume and mode switches on the electronic unit face out.
- Close the fasteners.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sound/vibrations become faint or stop, it's time for an adult to change the batteries.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Music & Soothing Vibrations

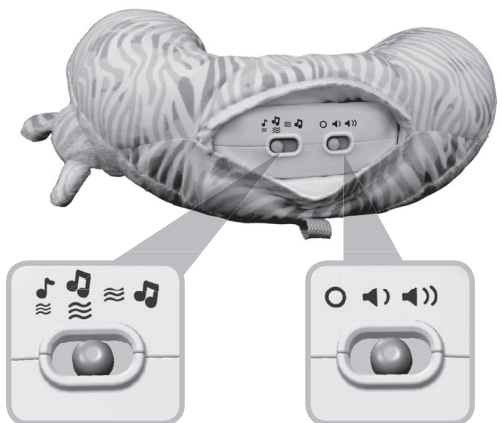

Mode Switch

Power/Volume Switch

- Open the fasteners on the tummy wedge to access the power/volume and mode switches.
- Slide the power/volume switch to ON with low volume ◀), ON with high volume ▶) or OFF ○.
- Slide the mode switch to:
 - ♪ **Short Play Music & Vibration** - Listen to a musical ditty along with soothing vibrations.
 - ♪ **Long Play Music & Vibration** - Baby enjoys about 20 minutes of music and 5 minutes of vibration.
 - ≈ **Vibration Only** - Soothe baby with 5 minutes of calming vibrations.
 - ♪ **Music Only** - Delightful music plays for about 20 minutes.
- After making selections, close the fasteners on the tummy wedge.
- Now, press the musical note 🎵 on the front of the toy to start your selection. Press again to turn off your selection.



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Lay & Play Gym



WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.




Using the link on each toy, attach to any of the loops on the arches or the mat.

Tummy Time Tummy Wedge



WARNING

To prevent serious injury or death from suffocation: Never use in crib. Never use with sleeping child. Never leave child unattended.

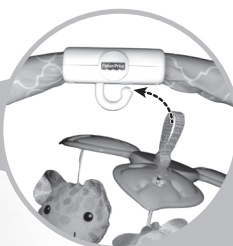

Attach the loop on the mobile to the hook on the arch.



Tummy Wedge

On-the-go Mobile



Remove the link from the mat loop.



Remove the mobile from the arch hook.




Attach the link to the mobile loop.



• Attach the link on the mobile to your stroller.

Care

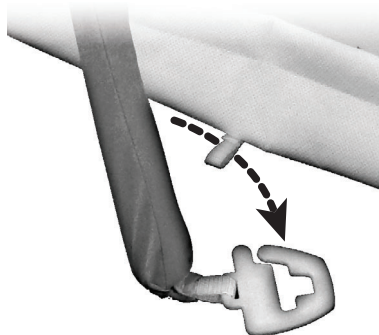

- The mat and tummy wedge are machine washable. **First, remove the electronic unit from the tummy wedge.** Remove the arch assembly from the mat. While holding the arches together, carefully unfasten the hook on each end of the arches. Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly, hanging toys, link and mobile are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the electronic unit.