




1

Lay &amp; Play

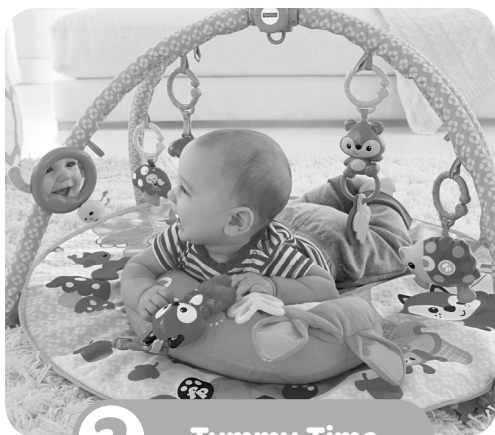

2

Tummy Time



3

Plush Take-Along



Please keep this instruction sheet for future reference,  
as it contains important information.

Adult setup is required.



Requires three AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation: Phillips screwdriver (not included).

# Battery Installation

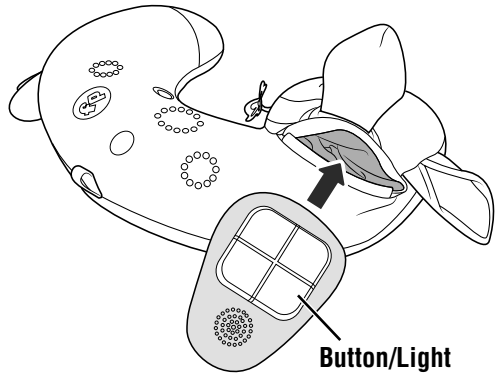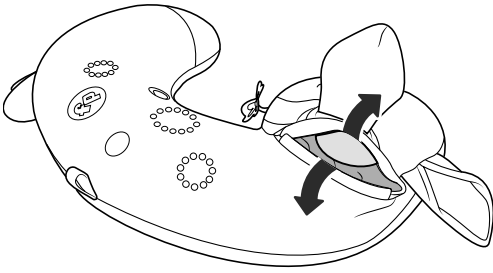

- For longer life, use **alkaline** batteries.
- Open the fasteners on the front of the tummy wedge.
- Remove the electronics box from inside the tummy wedge.

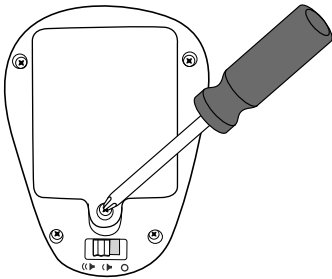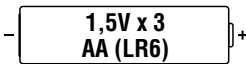

- Loosen the screw in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

- Position the electronics box so the button/light are facing the top of the tummy wedge. Fit the electronics box, wide end first, back inside the tummy wedge. Close the fasteners on the tummy wedge.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds/light become faint or stop, it's time for an adult to change the batteries.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Tummy Time




### WARNING

To prevent serious injury or death from suffocation: Never use in crib. Never use with sleeping child. Never leave child unattended.




Tummy Wedge

Power/Volume  
Switch

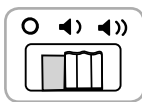

Mode Switch

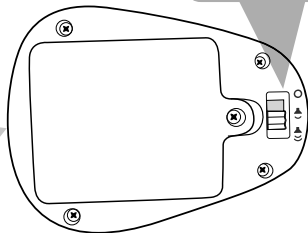


## Music, Light & Hanging Toys!



### WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

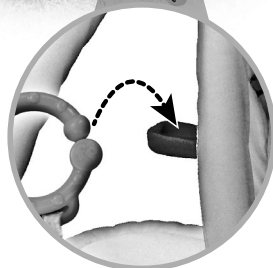


Using the link on the hanging toys, hang on any of the loops around the gym.

- Open the fasteners on the tummy wedge to access the power/volume switch and mode switch. Slide the power/volume switch on the electronics box to ON with low volume ◀▶, ON with high volume ▶▶ or OFF ○.

- Slide the mode switch on the tummy wedge to:

- **Short Play** - Press the cheek button or shake the tummy wedge for musical ditties and light.
- 🎵 **Long Play** - Press the cheek button for approximately 20 minutes of music and light.

## Care

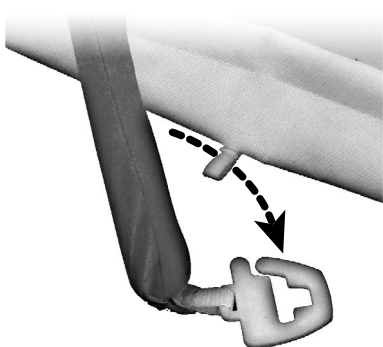

- The mat and tummy wedge are machine washable. **First, remove the electronics box from the tummy wedge.** Remove the arch assembly from the mat. While holding the arches together, carefully unfasten the hook on each end of the arches. Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly and hanging toys are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse the electronic box.

## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

### CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

## service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

**Outside the United States:**

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500303. [www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.