

CMN78



Keep these instructions for future reference as they contain important information.



Adult assembly required. Required tool: Phillips screwdriver (not included).



Requires two AA (LR6) alkaline batteries (not included) for operation.


This toy contains magnets. Do not use around items that are sensitive to or affected by magnets.

# SPINNYOS™

Fisher-Price

fisher-price.com

## Assembled Parts

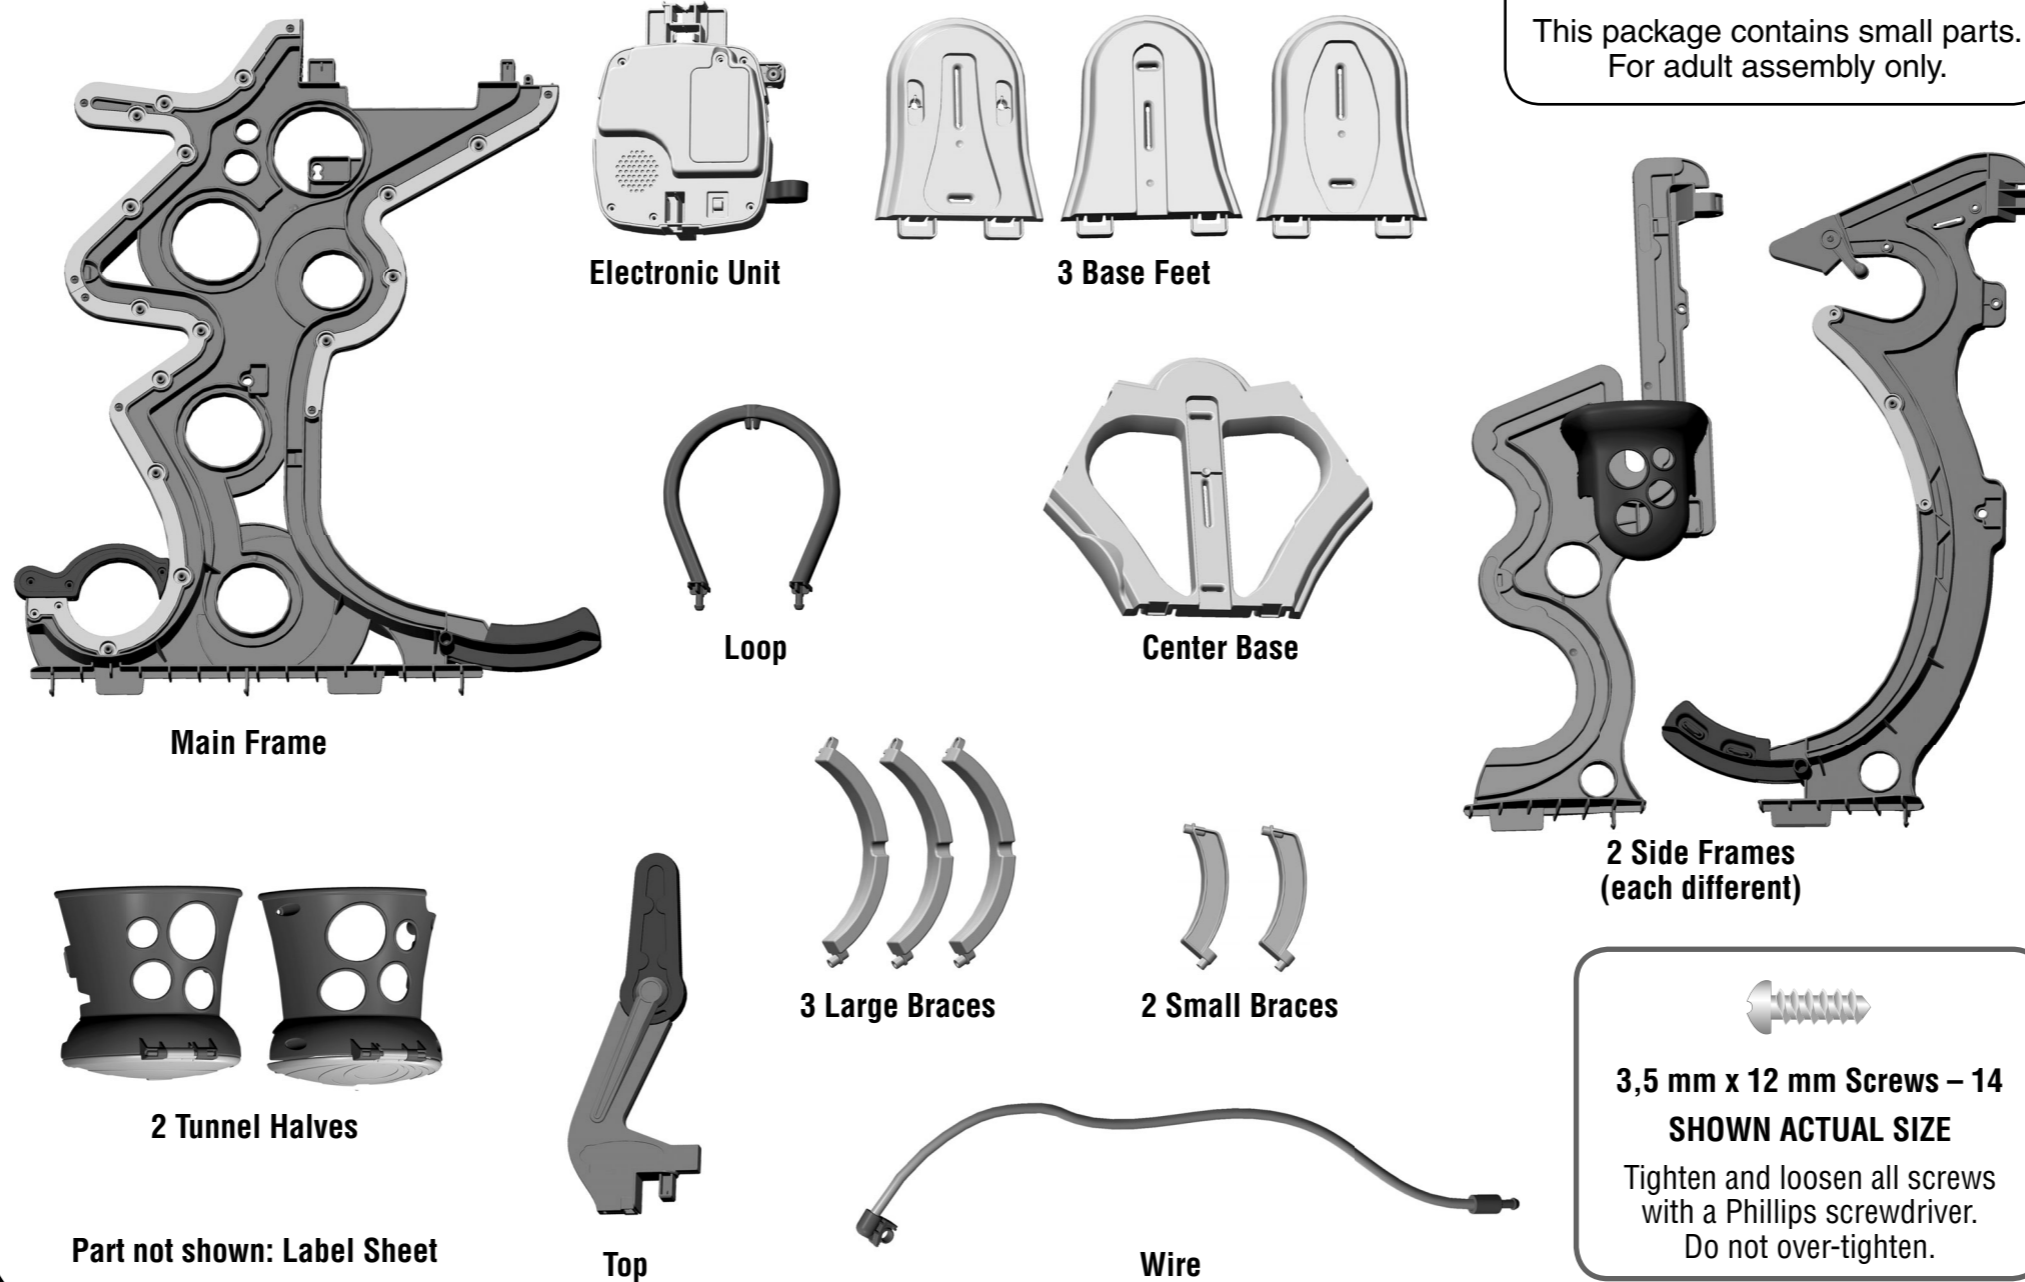

**CAUTION**  
This package contains small parts. For adult assembly only.

**3,5 mm x 12 mm Screws – 14**  
**SHOWN ACTUAL SIZE**  
Tighten and loosen all screws with a Phillips screwdriver. Do not over-tighten.

## CONSUMER INFORMATION

**CONSUMER ASSISTANCE**  
1-800-432-5437 (US & Canada)  
1-800-135-312 (Australia)  
[service.fisher-price.com](http://service.fisher-price.com)

**Outside the United States:**  
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).  
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL5 4UB; [www.service.mattel.com](http://www.service.mattel.com).  
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.  
New Zealand: 16-18 William Pickering Drive, Albany 1301, Auckland.

**FCC STATEMENT (UNITED STATES ONLY)**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

**CAN ICES-3 (B)/NMB-3 (B)**  
Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes: (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Care**  
Wipe this toy with a clean, damp cloth. Do not immerse.

©2015 Mattel. All Rights Reserved. PRINTED IN CHINA CMN78-0070 110855451-00M

## Assembly

- x3**
- x1**
- x1**
- x1**
- x1** **TURN PRODUCT**
- x1** **TURN PRODUCT**
- x1**
- x1** **TURN PRODUCT**
- x1**
- x1**
- x1**
- x1**
- x1**
- x1**
- x2** **TURN PRODUCT**



# Assembly

**16** x2  
TURN PRODUCT

**17**  
TURN PRODUCT

**18**  
TURN PRODUCT

**19** x1  
TURN PRODUCT

**20**  
TURN PRODUCT

**21** x1  
TURN PRODUCT

**22** x1  
TURN PRODUCT

**23**  
TURN PRODUCT

**24**  
TURN PRODUCT

**25** x1  
TURN PRODUCT


**26** x1  
TURN PRODUCT

**27** x2  
TURN PRODUCT


**28**  
Place the labels exactly as shown in the illustrations. For best results, avoid repositioning a label once it has been applied.

**29**


## A Whole New Spin on Defying Gravity!

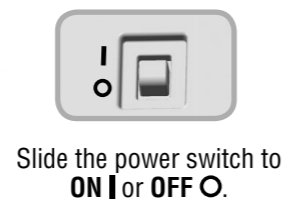

Slide the power switch to **ON** or **OFF**.

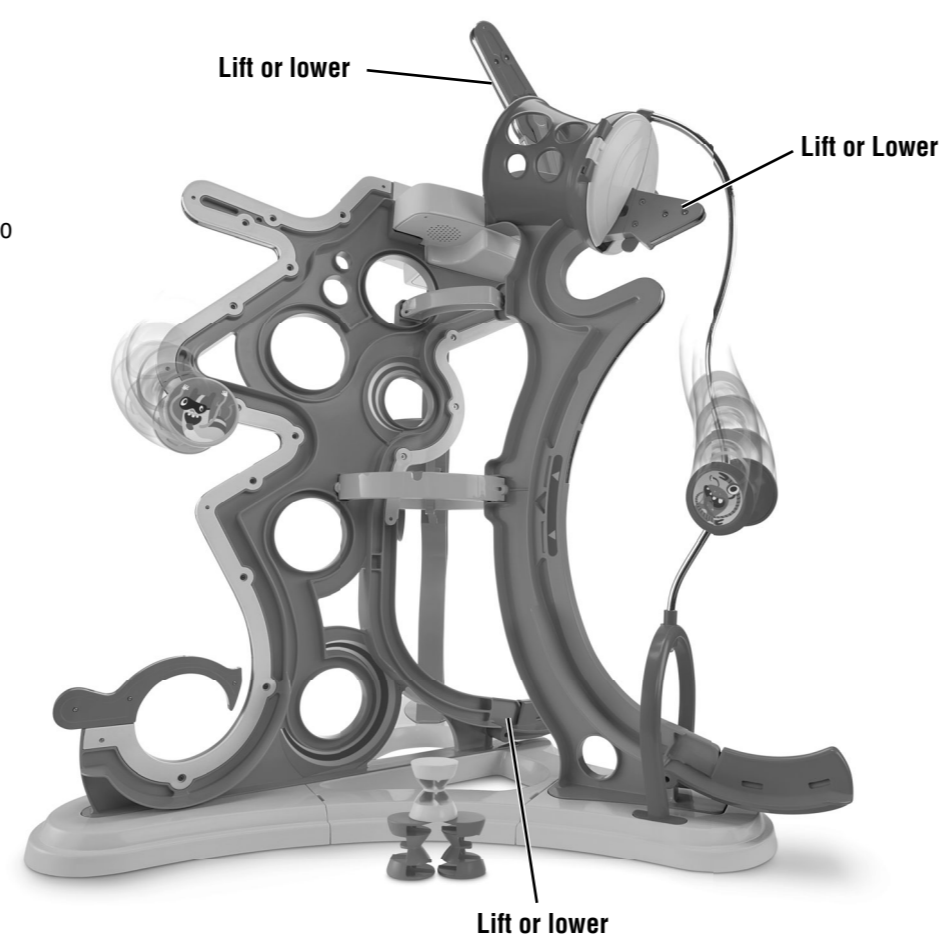

## Battery Installation

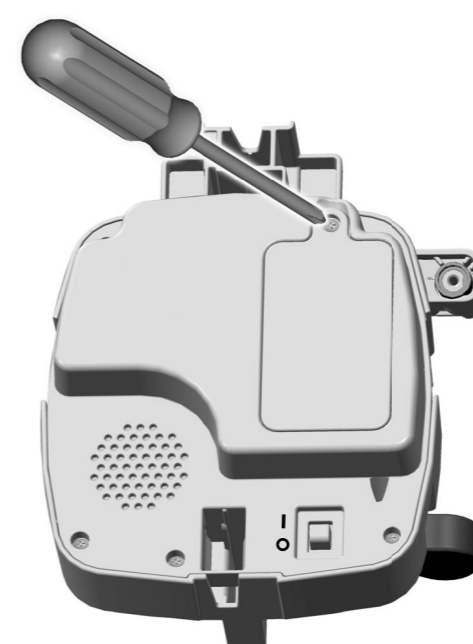

- For longer life, use **alkaline** batteries.
- Loosen the screw in the battery compartment door and remove the door.
- Insert two AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power switch off and then back on.
- When sounds become faint or stop, it's time for an adult to change the batteries.

Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

- Battery Safety Information**
- In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:
- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
  - Insert batteries as indicated inside the battery compartment.
  - Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
  - Never short-circuit the battery terminals.
  - Use only batteries of the same or equivalent type, as recommended.
  - Do not charge non-rechargeable batteries.
  - Remove rechargeable batteries from the product before charging.
  - If removable, rechargeable batteries are used, they are only to be charged under adult supervision.