



Keep this instruction sheet for future reference, as it contains important information.



Periodically wipe this toy with a clean, damp cloth.



EZPLAY

RAILWAY

DFJ45

Fisher-Price®

CONSUMER INFORMATION



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.


Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.


Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.




PARTS

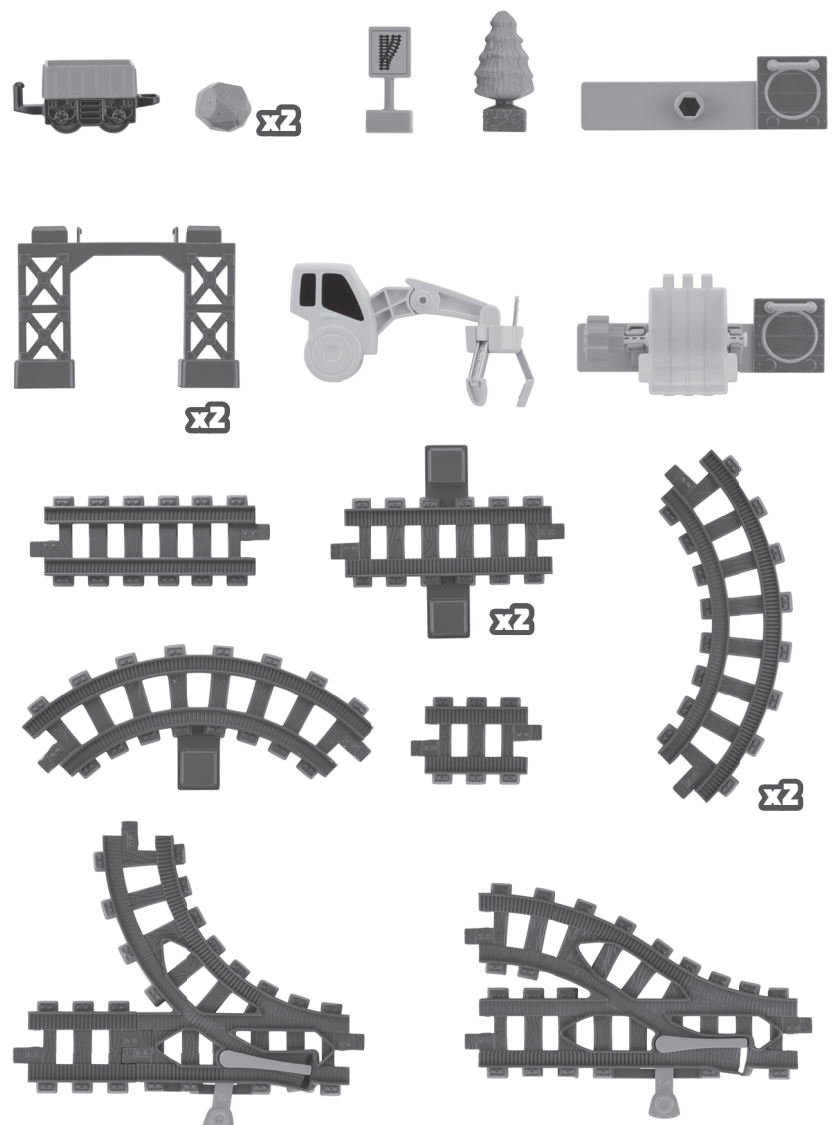





TRACK LAYOUT

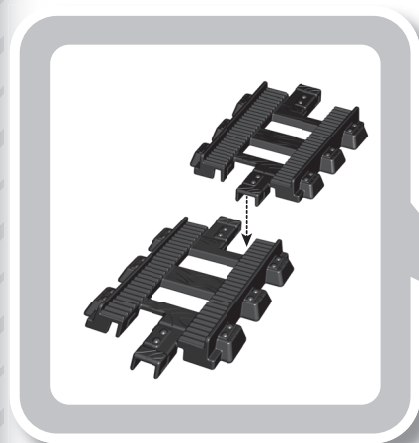

Press  to assemble track!

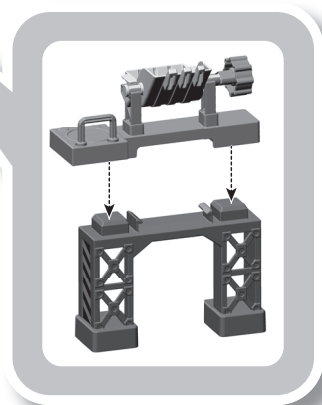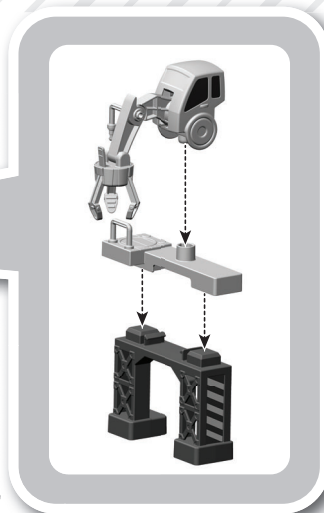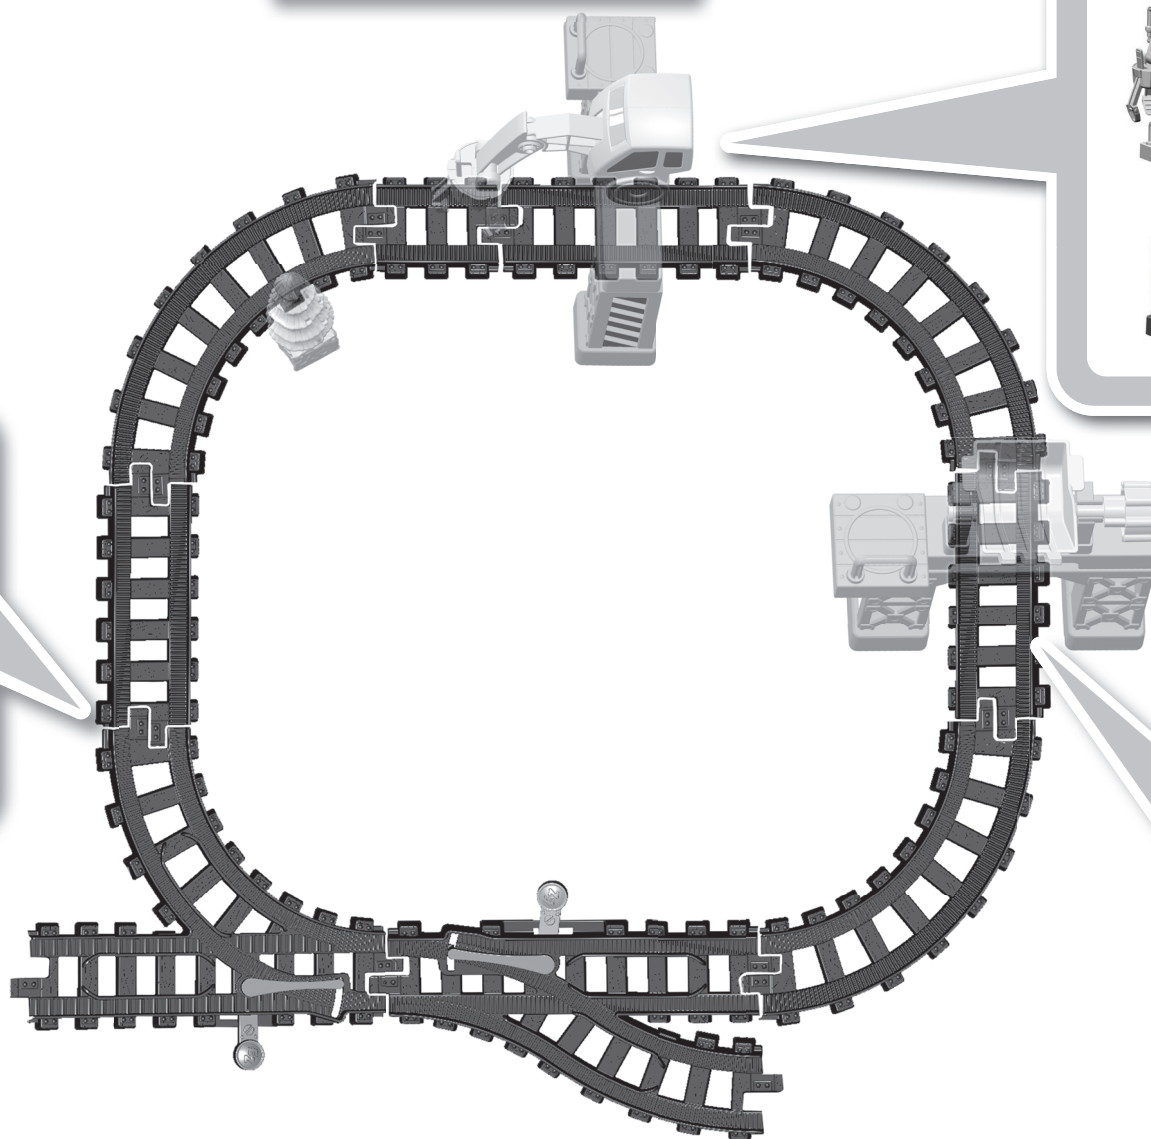

EZ to CONNECT with Other Sets!

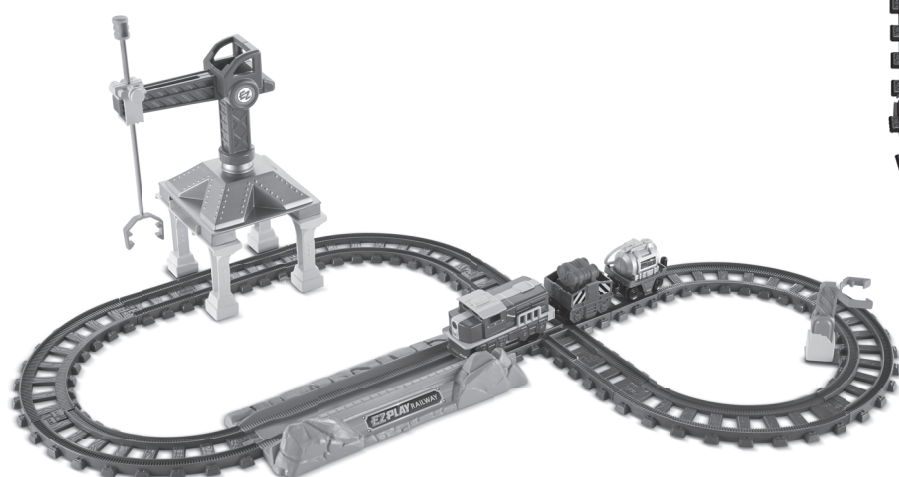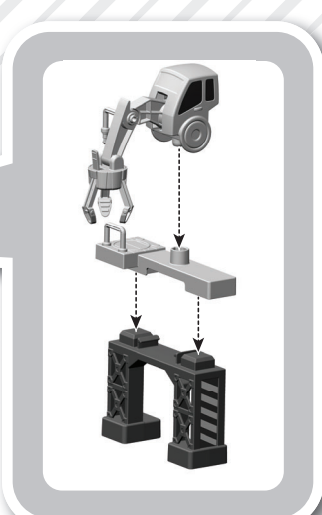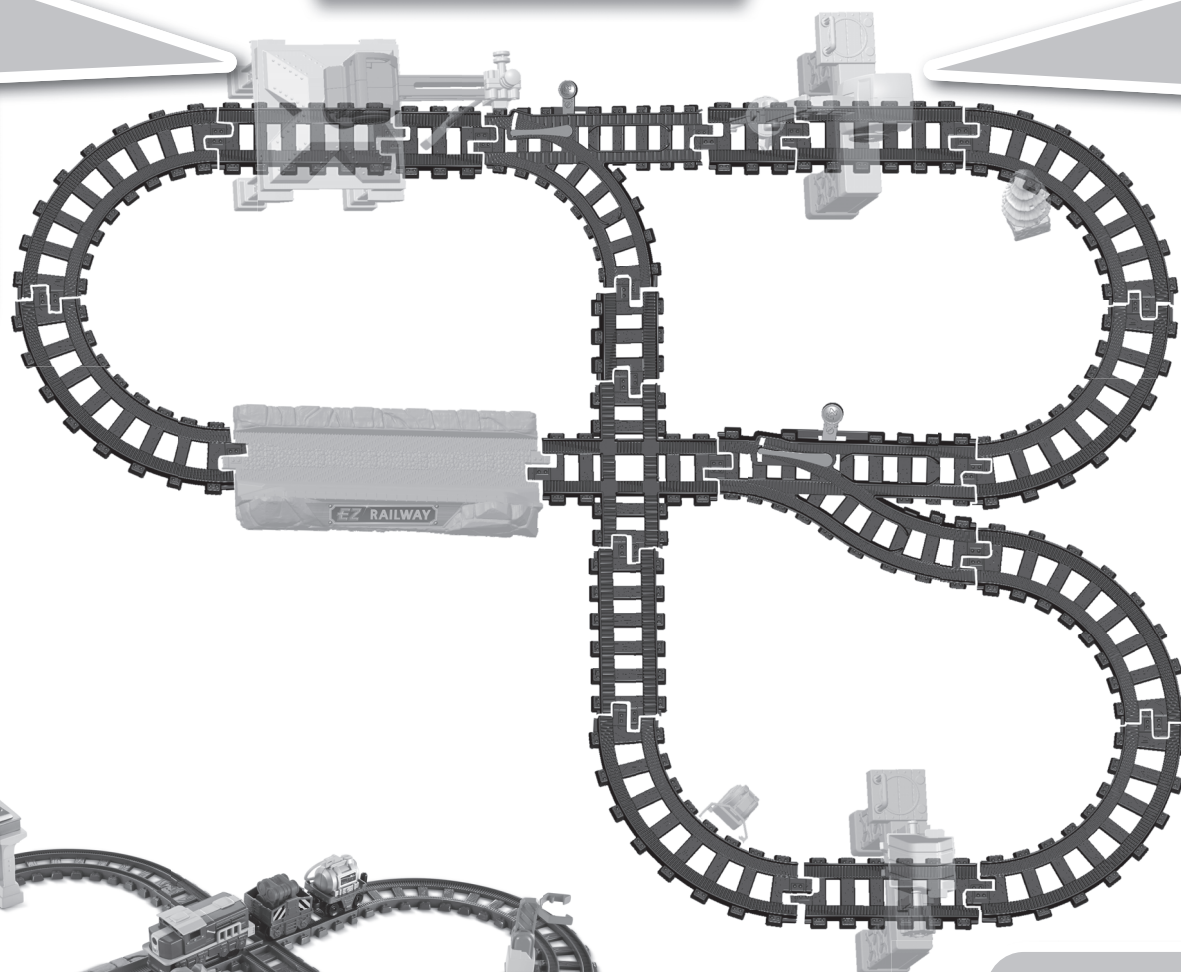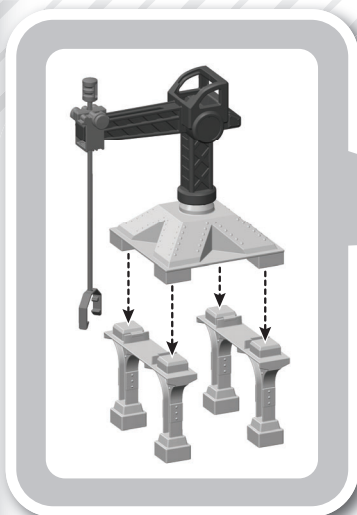

Add the **STARTER SET** (sold separately and subject to availability) ... to this set to create a larger track layout!

