

Fisher-Price®

## CONSUMER INFORMATION

## PARTS



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

**service.fisher-price.com**

**Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.**

**Outside the United States:**


Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)


Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.



New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

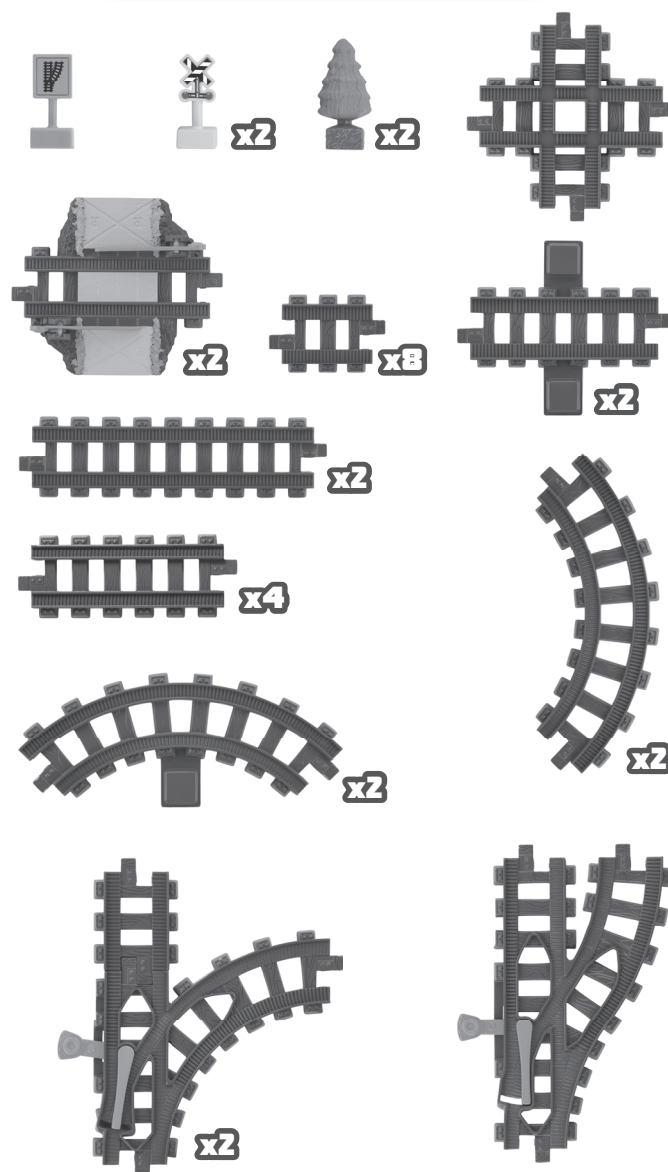






# **EZ to CONNECT** with Other Sets!

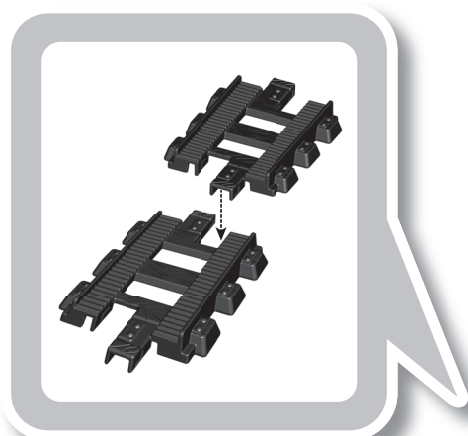

Press  to assemble track!

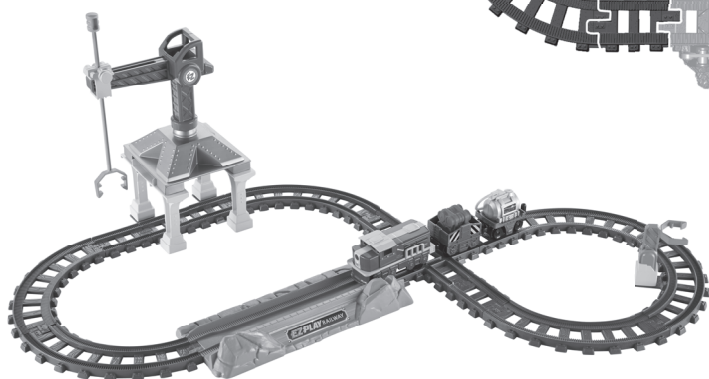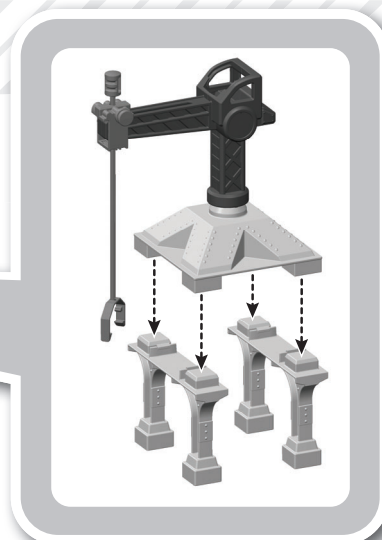

Add the **STARTER SET** (sold separately and subject to availability) ... to this set to create a larger track layout!

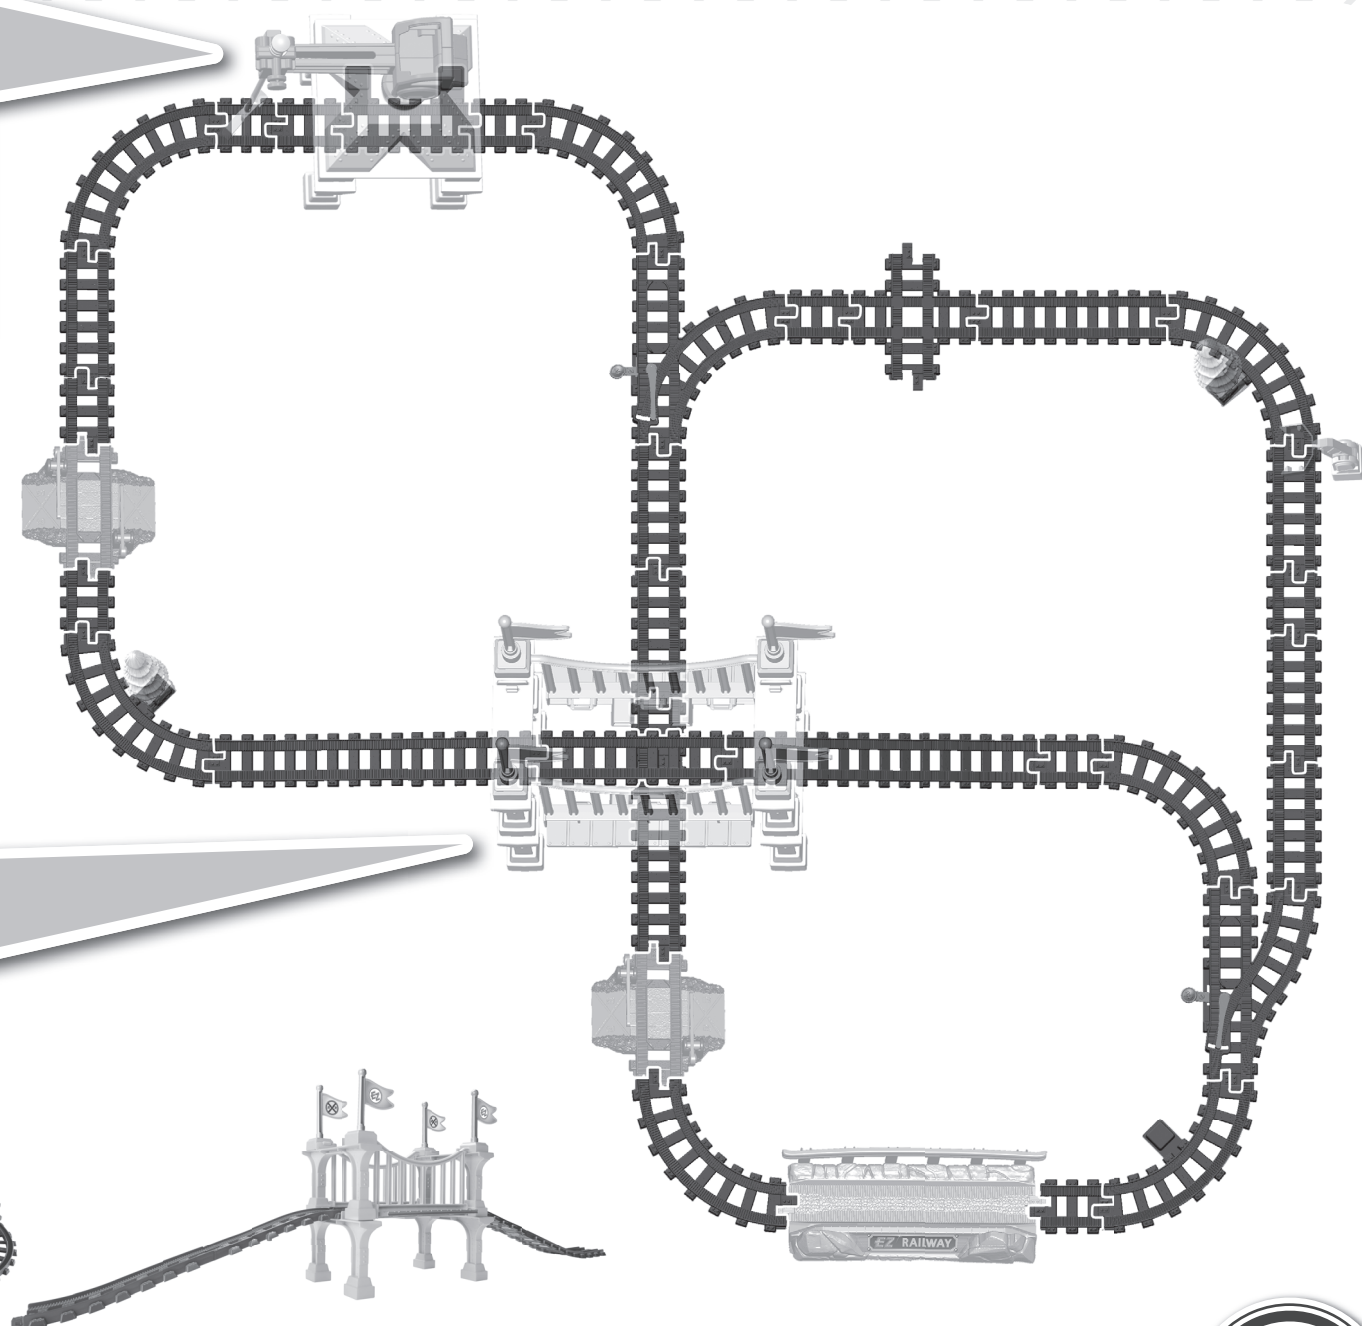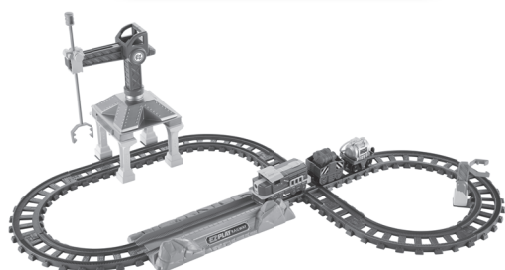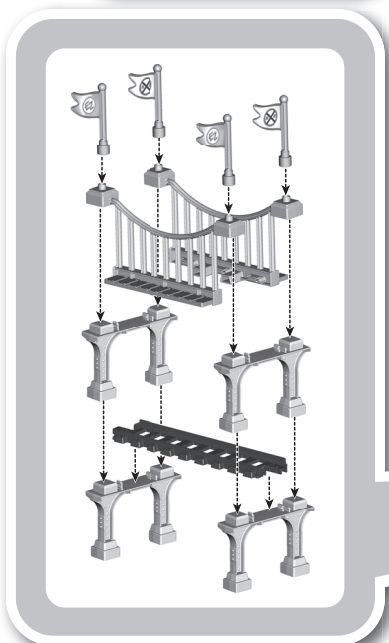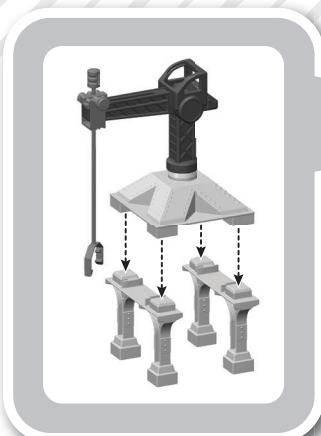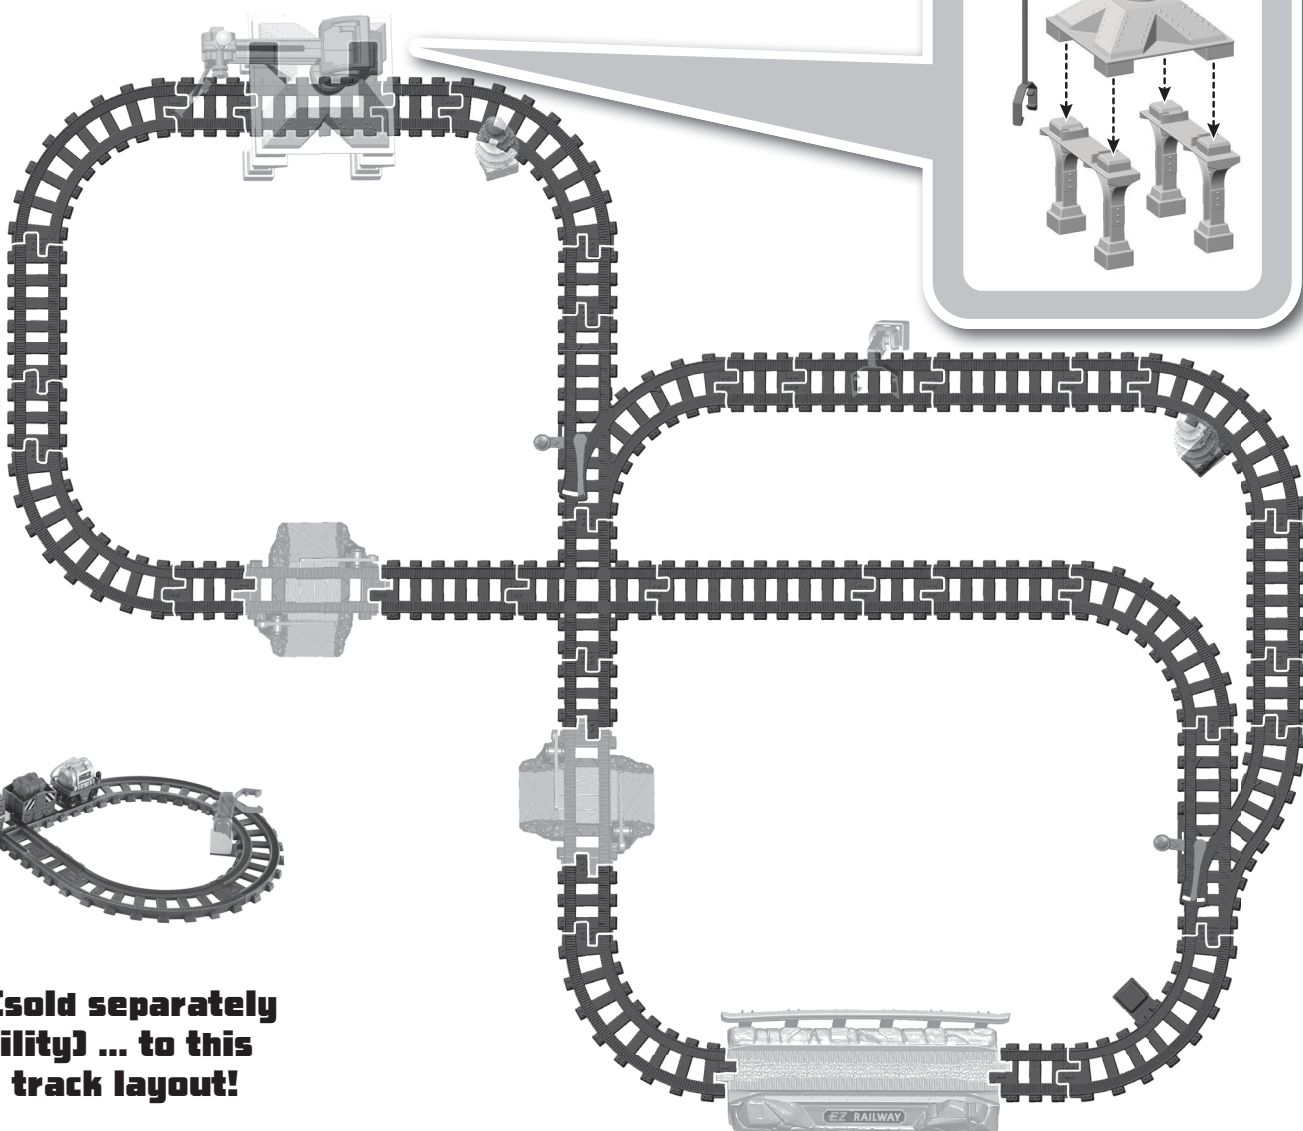

Add the **STARTER SET** and the **ELEVATION SET** (both sold separately and subject to availability) ... to this set to create a larger track layout!

