

**1** Lay & Play**2** Tummy Time**3** Sit & Drive**WARNING**

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

Keep these instructions for future reference, as they contain important information.
Adult assembly is required.

Requires three, AA (LR6) **alkaline** batteries (not included).

Tool required for battery installation: Phillips screwdriver (not included).

Consumer Information



CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)
1300 135 312 (Australia)

service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:

Canada: Mattel Canada Inc., 6155 Fremont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.

Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,
Albany 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

Care

- The mat is machine washable. Machine wash cold on the gentle cycle. Do not use bleach. Tumble dry on low heat.
- The arch assembly and toys are surface washable only. Wipe with a clean cloth dampened with a mild soap and water solution. Do not immerse.

FCC STATEMENT (UNITED STATES ONLY)

 
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Battery Installation

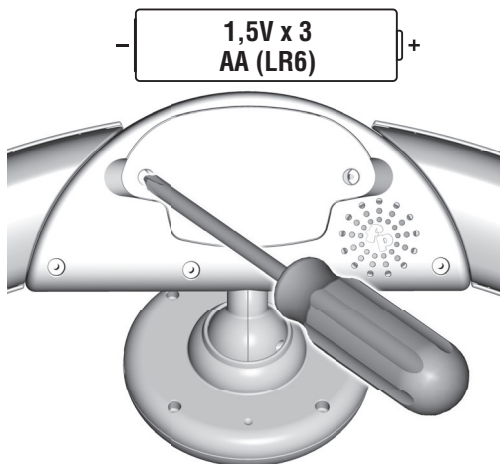

- For longer life, use **alkaline** batteries.
- Locate the battery compartment door on the arch.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three, AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sound becomes faint or stops, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2012/19/EU).

 
Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:


- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Power/Volume Switch





- Slide the power/volume switch on the electronic toy to ON with low volume ◀), ON with high volume ◀)) or OFF ○.

 Mode Switch




- Slide the mode switch to Lay & Play or Tummy Time or Sit & "Drive".

  Assembled Parts

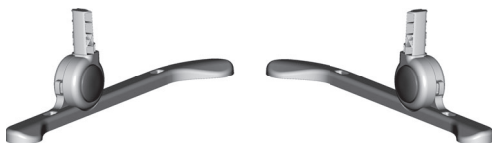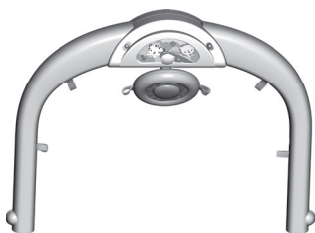


Permanent Assembly

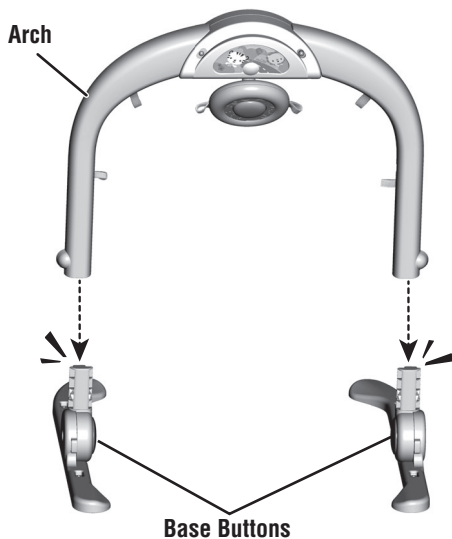 

- Position each base so that the button is inward.
- Insert and “snap” the ends of the arch into the socket in each base.

Hint: The arch is designed to fit the bases one way. If it does not seem to fit, turn the arch around and try again. Or, reposition the bases so that the button is inward.

 Assembly and Setup

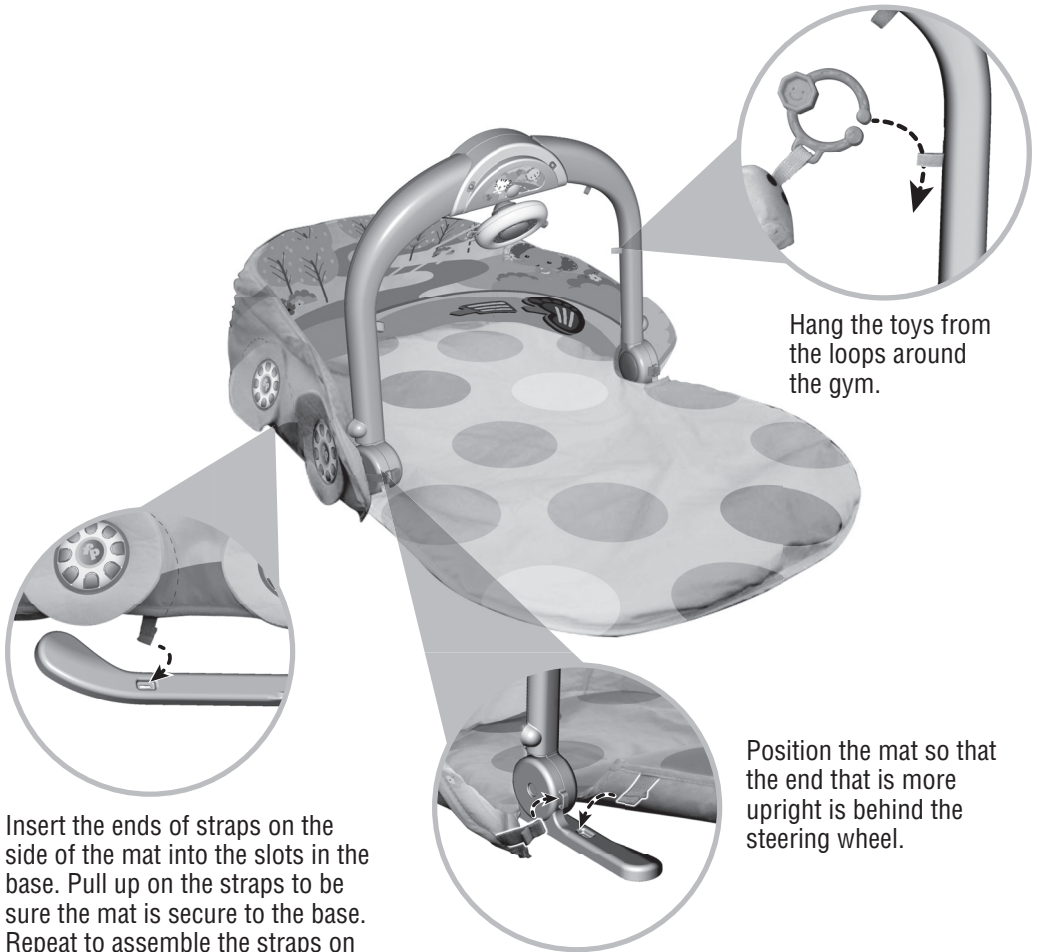

Hang the toys from the loops around the gym.

Insert the ends of straps on the side of the mat into the slots in the base. Pull up on the straps to be sure the mat is secure to the base. Repeat to assemble the straps on the other side of the mat to the base.

Position the mat so that the end that is more upright is behind the steering wheel.

Note: To machine wash the mat, from underneath the bases, push the straps up through the slots in the bases.

Grows with Baby!

Lift or Lower Arch



Press the buttons on the inside of the frame to lift or lower the arch for each mode.



1 Lay & Play



- While pressing the buttons, lift the arch to the highest position.
- Slide the mode switch on the upper arch to **Lay & Play** (baby icon).
- Listen to 30 minutes of music when baby bats toys hanging from the steering wheel.



2 Tummy Time



- While pressing the buttons, lower the arch to the lowest position.
- Slide the mode switch on the upper arch to **Tummy Time** (baby icon).
- Listen to sound effects and musical ditties when baby bats at the steering wheel.



3 Sit & Drive



- While pressing the buttons, lift or lower the arch to the middle position.
- Slide the mode switch on the upper arch to **Sit & "Drive"** (baby icon).
- Listen to lively music and sound effects when baby bats at the steering wheel. Press the horn, "beep-beep"!