


1

Crib Mobile

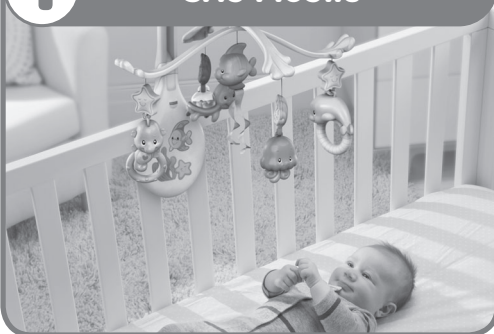

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires three AA (LR6) **alkaline** batteries (not included).
- Adult assembly is required.
- Tool required for battery installation: Phillips screwdriver (not included).
- Use as a mobile from birth until 5 months.
- A mobile is intended for visual stimulation and not to be grasped by a child.
- Wipe this toy with a clean, damp cloth. Do not immerse this toy.

2

Take-along Music




3


Removable Toys




Parts

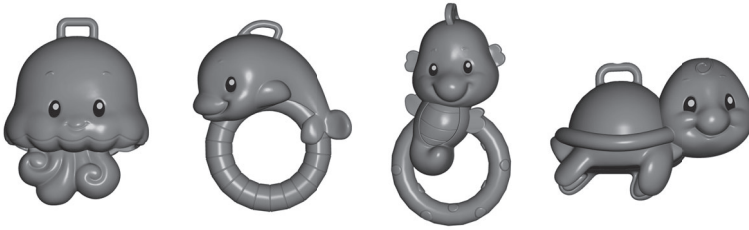

4 Removable Toys

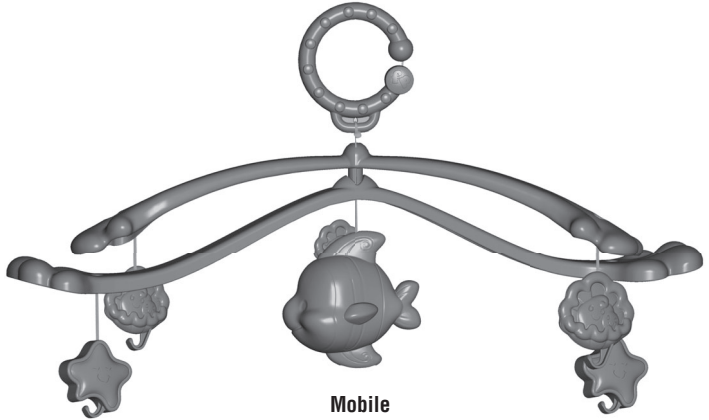


Mobile

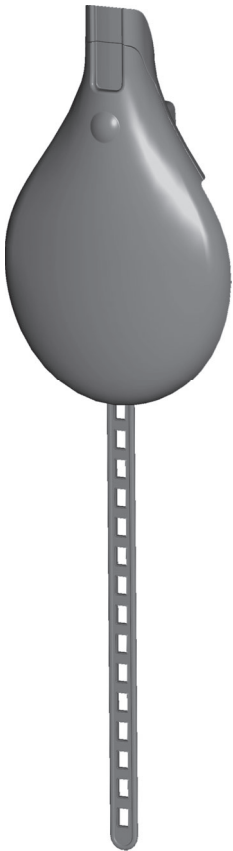

Mobile Base




Musical Seahorse

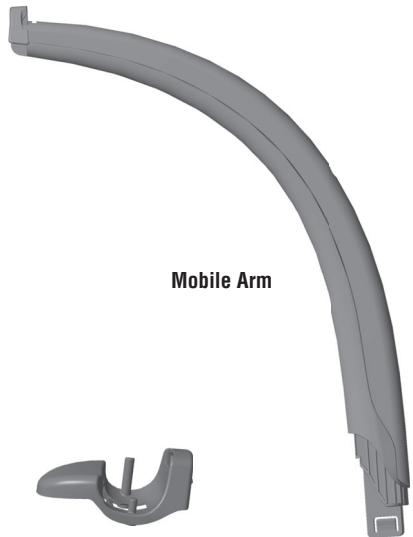


Mobile Arm

Mobile Clip

Crib Mobile Assembly

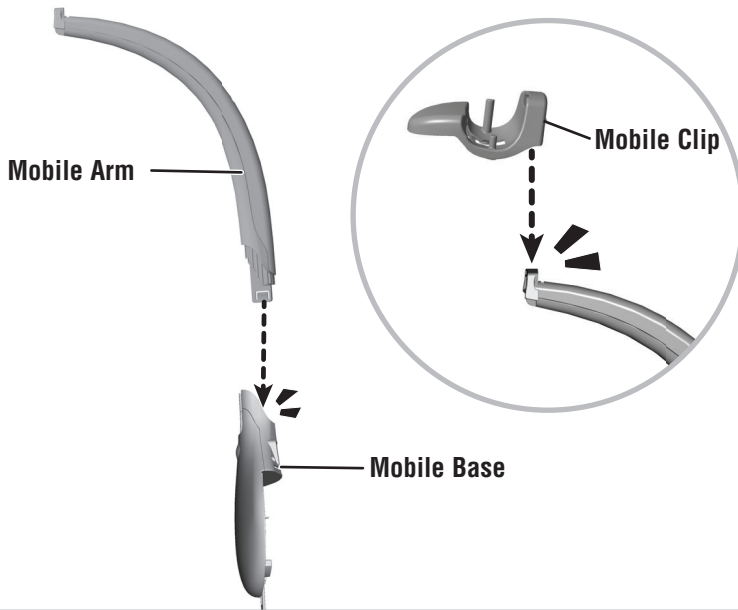


-
- Insert and “**snap**” the mobile arm into the mobile base.
 - Fit the mobile clip onto the end of the mobile arm and “**snap**” into place.

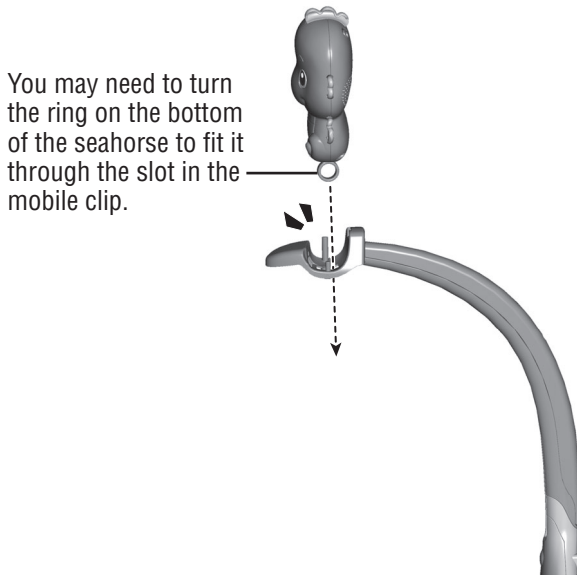

-
- Fit the seahorse onto the mobile clip.
 - Push to “**snap**” the seahorse into place.

Note: For proper function, please be sure the seahorse “**snaps**” into place.

Crib Mobile Assembly

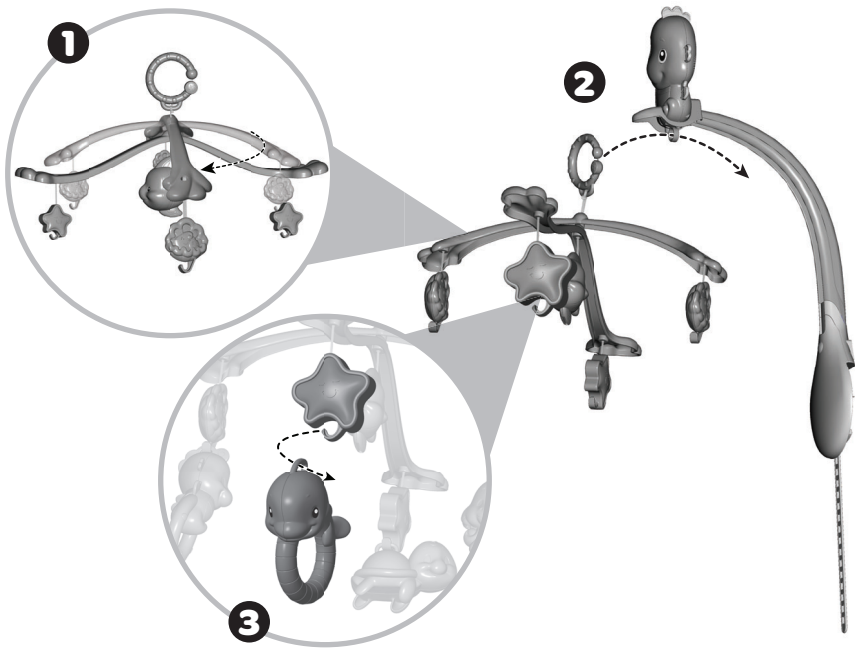


-
- Turn the upper mobile bar and lower into place **1**.
 - Attach the mobile link to the ring on the seahorse **2**.
 - Fit a removable toy to the hook on a mobile toy **3**. Repeat to attach the other removable toys.

Seahorse Battery Installation



For longer life, use
alkaline batteries.

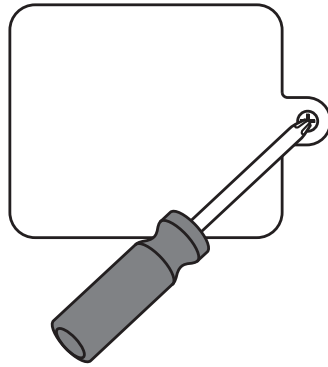

- Loosen the screw in the battery compartment door and remove the door.
- Insert three AA (LR6) **alkaline** batteries.
- Replace the battery compartment door and tighten the screw. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and back on.
- When sounds/motion become faint or stop, it's time for an adult to change the batteries.
-  Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Crib Mobile Attachment




WARNING


Prevent Entanglement Injury Crib Mobile Use

- Keep out of baby's reach.
- Remove mobile from crib or playpen when baby begins to push up on hands and knees.
- This product may not attach to all crib designs. Do not add additional strings or straps to attach to a crib or playpen.

IMPORTANT! Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Do not add additional strings or straps to attach to a crib. Check frequently. When used as a mobile, this product is not intended to be attached to a playpen.

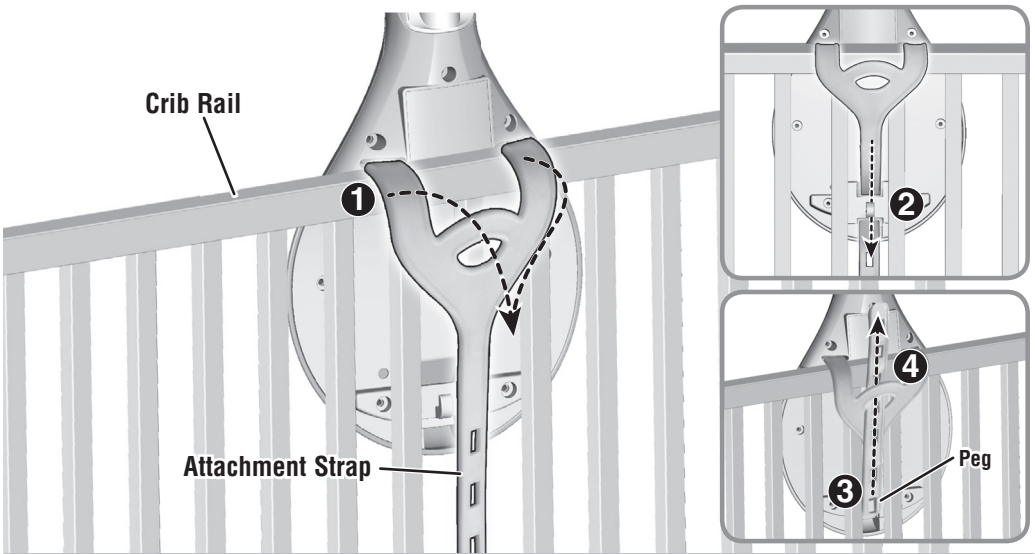


Crib Mobile Attachment

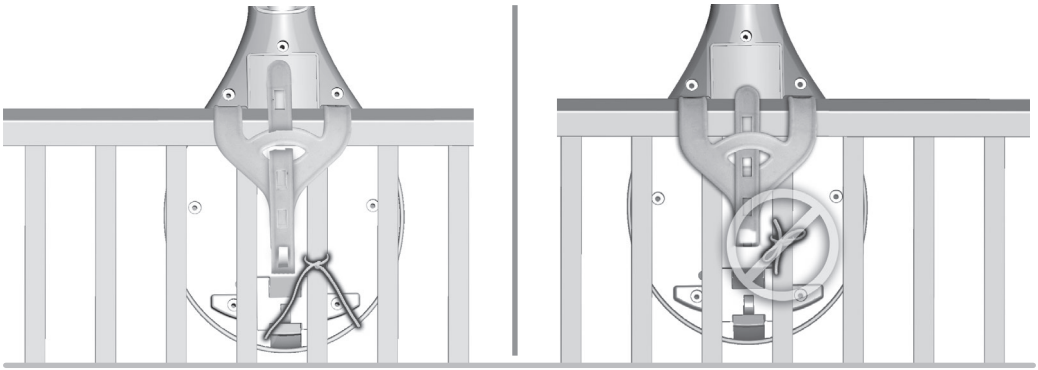

- Tie the mobile's strings to a crib spindle.

Note: It is better to tie the strings in a knot than a bow, since a bow may be easily untied.

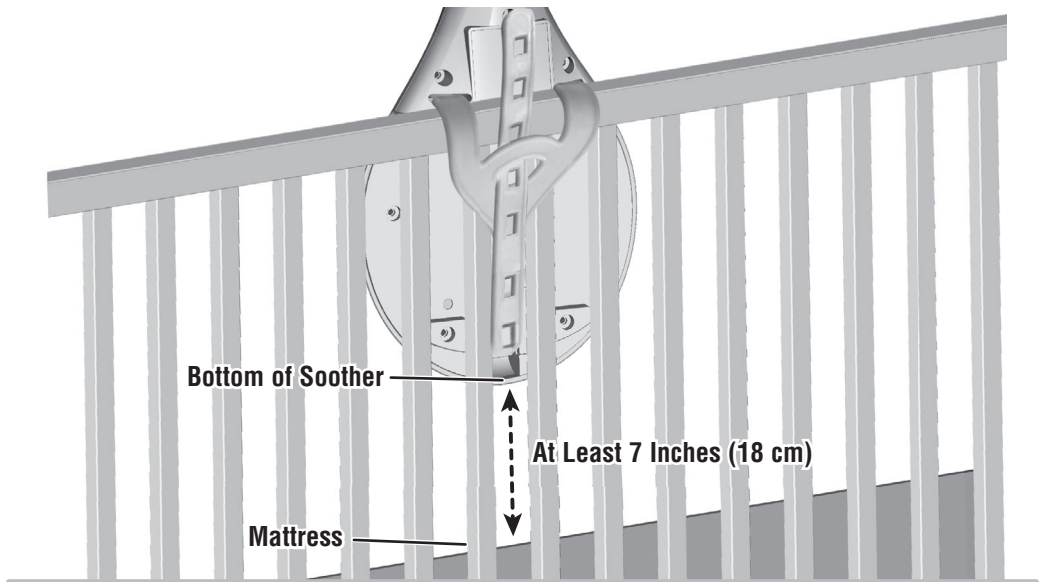


- Make sure the distance between the bottom of the mobile base and the crib mattress is **at least 7 inches (18 cm)**.
- If the distance is less than 7 inches (18 cm): readjust the attachment strap to lift the toy; or lower the crib mattress.

Crib Mobile



Power/Volume Switch


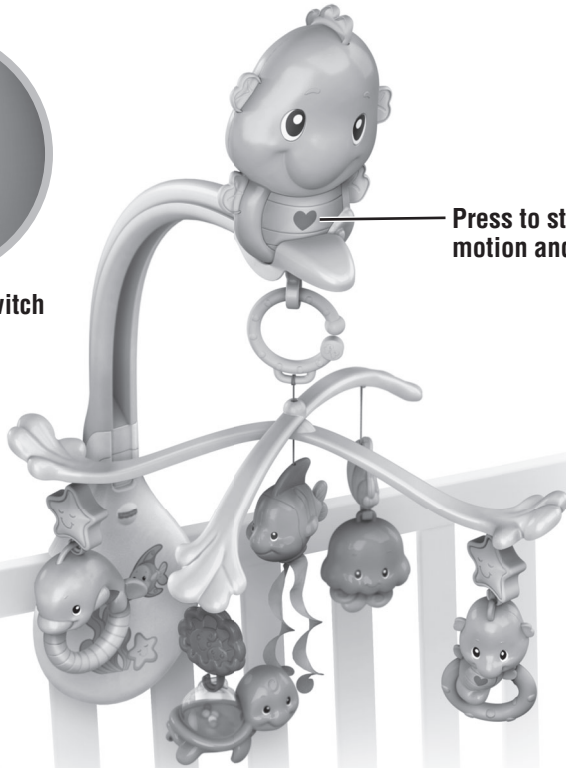


Press to start motion and music.

- Slide the power/volume switch to ON with low volume , ON with high volume  or OFF .
- Press the button on the seahorse.
 - Music plays for approximately 20 minutes.
 - Mobile turns for approximately 12 minutes.
 - Press the button again to restart!


Hint: When the seahorse is attached to the mobile clip, it is automatically in long play mode. There is no short play mode when used as a crib mobile.

Take Along Music

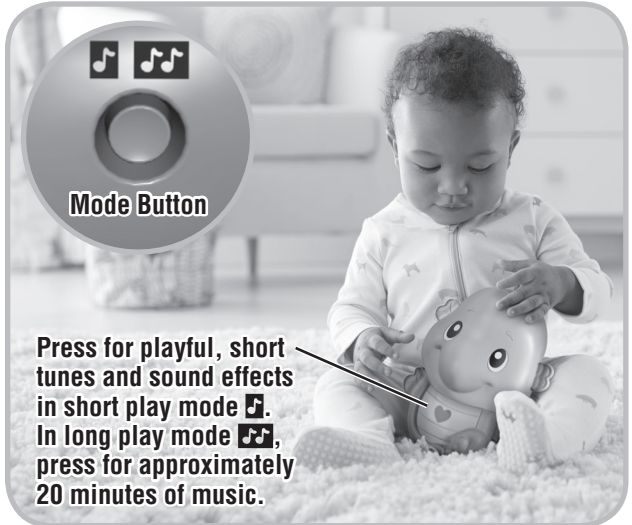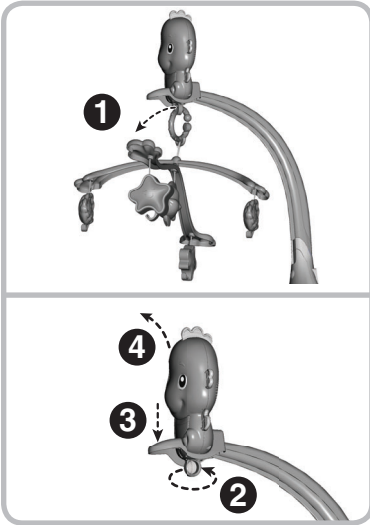

- Remove the mobile from the crib.
 - Remove the mobile toys from the seahorse ①.
 - Turn the ring on the bottom of the seahorse ②. While pressing the mobile clip ③, lift to remove the seahorse ④.
 - Choose a mode. Press the mode button once for long play ; press again for short play .
- Hint:** When used as a take-along toy, the seahorse will default to short play  mode.

Removable Toys

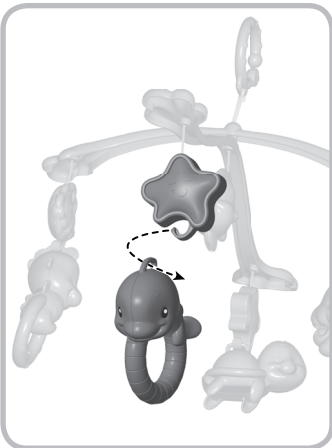

- Unhook the removable toys from the hook on the mobile toys.

Consumer Information

**CONSUMER ASSISTANCE**
1-800-432-5437 (US & Canada)
1300 135 312 (Australia)
service.fisher-price.com

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd.,
Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park,
Maidenhead SL6 4UB. Helpline: 01628 500303.
www.service.mattel.com/uk
Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street,
Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive,
Auckland 1331, Auckland.

CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.